



HARD TOP STORAGE BOXES

(2021-2023+ BRONCO)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Front Storage Box
- (1) RH Front Storage Box
- (1) LH Rear Storage Box
- (1) RH Rear Storage Box


TOOLS REQUIRED

- T-50 Torx Socket
- Ratchet



STEP 1

Remove (4) T-50 Torx bolts from the vehicle hard top.

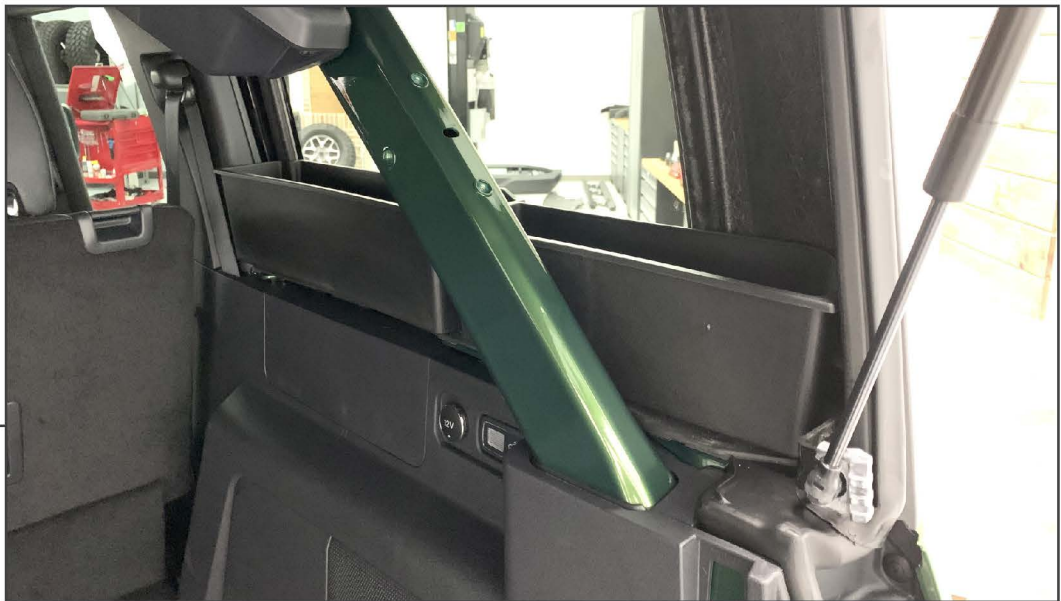

STEP 2

Locate the indicator on the bottom of each storage box. Once identified, fit the storage boxes to the vehicle. The longer storage box will fit towards the front of the vehicle. Secure each storage box using the original (4) T-50 Torx bolts, tighten until secure.

Repeat steps 1-2 for the opposite side of the vehicle. Installation is now complete.