



MUD GUARDS

(2021-2023+ BRONCO - EXCLUDING SASQUATCH & RAPTOR)
(NOT COMPATIBLE WITH OEM SIDE STEPS OR ROCK RAILS)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Front Mud Guard
- (1) RH Front Mud Guard
- (1) LH Rear Mud Guard
- (1) RH Rear Mud Guard
- (4) Large Plastic Push Clips
- (2) Small Plastic Push Clips
- (10) Large Phillips Screws
- (2) Small Phillips Screws
- (2) Flat Washers
- (2) Screw Clips
- (6) Metal Clamps

TOOLS REQUIRED

- Power Drill
- 1/4" Drill Bit
- Phillips Drill Bit
- Phillips Screwdriver
- Panel Removal Tool

SKU # FB27458
Edited: 03/03/2023

STEP 1 (FRONT)




Turn the vehicle wheels to access the fender hardware. Locate the (2) Phillips head plastic clips in the inner fender liner. Using a Phillips screwdriver and a panel removal tool, remove the (2) plastic clips.

STEP 2



Fit (2) screw clip to the vehicle fender liner.

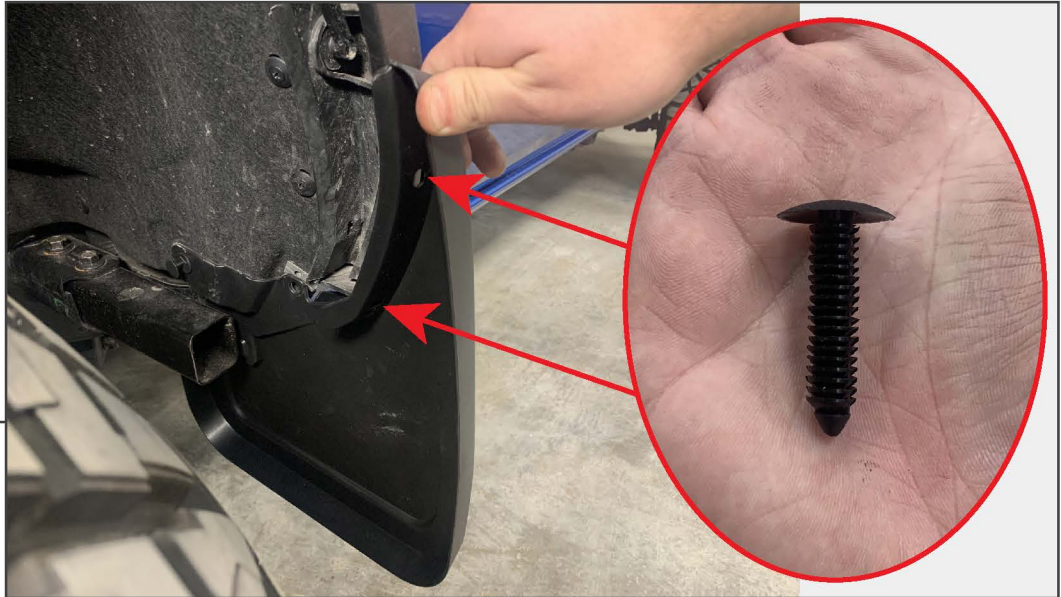

STEP 3

Insert (1) small plastic push clip into the inner-most mud guard hole to properly align the mud guard to the vehicle. Using a marker, mark on holes aligning to the fender flare. Once marked, remove the mud guard. Drill the (2) fender flare holes using a 1/4" drill bit.

With the holes drilled, re-align the mud guard and fit (2) large plastic push clips into the drilled holes.



STEP 4

Secure the mud guard to the fender liner using (1) small Phillips screw and (1) flat washer into the previously installed screw clip. Then, insert (1) small plastic push clip into the inner-most mud guard hole into the vehicle fender liner.



STEP 5

Secure the bottom of the mud guard to the inner fender liner using (1) metal clamp. Secure the outer lip of the mud guard to the fender flare lip using (2) metal clips.



STEP 6 (REAR)

Align the rear mud guard to the vehicle, and use a marker to mark the (5) holes onto the vehicle bumper.



STEP 7

Using the (5) large Phillips screws, secure the mud guard to the vehicle rear bumper.

Repeat steps 1-6 to the opposite side of the vehicle, installation is now complete.