



DOOR MOUNTED STORAGE COMPARTMENT AND POCKET KIT

(2021-2023+ BRONCO)


INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Door Compartment
- (1) LH Door Pocket
- (1) RH Door Compartment
- (1) RH Door Pocket

TOOLS REQUIRED

- T-30 Torx Socket
- Ratchet
- Interior Detailer
- Microfiber Cloth

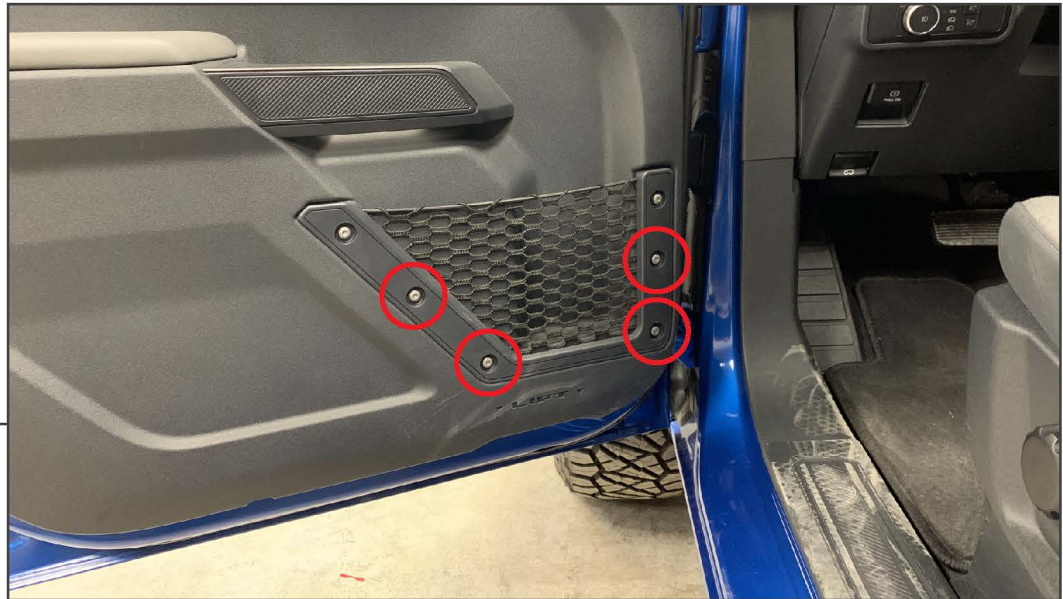


STEP 1

Remove (4) T-30 Torx bolts from the vehicle door storage net.



STEP 2

Align the door storage compartment to the vehicle door, and secure into place re-using the (4) T-30 Torx bolts.

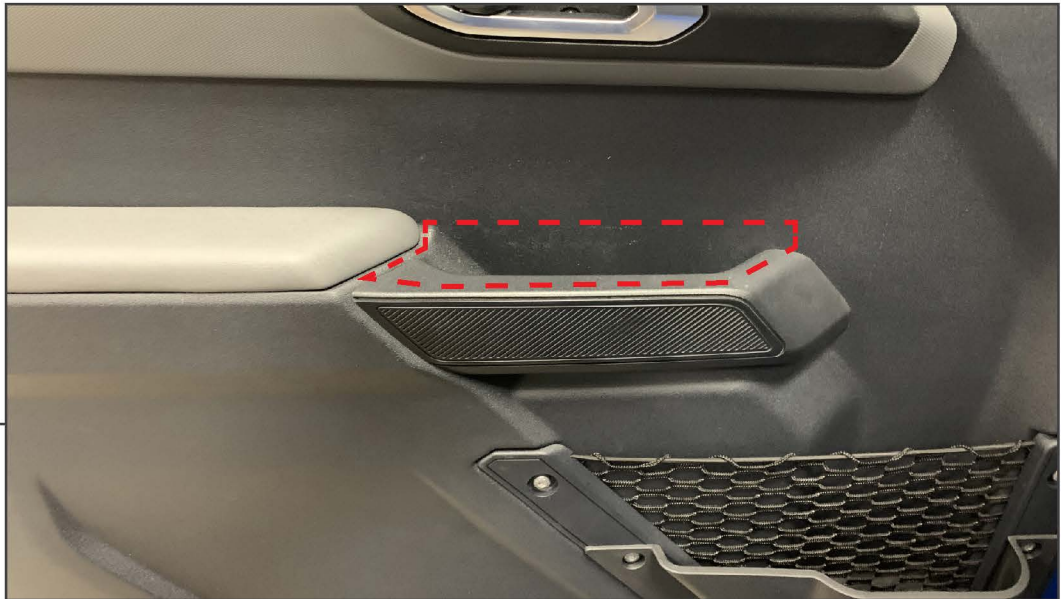

STEP 3

Clean the vehicle door grab handle using interior detailer and a microfiber cloth. Identify each side door pocket.



STEP 4

Press the door pocket into the vehicle door grab handle until fully seated.

Repeat steps 1-4 to the opposite side of the vehicle. Installation is now complete.