



REAR GRAB HANDLE SET

(2021-2023+ BRONCO - 4 DOOR)

INSTALLATION INSTRUCTIONS


CONTENTS

- (2) Grab Handle
- (2) Cylindrical Spacers
- (2) Concave Spacers
- (4) M6 Allen Bolts

TOOLS REQUIRED


- 5mm Allen Key (Provided)
- 8mm Socket
- Ratchet

STEP 1

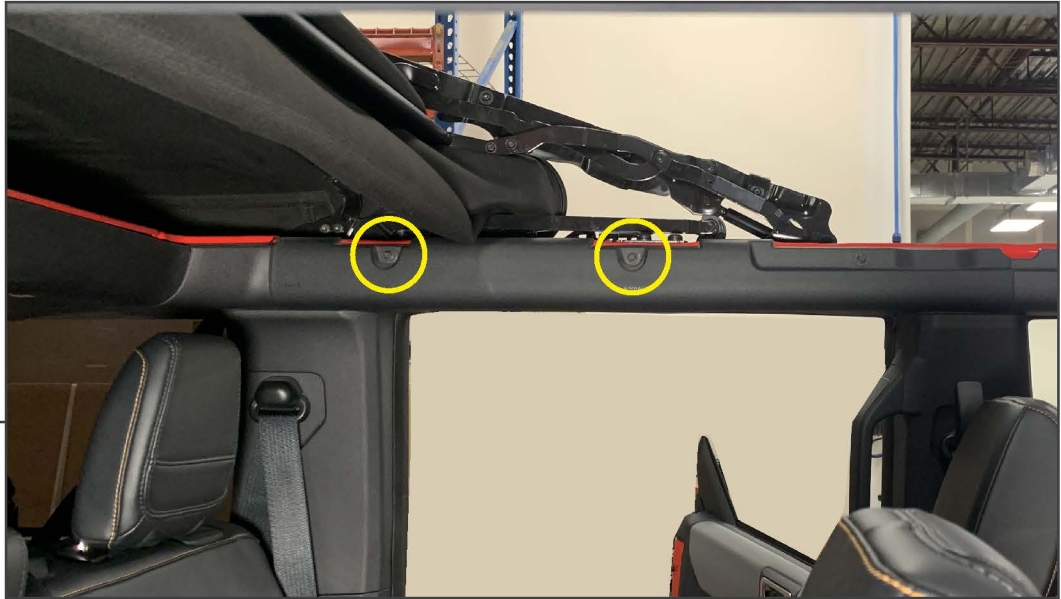

Remove (2) 8mm bolts from the vehicle roll bar above the rear seats.

STEP 2

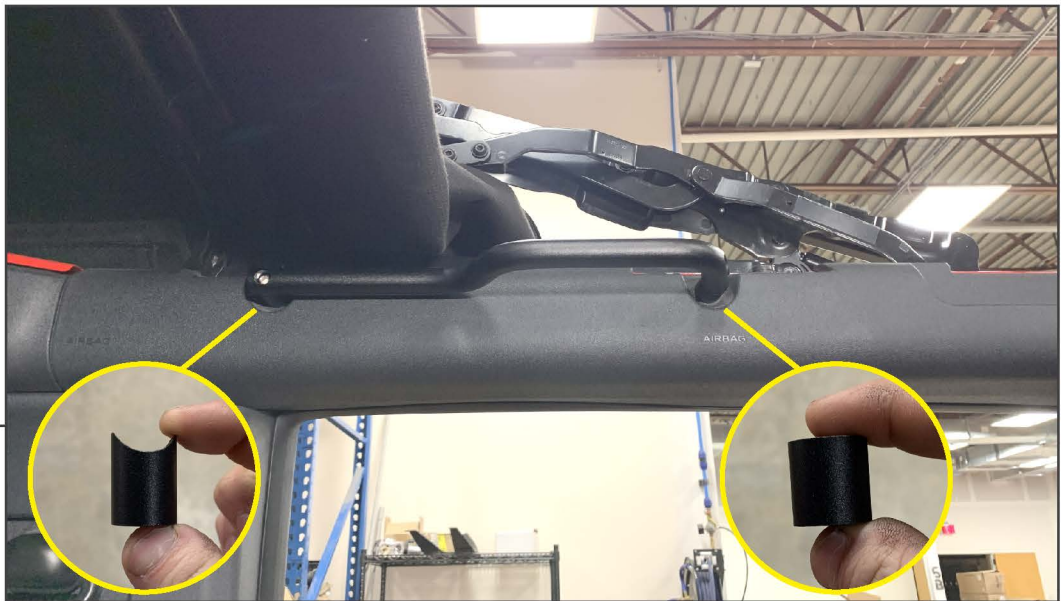

Using the (1) concave spacer and (1) cylindrical spacer, align the grab handle to the vehicle. Secure the grab handle to the vehicle using (2) M6 Allen bolts into the original vehicle bolt holes.

Note: The grab handle can be installed with the handle portion being towards the front or rear of the vehicle. The spacers must be installed to accommodate the desired orientation. See the photo to determine the spacer location in relation to the grab handle.



STEP 3

Ensure the M6 Allen bolts are tight, then repeat steps 1-3 for the opposite side of the vehicle.

Installation is now complete.