


# TOMAHAWK GRILLE

SKU # AMFMEA00106

## Product Installation Instructions


Fits 21-23 Ford Bronco

### STEP 1

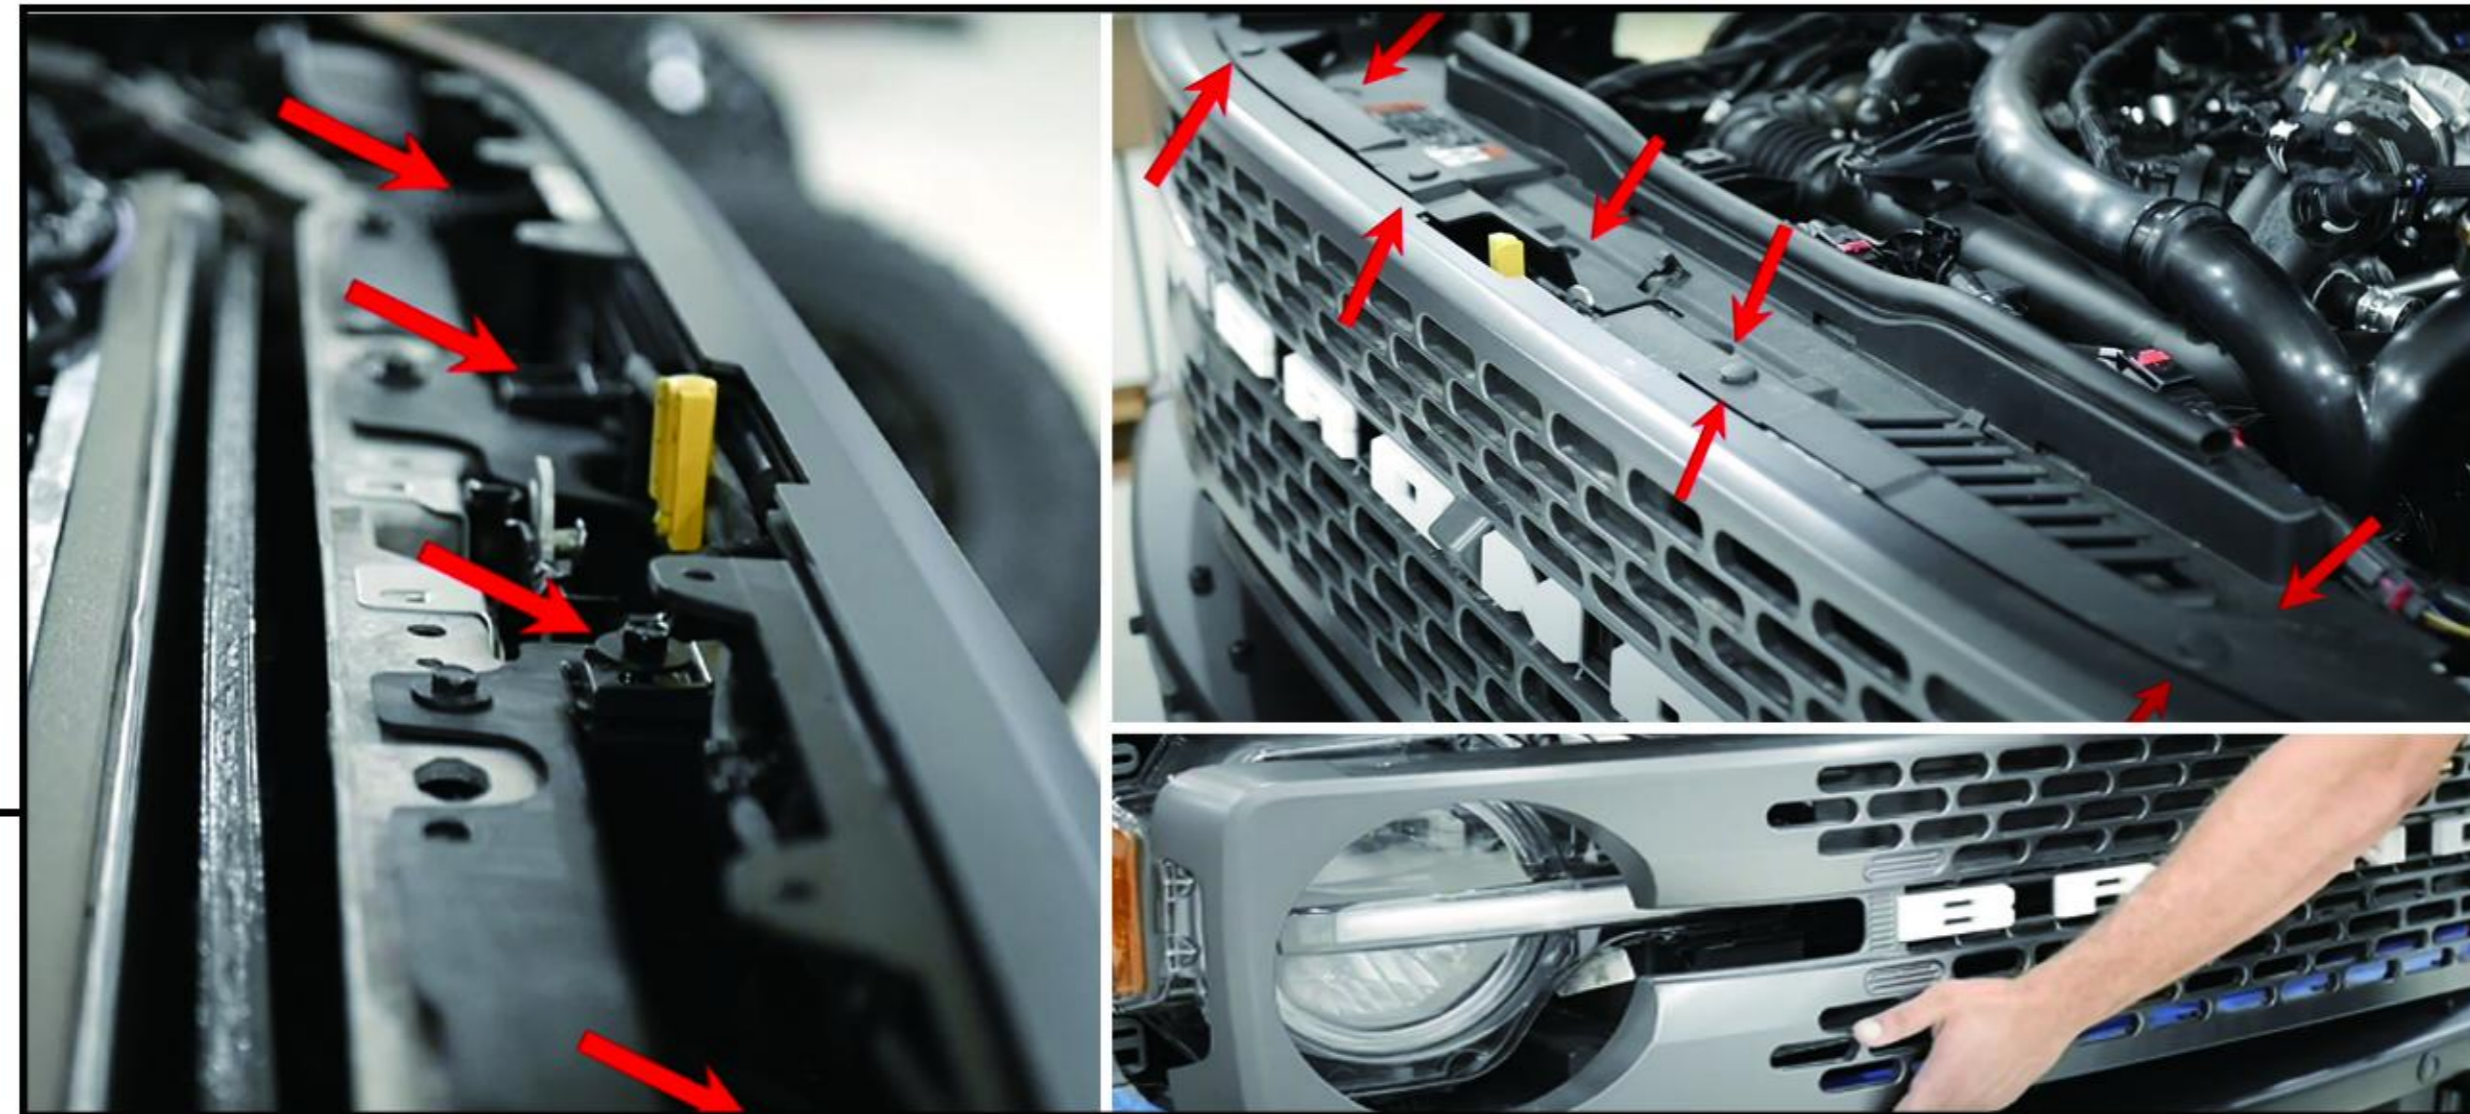

Remove the 8 clips and remove the cover panel.  
Remove the 4 screws, unplug the wire harness and pull the original grille from the vehicle.

### STEP 2

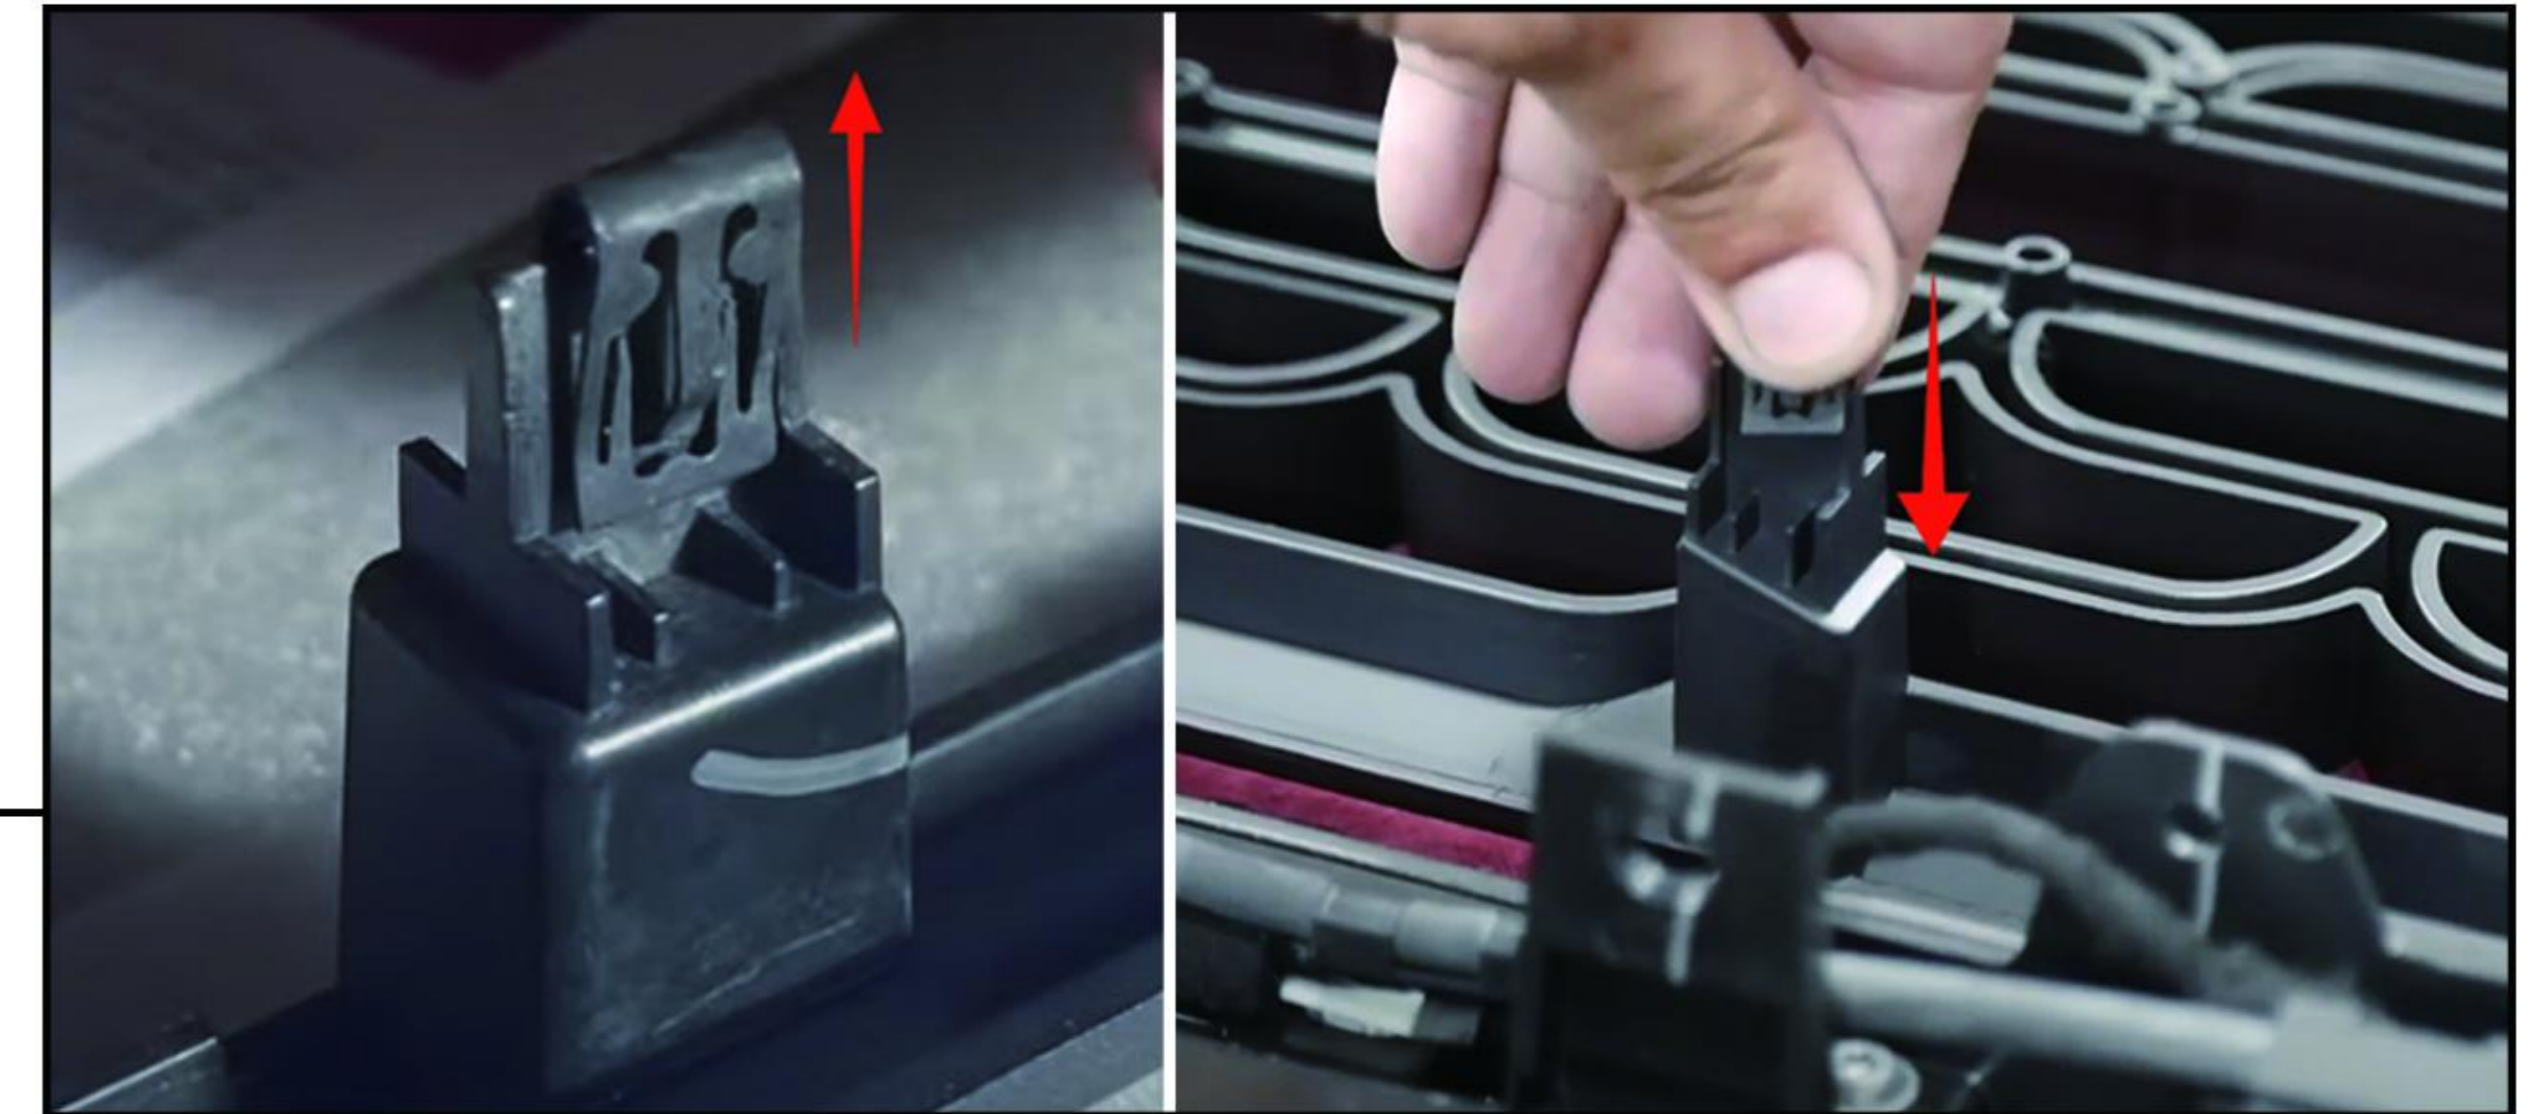


Remove the 12 clips from the back of the OEM grille and transfer them to the new grille.



### STEP 3

Remove this bracket from the original grille and transfer it to the new grille.

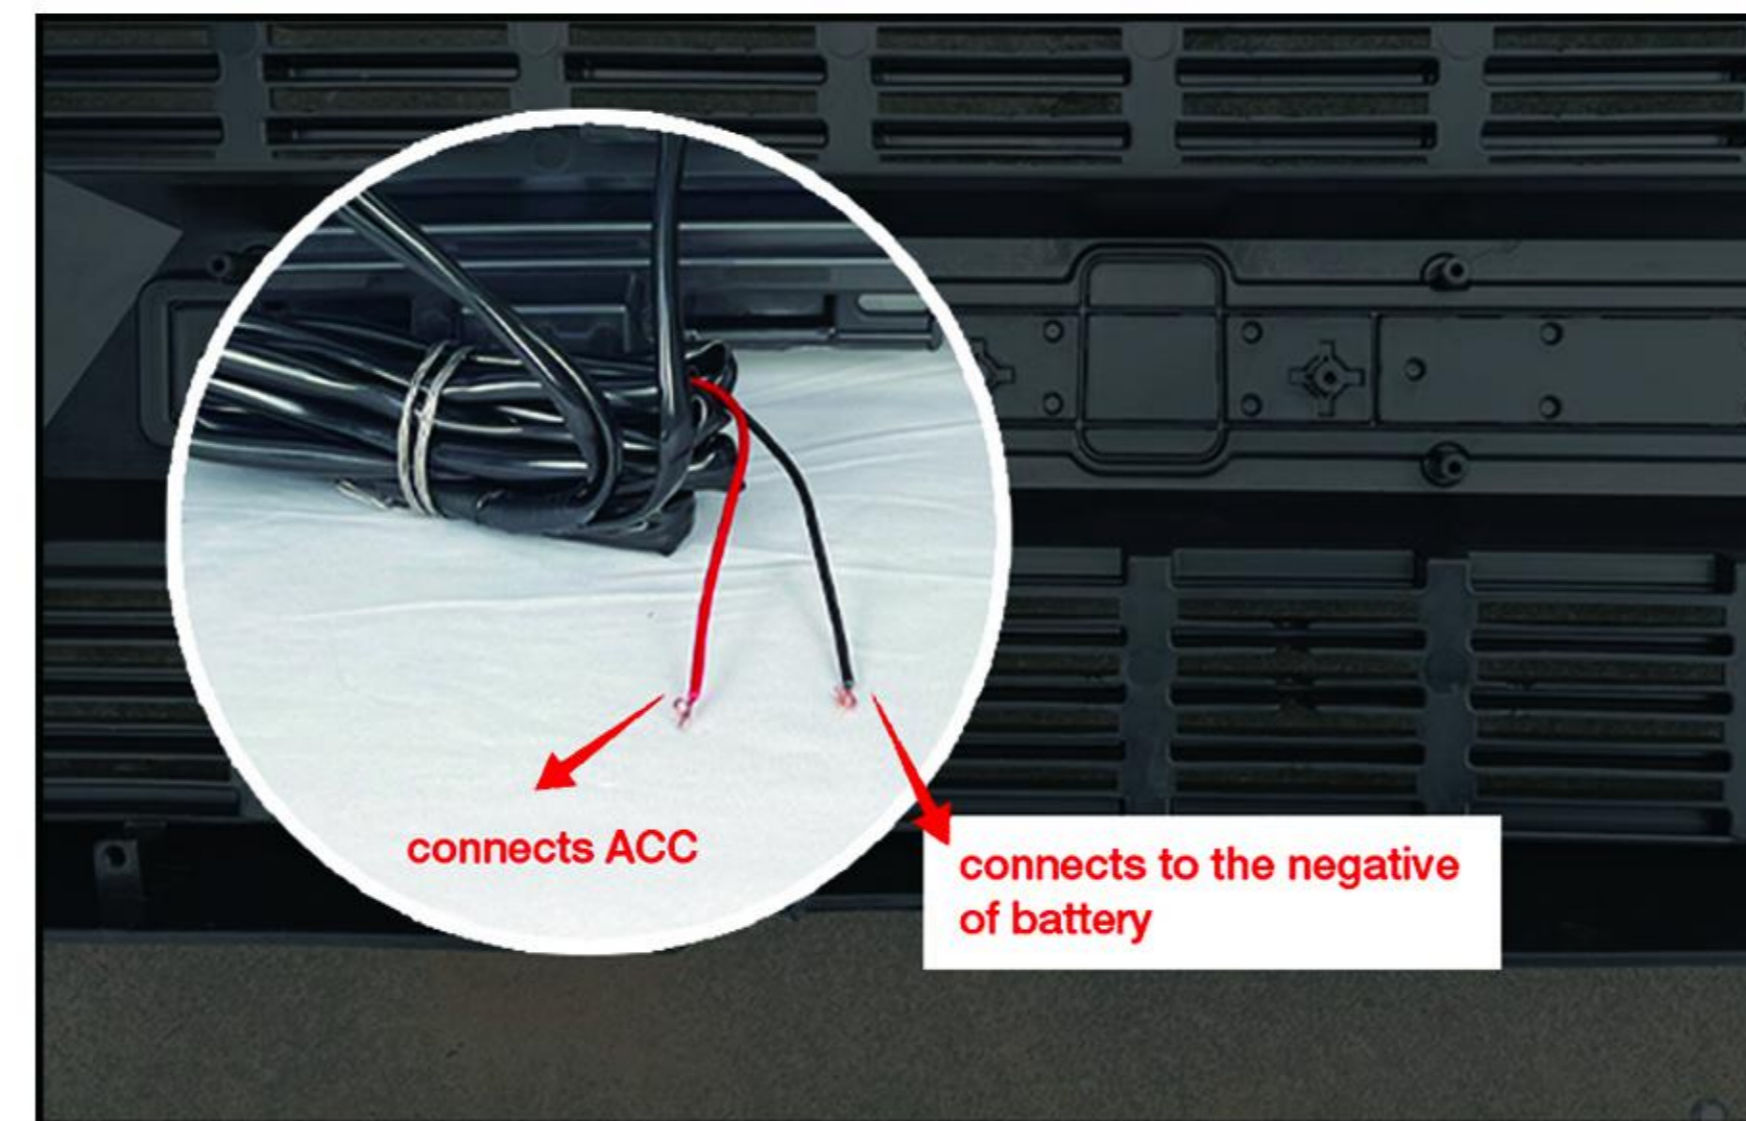

### STEP 4

The red wire connects to the ACC, the black wire connects to the negative of battery.



### STEP 5

Fix all the bolts and clips and finish installation of new grille.