



# REAR WINDOW DEFROSTER COVERS

(2021-2023+ BRONCO - WITH OEM HARD TOP)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---


(2) Rear Defroster Covers  
(2) Adhesion Promoter Pads  
(2) Alcohol Prep Pads

### TOOLS REQUIRED

---

N/A

## STEP 1

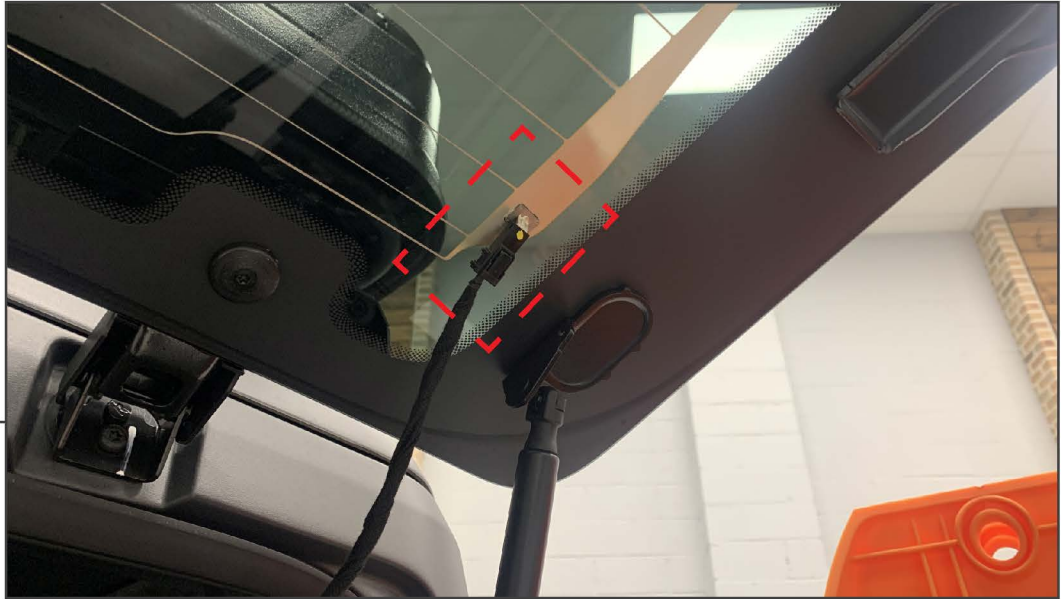

Open the vehicle rear window. Clean the area around the defroster connector using the included alcohol prep pad first, and allow to dry. Then, clean the area using the adhesion promoter pad.

## STEP 2



Test fit the cover to the vehicle before peeling the tape to familiarize fitment. Once familiar, peel the red tape backing from the cover, and adhere the cover over the defroster connector. Apply firm, even pressure to ensure proper adhesion.

Repeat steps 1-2 for the remaining defroster cover. Installation is now complete.