



HOOD SCOOP

(2021-2023+ BRONCO - EXCLUDING RAPTOR)


INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Hood Scoop
- (1) Double Sided Tape Roll
- (1) Adhesion Promoter Applicator

TOOLS REQUIRED

- Isopropyl Alcohol
- Microfiber Cloth
- Razor Knife

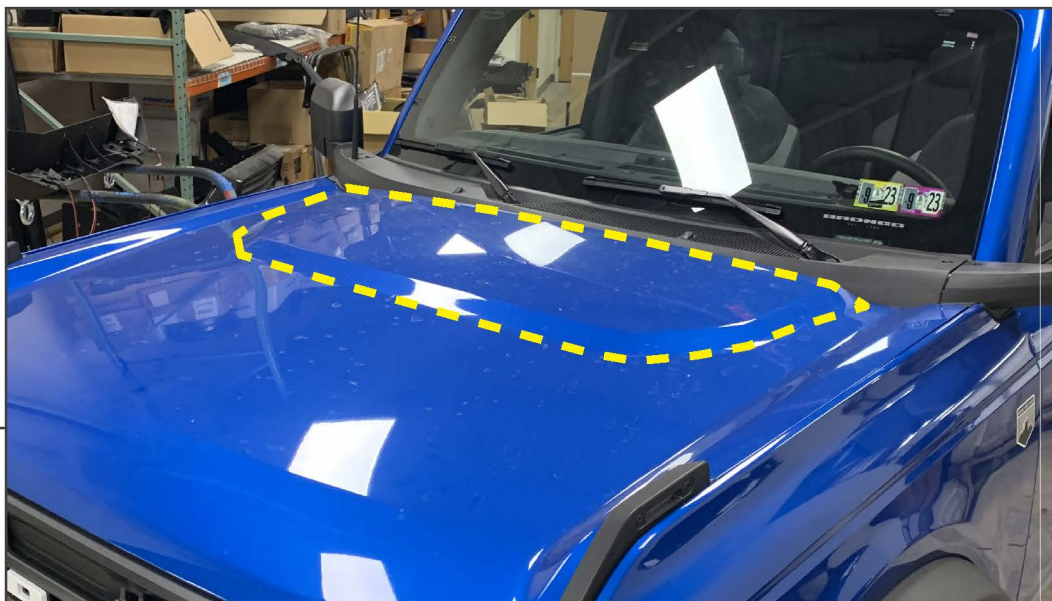

STEP 1

Clean the vehicle hood using exterior detailer first, then clean the perimeter of the bulged area of the hood using isopropyl alcohol and a microfiber cloth, then with the included adhesion promoter. Allow to fully dry.



STEP 2

Place the hood scoop on a soft surface, and apply the included adhesion promoter to the bottom perimeter of the hood scoop. Allow the adhesion promoter to fully dry.



STEP 3

Apply the double sided tape to the bottom of the hood scoop.



STEP 4

Test fit the hood scoop to the vehicle before removing the red double sided tape backing to familiarize fitment to the vehicle. Once familiar, remove the red double sided tape backing, and adhere the hood scoop to the vehicle. Firmly press all areas of the hood scoop downwards to ensure proper adhesion.

Installation is now complete.