



REAR CARGO AREA STORAGE RACK

(2021-2023+ BRONCO - 4 DOOR WITH HARD TOP)

INSTALLATION INSTRUCTIONS

CONTENTS

- (2) Storage Rack Trays
- (1) LH Window Bracket
- (1) RH Window Bracket
- (1) LH Base Bracket
- (1) RH Base Bracket
- (2) Horizontal Braces
- (1) Vertical Brace
- (2) M8x1.25 x 16mm Torx Bolts
- (2) M8 Flat Washers
- (42) M6x1.00 x 12mm Allen Bolts
- (42) M6 Cap Nuts

TOOLS REQUIRED

- 10mm Socket/Wrench
- T-45 Torx Socket/Key
- 4mm Allen Socket/Key
- Ratchet

SKU # FB29143
Edited: 05/10/2023



STEP 1


Remove the vehicle hard top following OEM removal steps.



STEP 2


Identify the (2) base mounting brackets. Each bracket is side specific. Fit the base mounting brackets to each side, and re-install the vehicle hard top using the original mounting hardware.

Note: For instructional purposes, this installation will be done with the top removed.

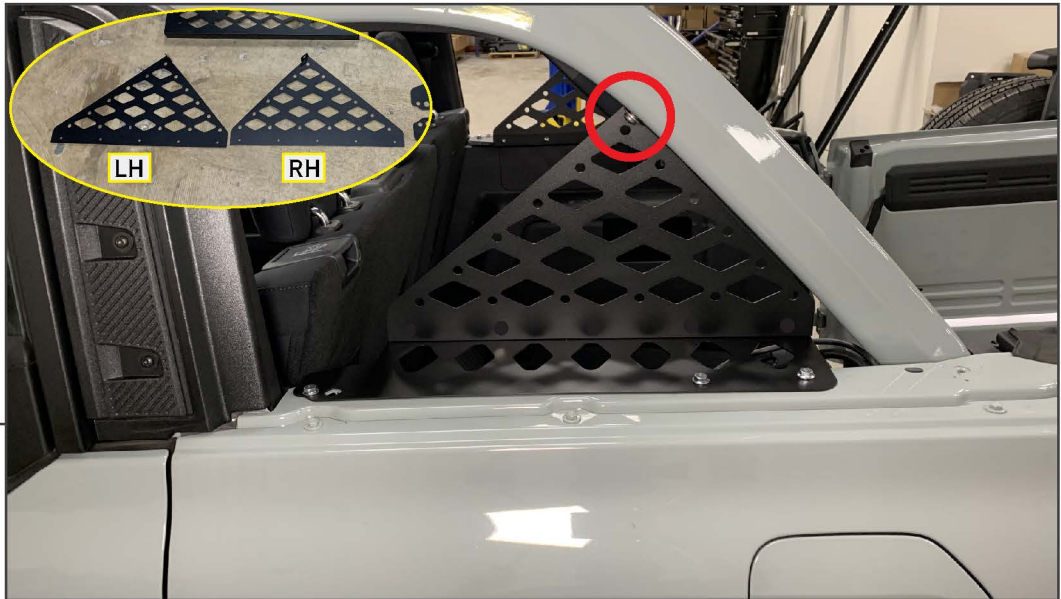


STEP 3

Identify the (2) window mounting brackets. Each bracket is side specific. Secure each window bracket to the vehicle roll bar using (1) T-45 Torx bolt and (1) M8 flat washer. Do not fully tighten to allow for bracket adjustments later.

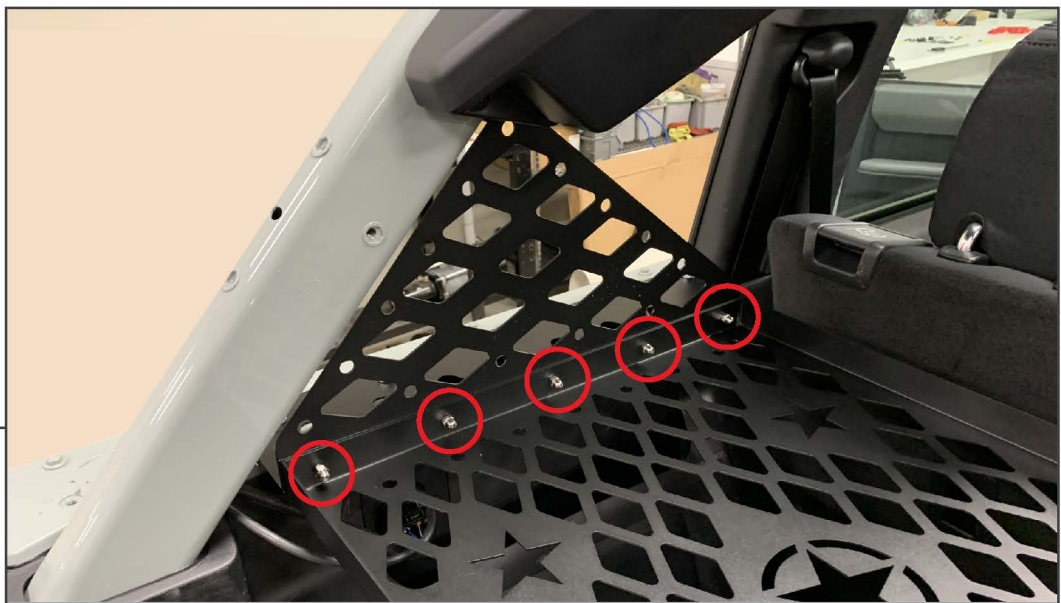


STEP 4

Secure (1) tray to the previously installed brackets using (5) M6 bolts and (5) M6 nuts on each side of the vehicle.

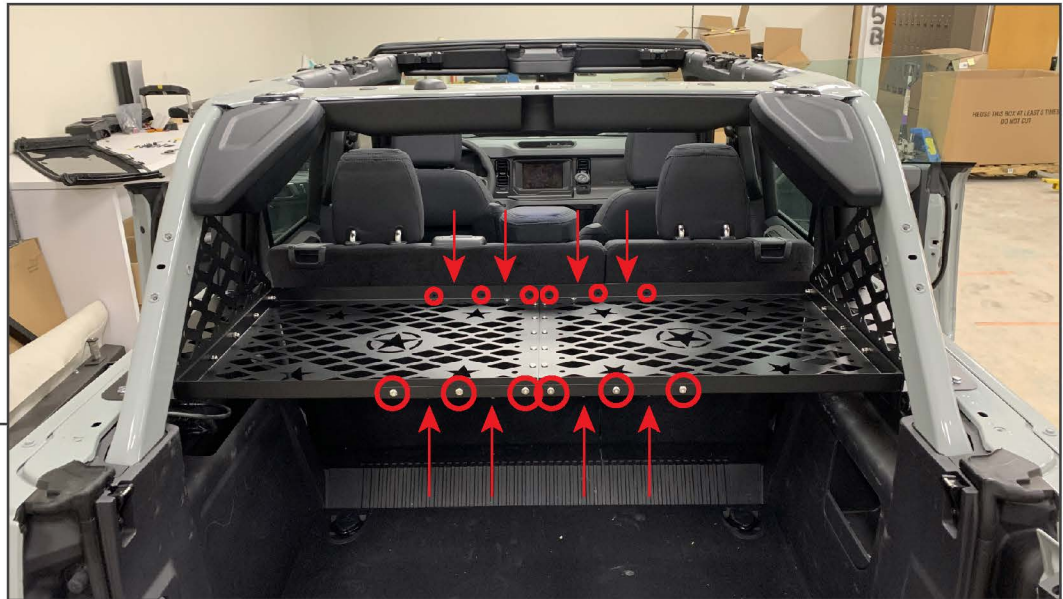

STEP 5

Secure the (2) horizontal braces to the trays using (20) M6 bolts and (20) M6 nuts.

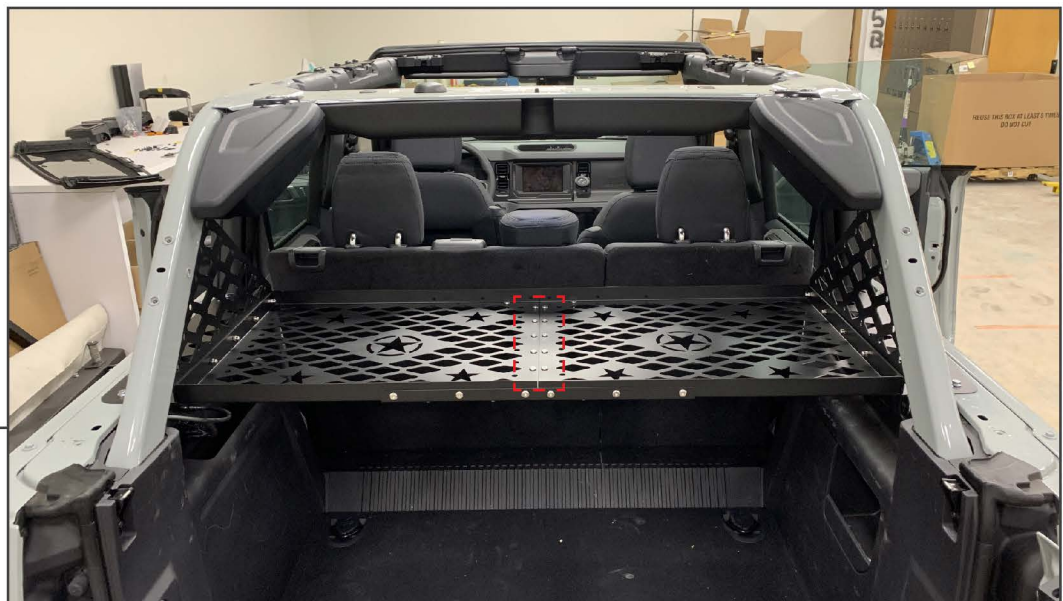

STEP 6

Secure the (1) vertical brace to the trays using (12) M6 bolts and (12) M6 nuts.



STEP 7

With all components in place, tighten all hardware evenly until secure.

Installation is now complete.