

LED GRILLE LIGHTING KIT

(2021-2023+ BRONCO - BADLANDS, WILDTRAK, AND EVERGLADES TRIM ONLY)

INSTALLATION INSTRUCTIONS

CONTENTS

(1) LED Lighting Set (Left, Middle, Right)

(1) Wiring Harness

(3) Zip Ties

TOOLS REQUIRED

Panel Removal Tool

REDROCK



Open the vehicle hood. Locate the front radiator trim panel. Remove (9) plastic push clips from the radiator trim panel using a panel removal tool.




STEP 2

Route the (3) LED lighting connectors through the back side of the grille assembly. Navigate the harness through the front of the grille. Ensure the fuse tap/ground terminal are on the LH (Driver's Side) of the vehicle. Feed the connectors through the grille at each desired LED light hole.

REDROCK



Identify the (3) LED lights based on the label located on the back side of the light assembly (left [Driver's Side], middle, right [Passenger's Side]). Plug in the corresponding light to the harness, and press the LED light into the grille assembly until an audible click can be heard to confirm light engagement in the grille. Repeat this step for the remaining LED lights.

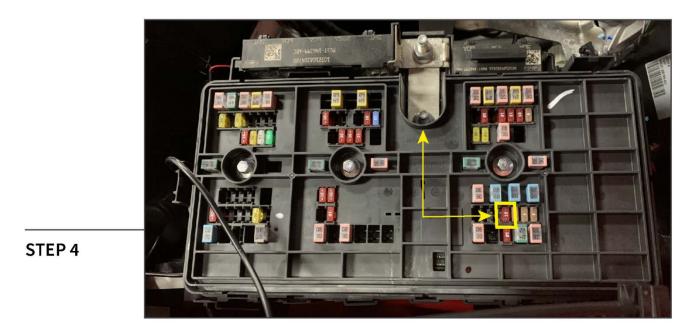

Remove the fuse box lid. Locate and remove the indicated fuse from the fuse box. Insert the (1) fuse tap into the fuse slot. Connect the ground terminal on the wiring harness to the vehicle battery ground/suitable vehicle ground. Re-install the fuse box lid. The lights will power on with the ignition on.

Note: Ensure fuse tap and wiring harness connector silicone boots are properly fitted. Cutting a small slot in the fuse box edge may be necessary for ideal wire routing.





Tuck the wiring harness/use the included zip ties to secure the wiring harness away from any moving/hot components.

Re-install the upper radiator trim panel using the original plastic push clips. Installation is now complete.