



# HOOD MOUNTED DRLS

(2021-2023+ BRONCO)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

- (1) LED Light
- (2) "T" Harness
- (1) DRL Fuse Tap Harness
- (6) Cable Ties
- (6) M6 Flange Bolts

### TOOLS REQUIRED

---

- Panel Removal Tool
- Flathead Screwdriver
- Phillips Screwdriver
- 10mm Socket/Wrench
- Ratchet



## STEP 1


Open the vehicle hood. Remove (2) 10mm nuts and (1) 10mm bolt from the hood tie down assembly. Lift and remove the assembly from the vehicle.



## STEP 2


Identify each hood mounted DRL assembly, the assemblies are side specific and labeled. Once identified, fit the corresponding hood mounted DRL to the vehicle using (3) M6 flange bolts. Tighten the hardware evenly until secure.

## STEP 3

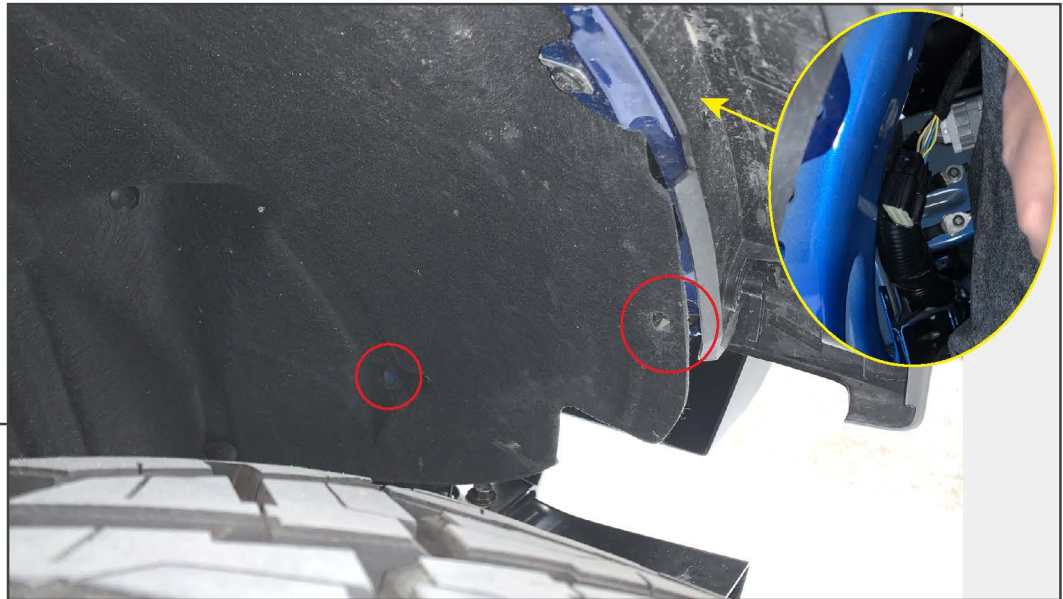


Remove (2) Phillips head plastic push clips from the front of the wheel well liner on each side of the vehicle. With the clips removed, reach up and unplug each headlight electrical connector.

## STEP 4

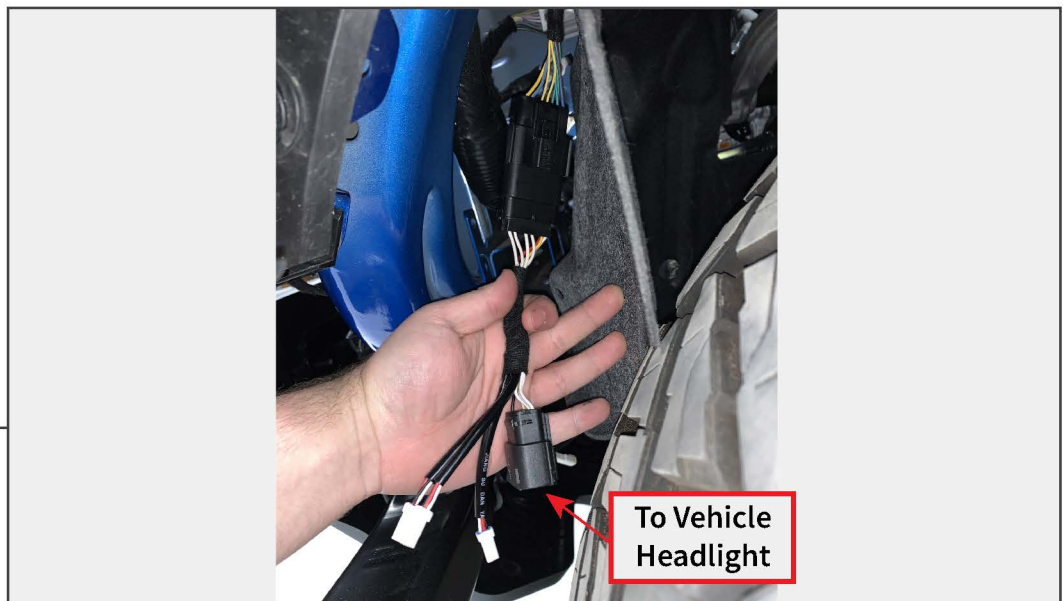

Plug the “T” harness into the vehicle headlight wiring harness connector, then plug the “T” harness into the vehicle headlight.




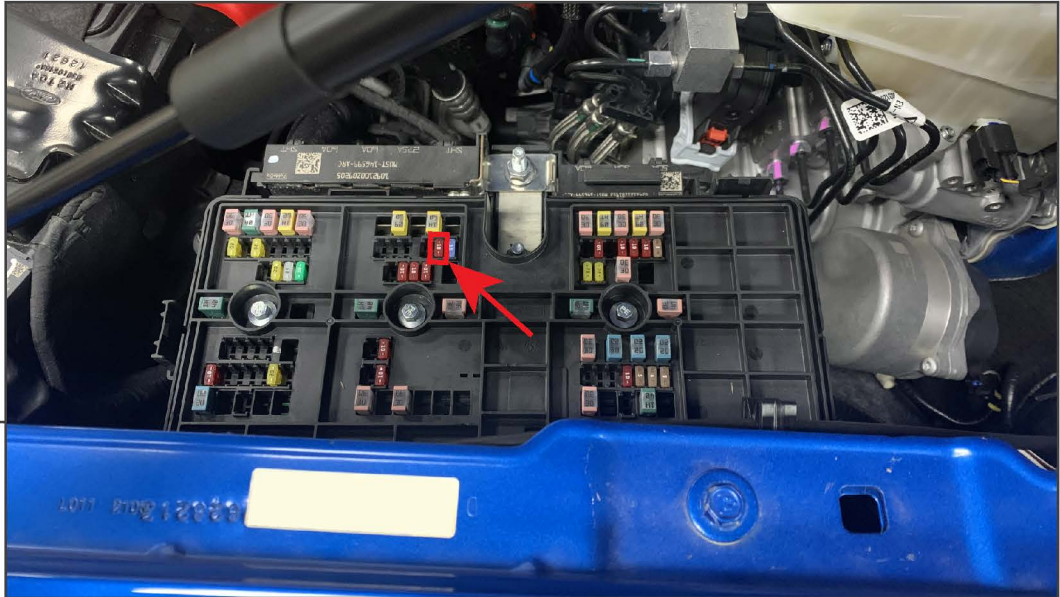

## STEP 5

Open the vehicle fuse box, and locate the indicated fuse. Remove the fuse and plug in the DRL fuse tap harness. Neatly route the harness and close the fuse box.

Neatly route the harness towards the LH and RH headlight assemblies. Plug the DRL harness into each hood light assembly and route the harness towards the back of each headlight assembly.

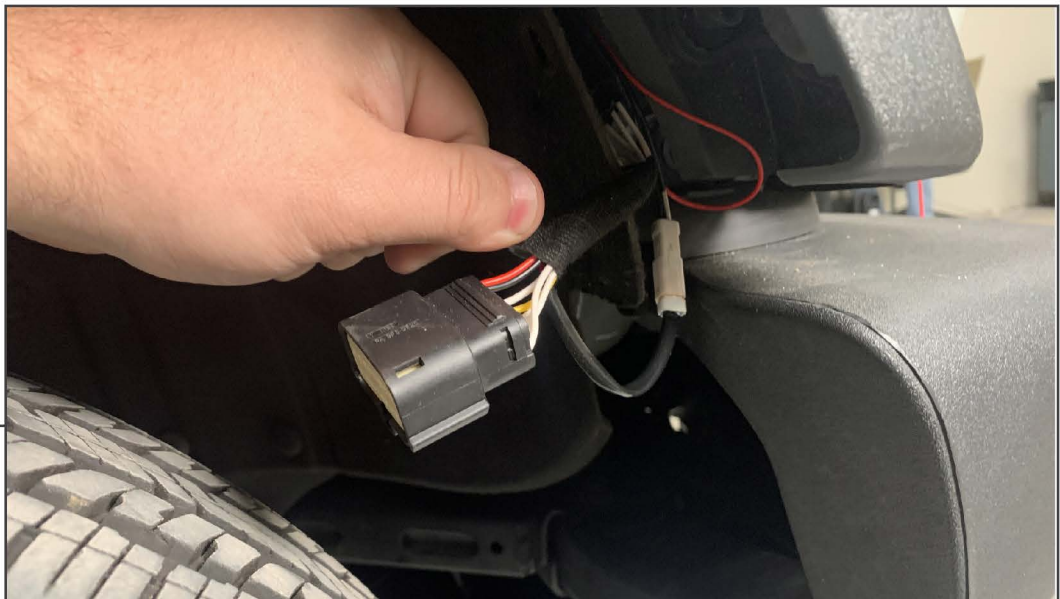

## STEP 6

Plug the DRL/hood light harness into each headlight "T" harness. Note: All harness leads attached to the "T" harness will not be used.

Neatly route all wiring harnesses away from any hot/moving components using the included cable ties.



---

## STEP 7

Installation is now complete.