

# 5-LED FOG LIGHTS

(2021-2023+ BRONCO - WITH MODULAR FRONT BUMPER)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---


- (1) LH Fog Light
- (1) RH Fog Light
- (2) Wiring Harnesses
- (6) Zip Ties

### TOOLS REQUIRED

---

- 7mm Socket
- T-40 Torx Socket
- Ratchet
- Panel Removal Tool
- Phillips Screwdriver

**STEP 1**

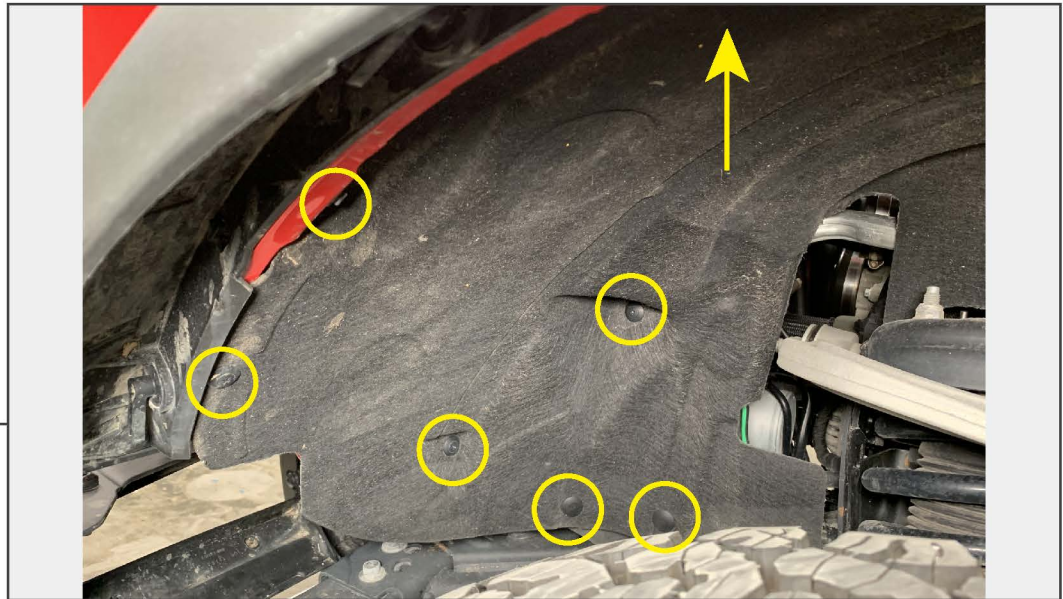


In the vehicle wheel well, remove the front fasteners from the wheel liner.

**STEP 2**




Reach upwards behind the vehicle headlight and unplug the headlight wiring harness.

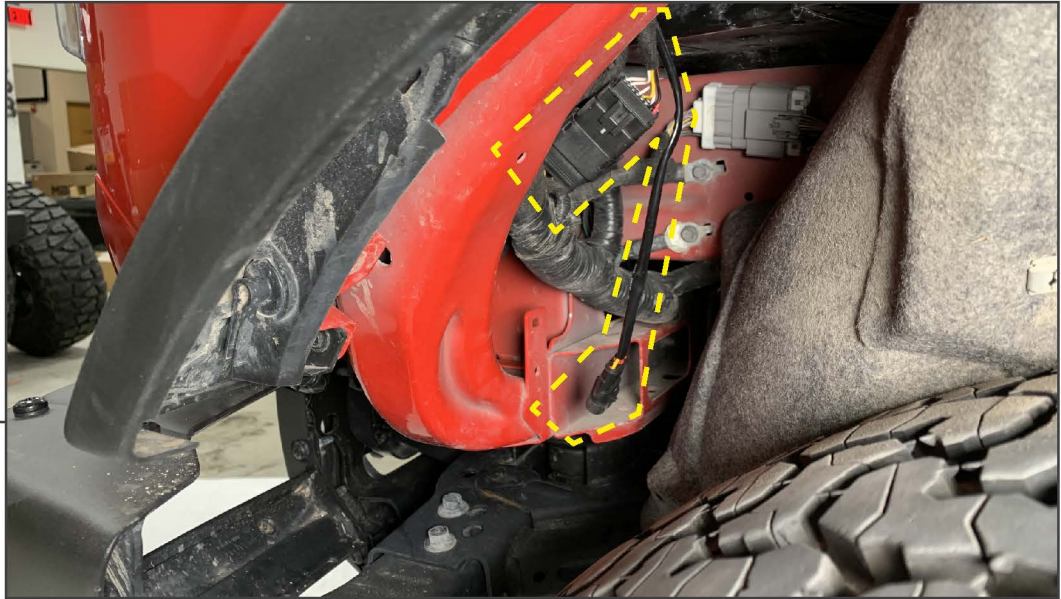

**STEP 3**

Plug the 'T' harness into the OEM wiring harness. Then, plug the 'T' harness into the vehicle headlight. Route the fog light wiring connector downwards towards the front bumper.

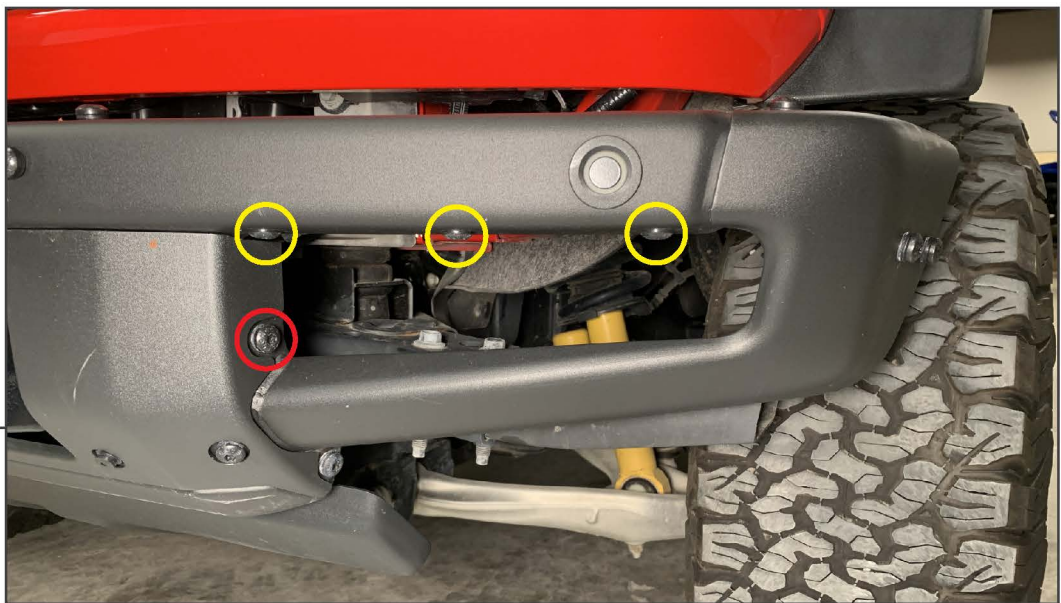


**STEP 4**

Remove (4) T-40 Torx bolts from the bumper.

Note: The bottom bolt is different from the upper bolts, and must be installed into the original location during assembly.

**STEP 5**

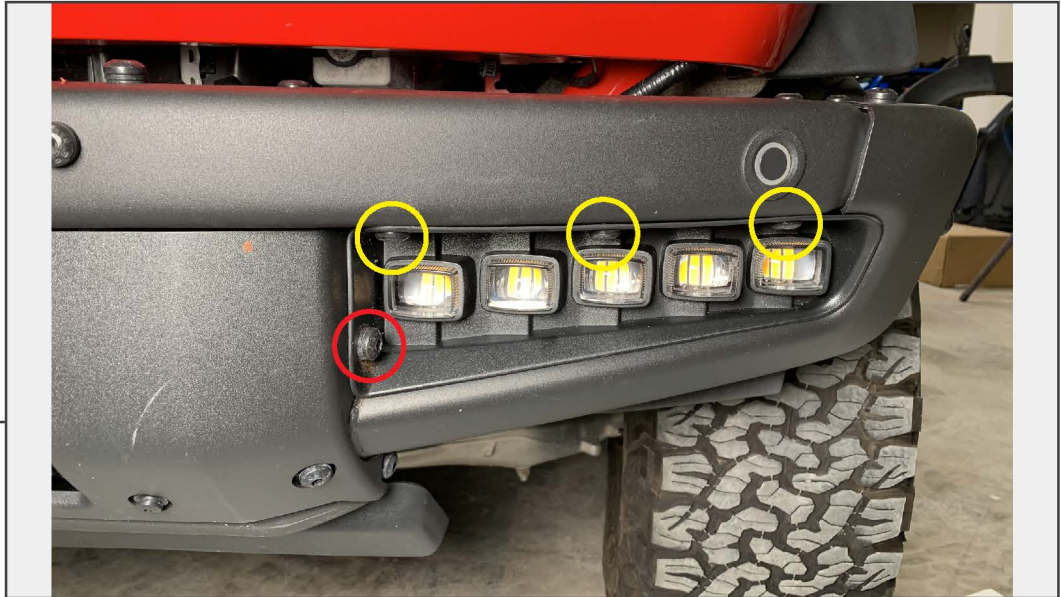

Align and press the fog light assembly into the front bumper. Re-install the (4) T-40 Torx bolts into the original bolt locations, and tighten until secure. Plug the fog light into the 'T' harness connector.

**STEP 6**



Re-install the wheel well liner to the vehicle using the original hardware.

Repeat steps 1-6 to install the remaining LED fog light assembly.

Installation is now complete.