

LED FOG LIGHTS

(2021-2023+ BRONCO - WITH MODULAR FRONT BUMPER)


INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Fog Light
- (1) RH Fog Light
- (2) 'Y' Harnesses
- (1) Wiring Harness
- (1) Splice Block

TOOLS REQUIRED


- 7mm Socket
- T-40 Torx Socket
- Ratchet
- Panel Removal Tool
- Phillips Screwdriver

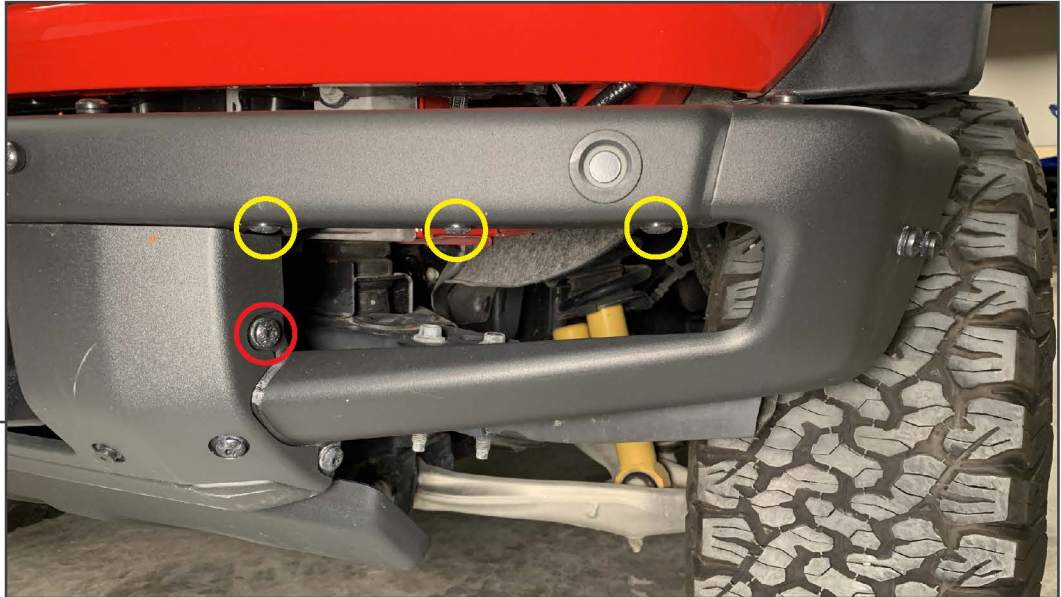

STEP 1

Remove (4) T-40 Torx bolts from the bumper.

Note: The bottom bolt is different from the upper bolts, and must be installed into the original location during assembly.

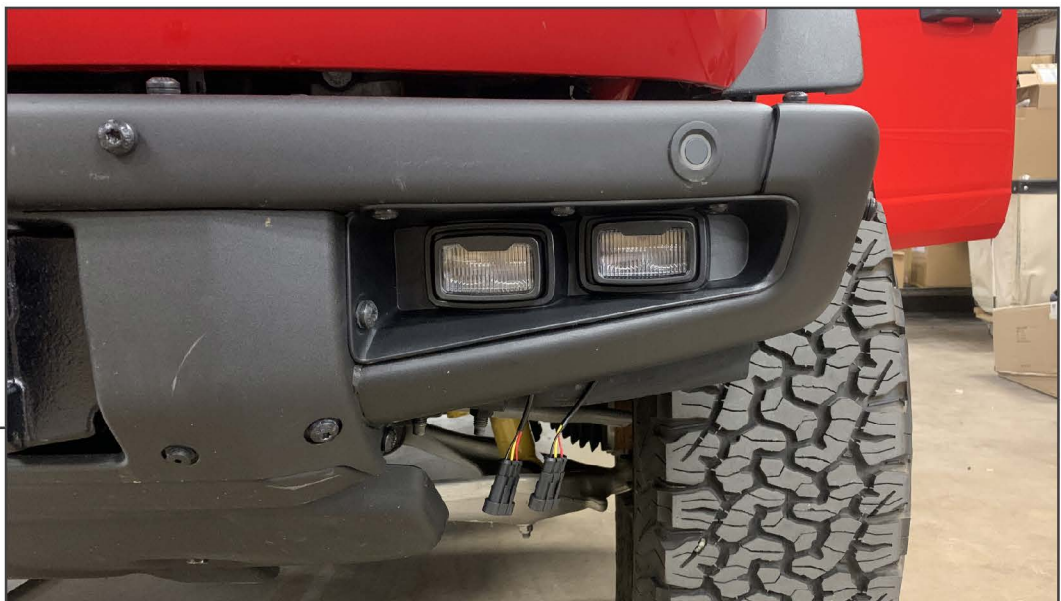


STEP 2

Secure the fog light to the vehicle using the original bumper hardware, tighten the hardware evenly until the light is secure.

Repeat steps 1-2 to install the remaining fog light assembly to the bumper.

STEP 3

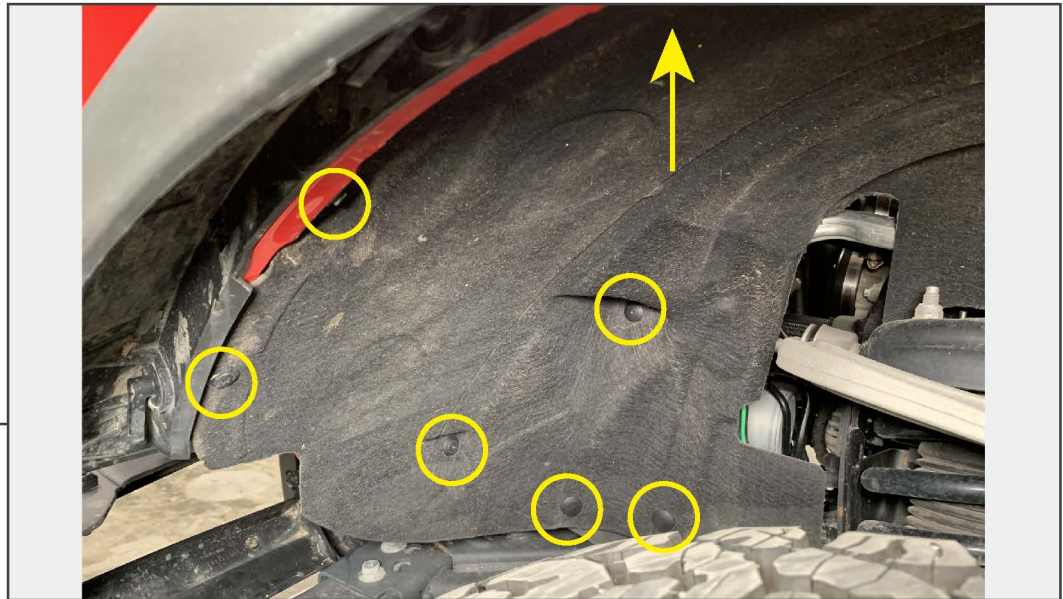

Plug the RH side fog light into the included wiring harness, and route the harness towards the LH side of the vehicle. Remove the LH side fender liner retaining hardware, and route the harness towards the engine bay.

STEP 4

<p>OEM AUX SWITCH DIAGRAM</p> <p>AUX 1: Yellow AUX 2: Green/Brown AUX 3: Violet/Green AUX 4: Brown AUX 5: Blue/Orange AUX 6: Yellow/Orange</p>	
<p>Light Harness Functions</p> <p>Red: Fog Lights Yellow: Amber Lights Black: Ground</p>	

The lights can be wired to function as amber running lights **OR** white fog lights.

Vehicles with OEM AUX Switches: Use the included (1) splice block to allow the lights to function with the OEM AUX Switches following the diagram above.

Vehicles without OEM AUX Switches: Splice the desired amber/white fog light harness wire into the vehicle headlight harness. Reference the diagram above for light harness functions.



STEP 5

Adjust each light assembly using the knobs attached to each light housing. Re-install the wheel well liner using the original hardware.

Installation is now complete.