



TONNEAU COVER

(2021-2023+ BRONCO - 4 DOOR)

INSTALLATION INSTRUCTIONS

CONTENTS

(1) Tonneau Cover
(8) Thumb Screws

TOOLS REQUIRED

N/A

STEP 1



Remove the vehicle top by following the OEM top removal procedure.


Identify the front and rear of the tonneau cover, take note to the roll bar cutouts.

STEP 2



Drape the tonneau cover into the vehicle cargo area. Wrap the tonneau around the vehicle roll bars, and align each of the holes in the tonneau to the vehicle bolt holes in the side panels. Thread each thumb screw through the tonneau into the vehicle.

Note: Placing the tonneau in the sun before installation may aid tonneau stretching for ease of thumb screw alignment.

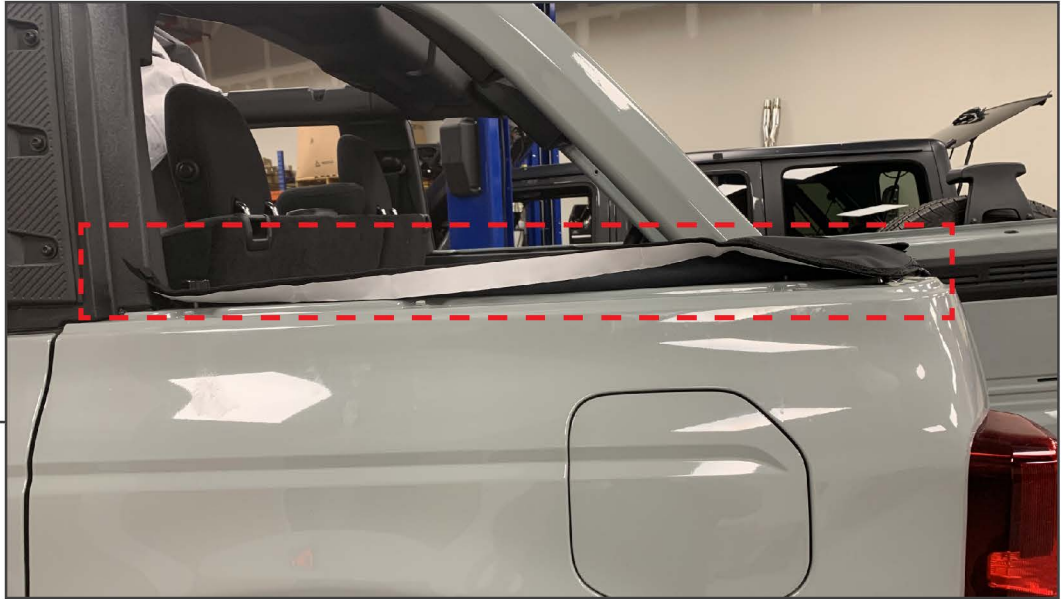

STEP 3

Peel the tape backing from the Velcro strip on each side, then pull the tonneau tight and adhere the tonneau Velcro to the side panels. Apply firm pressure to ensure proper adhesion. The Velcro will remain on the vehicle when the tonneau is removed.



STEP 4

Press the Velcro attached to the tonneau to the rear seat carpet backing, the Velcro will grip the carpet. Ensure to attach the Velcro so the tonneau will be tight and level.



STEP 5

Secure the rear of the tonneau to the bottom of the vehicle tailgate using the attached straps. Attach the hook to the bottom of the tailgate, and pull the straps tight to add tension to the tonneau.



STEP 6

Adjust the tonneau as necessary for best fit.

Installation is now complete.