



TAILGATE MOLLE PANEL

(2021-2023+ BRONCO)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Molle Panel
- (3) Phillips Screws
- (3) Phillips Screw Inserts
- (4) Hex Bolts
- (4) Hex Bolt Threaded Blocks
- (4) Hooks

TOOLS REQUIRED


- Panel Removal Tool
- Phillips Screwdriver

STEP 1



Open the vehicle tailgate. Using a panel removal tool, remove the tailgate plastic panel by dislodging the (3) metal clips from the panel.

STEP 2

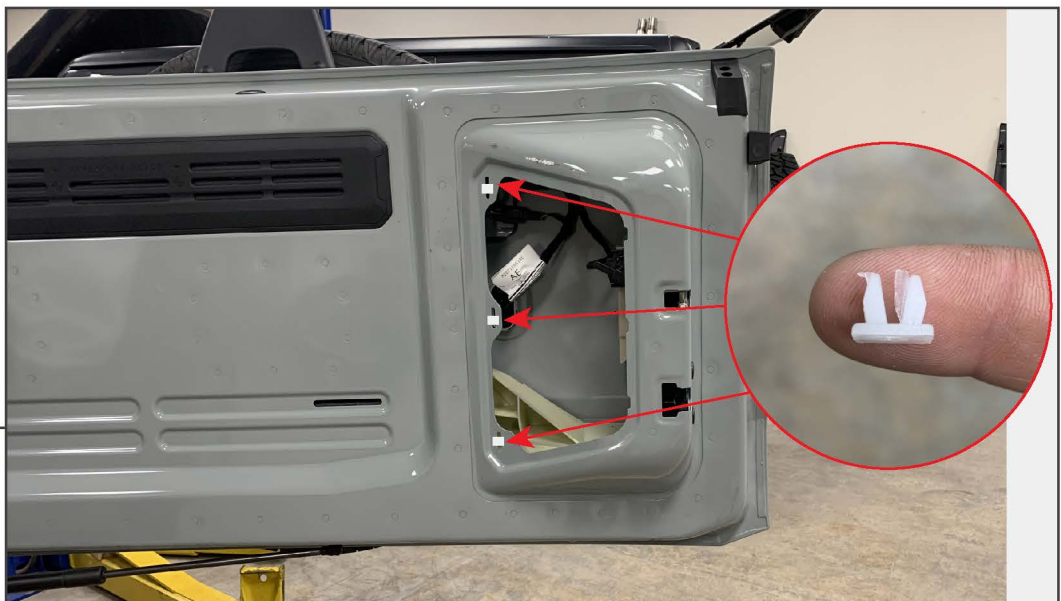

Fit the (3) Phillips screw inserts into the slots in the tailgate. These inserts can be adjusted once fitted in the tailgate for proper alignment with the molle panel.

STEP 3



Fit the RH side of the molle panel under the tailgate lip, and then secure the LH side of the molle panel to the tailgate using (3) Phillips screws and (3) flat washers into the previously fitted screw inserts. Tighten the screws until the panel is secure, do not over-tighten.

STEP 4



If desired, install the (4) hooks into the vertical slots in the molle panel using (4) Hex bolts and (4) Hex bolt threaded inserts. Fit the assembly into the molle panel, then turn the threaded insert to lock into the molle panel and tighten the bolt into place.



STEP 5

Installation is now complete.