



GRILLE INSERTS

(2021-2023+ BRONCO - BIG BEND & OUTER BANKS)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) RH Upper Grille Insert [A1]
- (1) RH Lower Grille Insert [B1]
- (1) Center Upper Grille Insert [A2]
- (1) Center Lower Grille Insert [B2]
- (1) LH Upper Grille Insert [A3]
- (1) LH Lower Grille Insert [B3]
- (6) Alcohol Prep Pads
- (6) Adhesion Promoter Prep Pads

TOOLS REQUIRED


- Exterior Detailer
- Microfiber Cloth



STEP 1

Clean each vehicle grille slot using exterior detailer and a microfiber cloth.

Clean each vehicle grille slot using the included alcohol prep pads, and allow to fully dry. Then, clean the same area with the adhesion promoter prep pads.

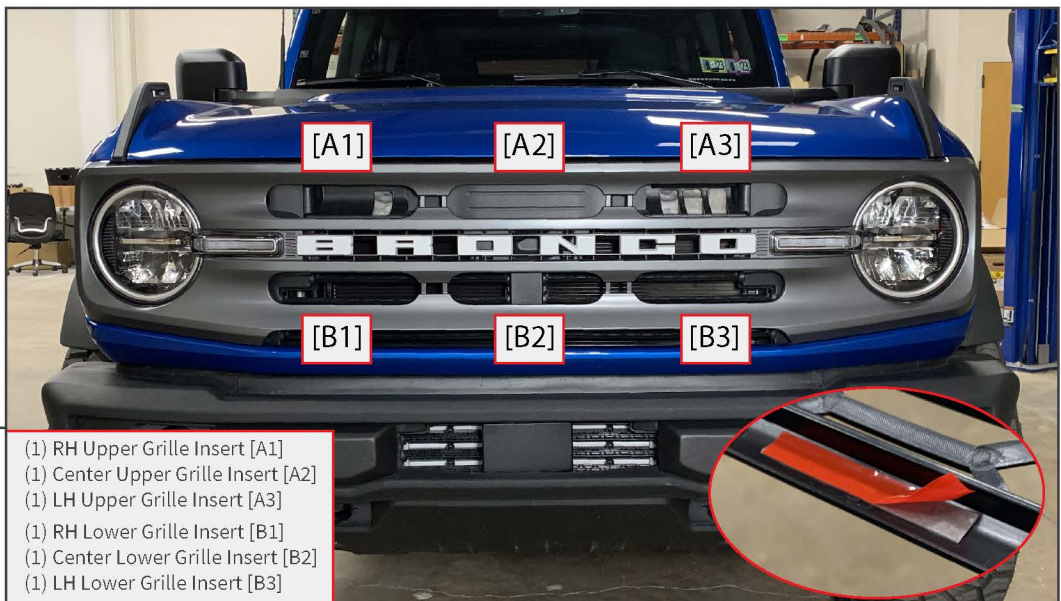

STEP 2

- (1) RH Upper Grille Insert [A1]
- (1) Center Upper Grille Insert [A2]
- (1) LH Upper Grille Insert [A3]
- (1) RH Lower Grille Insert [B1]
- (1) Center Lower Grille Insert [B2]
- (1) LH Lower Grille Insert [B3]

Locate the label molded into the grille insert, each insert is specific to the grille mounting location. Use the diagram above to identify fitment location.

Peel the red tape backing from the grille inserts.



STEP 3

Press each grille insert into the grille, the clips will engage to the grille. Then, firmly press the areas with the double sided tape to ensure proper adhesion.

Installation is now complete.