



GoPro MOUNT FOR OEM HOOD MOUNTING BRACKET

(2021-2023+ BRONCO)


INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Laser Cut Bracket
- (1) GoPro Mount
- (1) M8 x 1.25 x 16mm Allen Bolt
- (1) M8 Lock Washer
- (2) M6 x 1.00 x 20mm Torx Bolts
- (2) M6 Flat Washers
- (2) Torx Wrench
- (1) Allen Wrench

TOOLS REQUIRED

- T-30 Torx Bit/Socket
- Ratchet

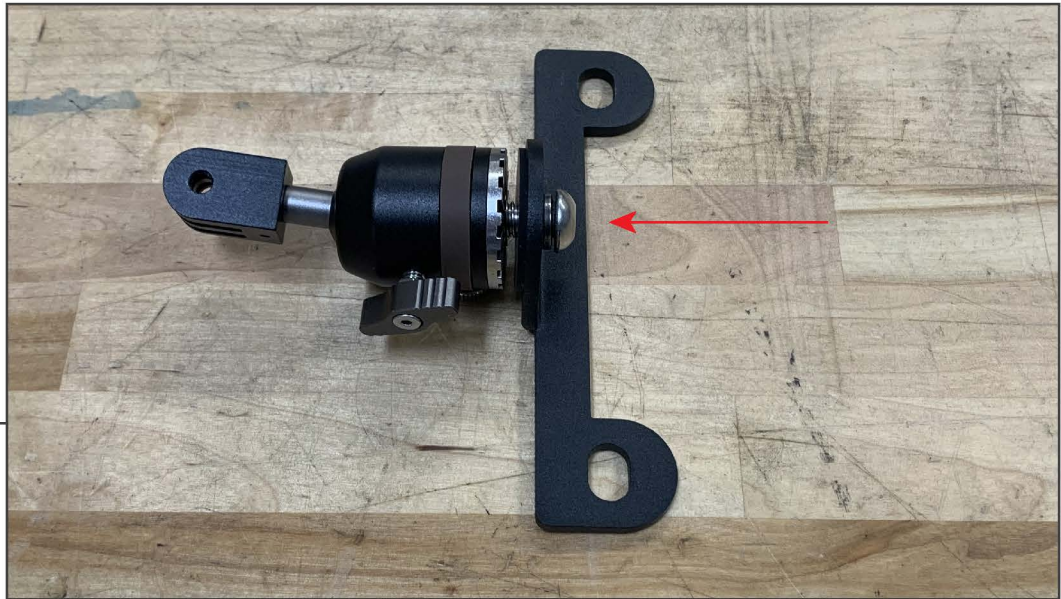

STEP 1

Using (1) M8 x 16mm Allen bolt and (1) M8 lock washer, loosely secure the GoPro mount to the mounting bracket. Allow the mount to remain loose to allow for adjustment on the vehicle.




STEP 2

Remove the (2) Torx bolts in the hood mounting bracket. Ensure to allow the threaded inserts to remain inside the bracket when the bolts are removed.



STEP 3

Align and secure the assembly to the vehicle hood bracket using (2) M6 x 20mm Torx bolts and (2) M6 flat washers. Tighten the bolts evenly until secure.

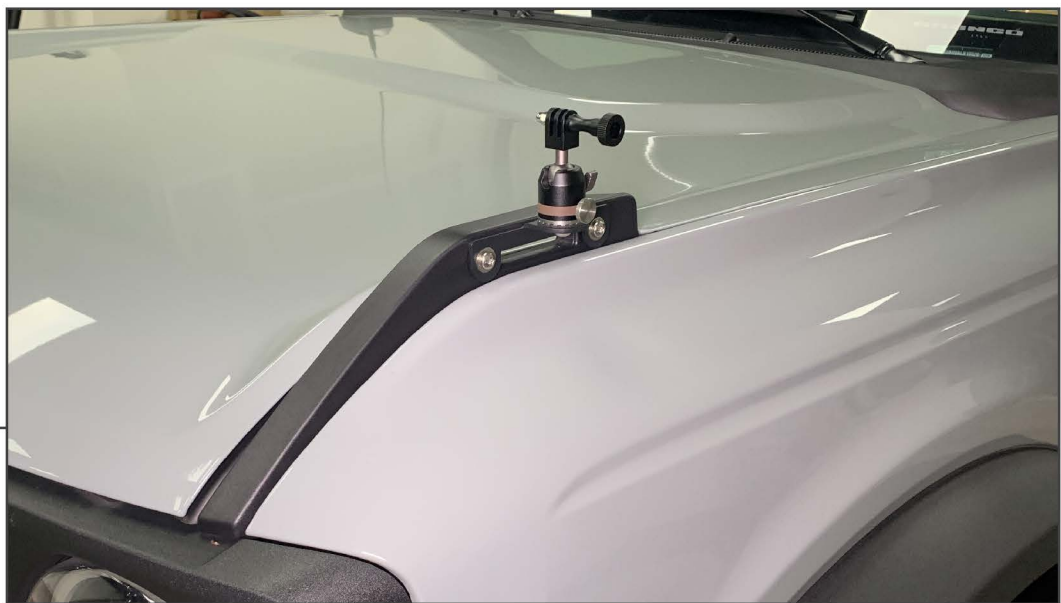

STEP 4

Adjust the GoPro mount to the desired position, and tighten the (1) M8 Allen bolt to secure into place.

Installation is now complete.