



OFF-ROAD HEADLIGHT GUARDS

(2021-2023+ BRONCO)

INSTALLATION INSTRUCTIONS

CONTENTS

(2) Headlight Guards
(2) Alcohol Prep Pads
(2) Adhesion Promoter Prep Pads

TOOLS REQUIRED


N/A



STEP 1

Using the included (1) alcohol prep pad, clean the vehicle headlight lens outer perimeter. Allow the lens to fully dry.

Then, clean the vehicle headlight lens outer perimeter using the (1) adhesion promoter prep pad. Allow the lens to fully dry.

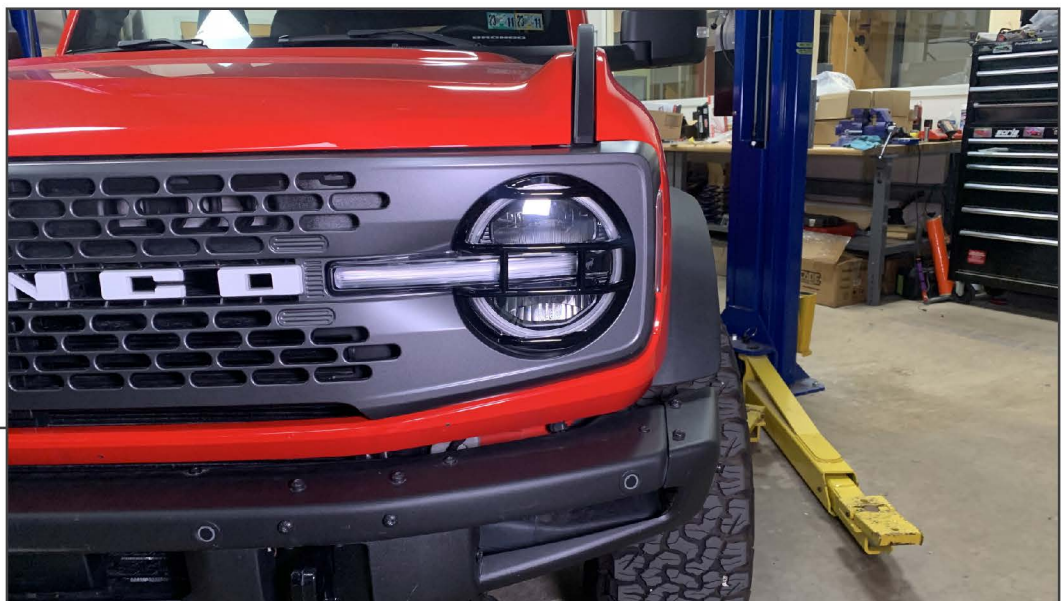

STEP 2

Test fit the headlight guard before removing the tape backing to familiarize fitment. Once familiar, peel the red tape backing and firmly press the headlight guard to the vehicle headlight lens.

Repeat steps 1-2 for the remaining headlight guard.

Installation is now complete.