



COWL ARMOR

(2021-2023+ BRONCO)


INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Upper Panel [Hood]
- (1) LH Lower Panel [Fender]
- (1) RH Upper Panel [Hood]
- (1) RH Lower Panel [Fender]
- (4) Alcohol Prep Pads
- (4) Adhesion Promoter Prep Pads

TOOLS REQUIRED

- Exterior Detailer
- Microfiber Cloth

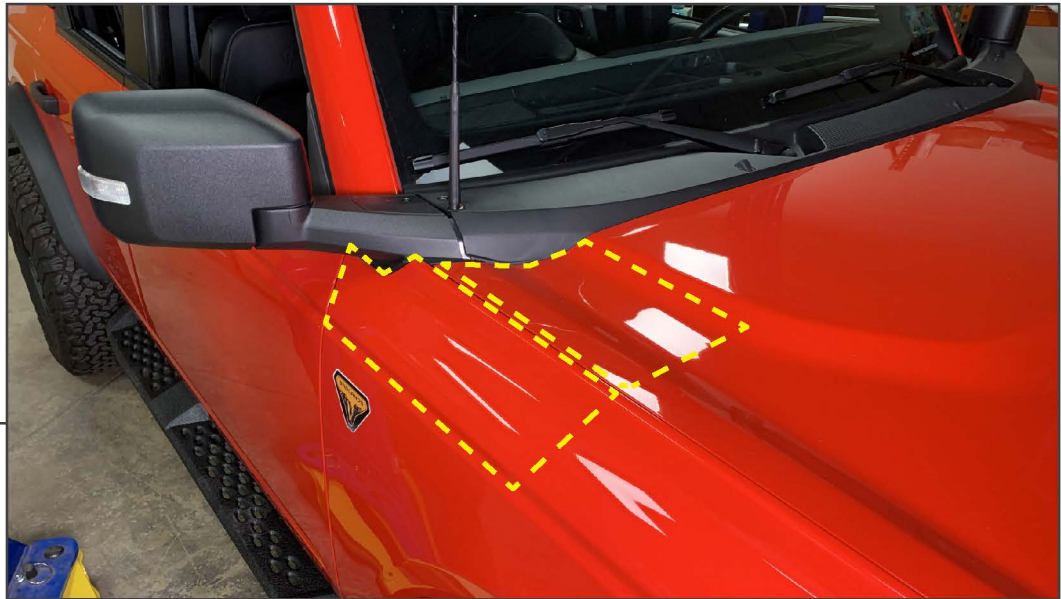

STEP 1

Clean the vehicle hood using exterior detailer and a microfiber cloth to remove any dirt/debris from the vehicle paint. Allow to fully dry.

Clean the vehicle hood using the included (2) alcohol prep pads, allow to fully dry. Then, clean the same area using the included (2) adhesion promoter prep pads, allow to fully dry.



STEP 2

Identify the cowl panels using the identification label embossed the bottom of the panel. Test fit the panels to the vehicle body panels prior to removing the tape backing.

Once familiar with fitment, peel the red tape backing from each panel.



STEP 3

Align the lower panel to the vehicle fender/door edges, and firmly press into place to encourage adhesion. Then, align the upper panel to the hood/cowl edges and firmly press into place to encourage adhesion.

Repeat steps 1-3 for the remaining panels.

Installation is now complete.