



TAILGATE MOLLE PANEL

(2021-2024+ BRONCO)

INSTALLATION INSTRUCTIONS


CONTENTS

- (1) Tailgate Molle Panel
- (2) M6 'T' Studs
- (2) M6 Threaded Spacers
- (6) M6 Flat Washers
- (2) M6 Lock Nuts
- (2) M5 'T' Studs
- (4) M5 Threaded Spacers
- (12) M5 Flat Washers
- (4) M5 Lock Nuts

TOOLS REQUIRED


- 8mm, 10mm Wrench/Socket
- Ratchet
- Plastic Panel Removal Tool

SKU # FB34976
Edited: 11/21/2023

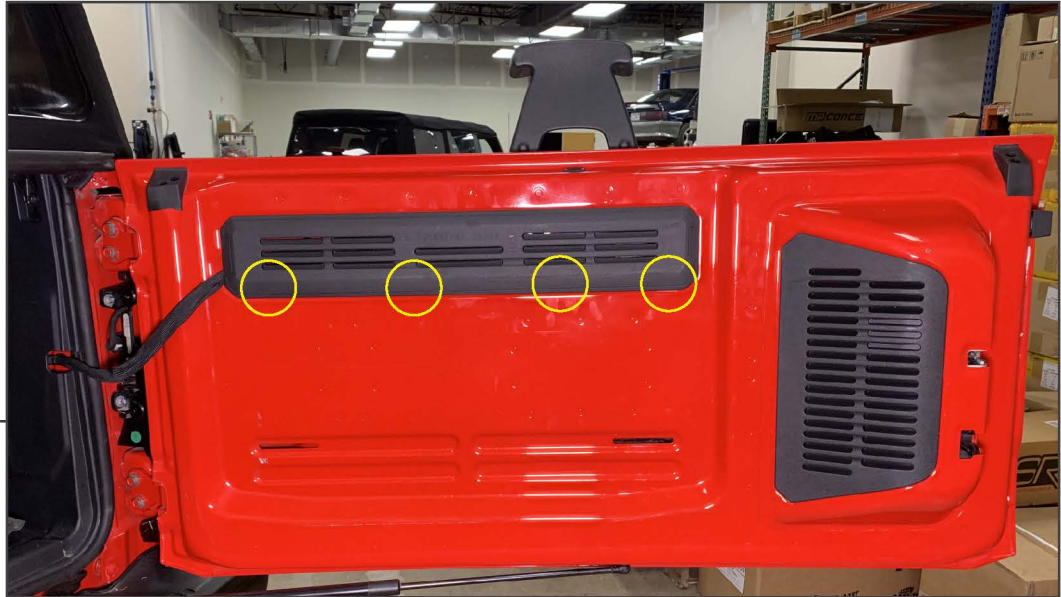

STEP 1

Open the vehicle tailgate. Using a plastic panel removal tool, dislodge the (4) retaining clips from the upper plastic panel. Remove the panel from the tailgate and set aside.

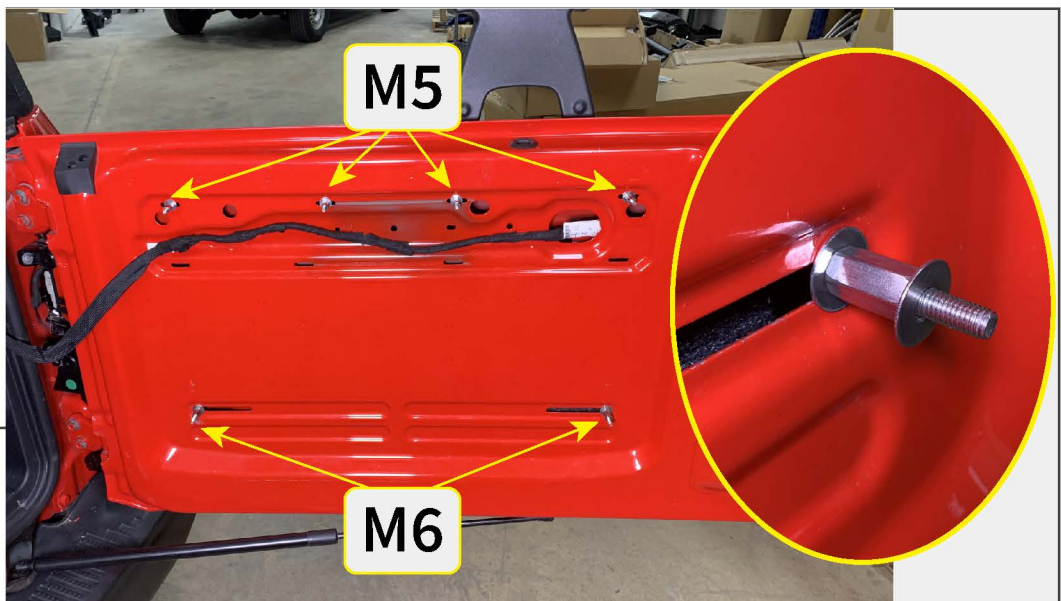


STEP 2

Fit (1) flat washer and (1) threaded spacer loosely onto each 'T' stud. Then, fit each assembled 'T' stud into the tailgate slots. Tighten the threaded spacer until snug to allow for minor adjustments later.

Follow the threaded spacer with (1) flat washer per 'T' stud once installed to the tailgate.

STEP 3

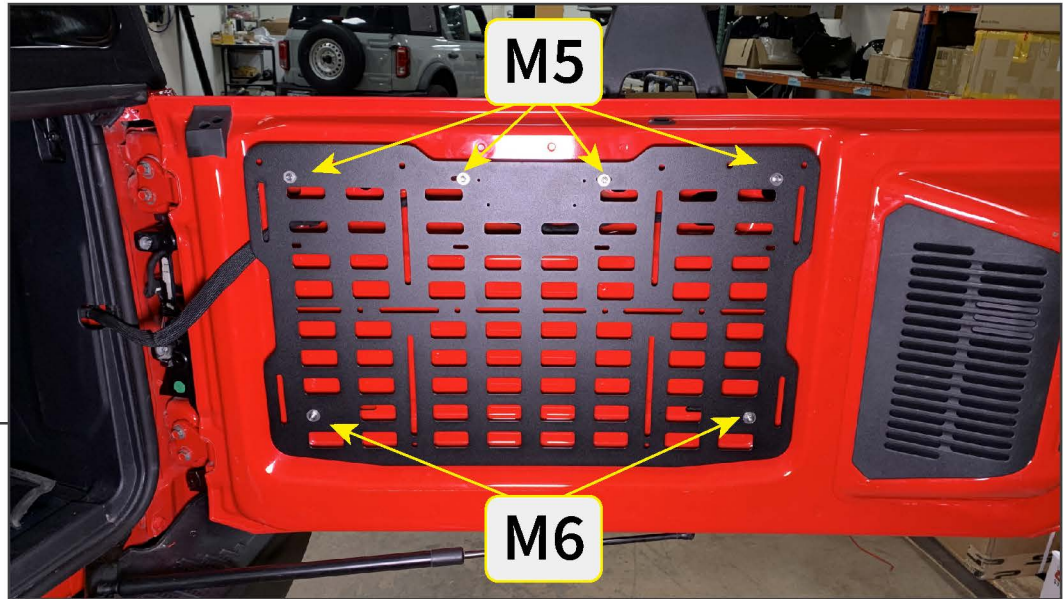

Align the molle panel to the previously installed 'T' studs. The molle panel will align to the pre-drilled holes in the panel, test fit and adjust the 'T' studs as necessary for proper alignment. Once the studs are adjusted, tighten the studs into place.

Set the molle panel into place, and secure the panel to the studs using (4) M5 flat washers & lock nuts, and (2) M6 flat washers and lock nuts. Tighten the hardware evenly until secure.

STEP 4



Installation is now complete.