

# LED TAIL LIGHTS

(2021-2024+ BRONCO - WITH OEM HALOGEN TAIL LIGHTS)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

(1) LH Tail Light  
(1) RH Tail Light

### TOOLS REQUIRED

---

7mm, 8mm, 10mm Sockets  
Ratchet with Extension  
Phillips Screwdriver  
Plastic Pry Tool  
Panel Removal Tool



**STEP 1**

Remove (4) Phillips head plastic push clips. Loosen the Phillips head inner portion of the clip, then pull the plastic clip body out of the vehicle.

Note: Add pressure under the plastic clip body to allow the inner portion of the clip to move outwards, if necessary.



**STEP 2**

Remove (2) 10mm screws from the tailgate trim panel. Remove the trim panel from the vehicle, and set aside.



**STEP 3**

In between the vehicle body and the rear bumper, remove (1) 10mm bolt.



**STEP 4**

Using a plastic pry tool, pull the vertical section of the tail light trim outwards.

**STEP 5**



Pull outwards on the horizontal portion of the tail light trim, then pull upwards to remove the trim from the vehicle.

**STEP 6**




Remove (1) 10mm bolt from the outside of the tail light assembly.



**STEP 7**

Remove (2) 8mm bolts from the inside of the tail light assembly. Firmly pull the tail light assembly away from the vehicle body to dislodge the alignment pins.

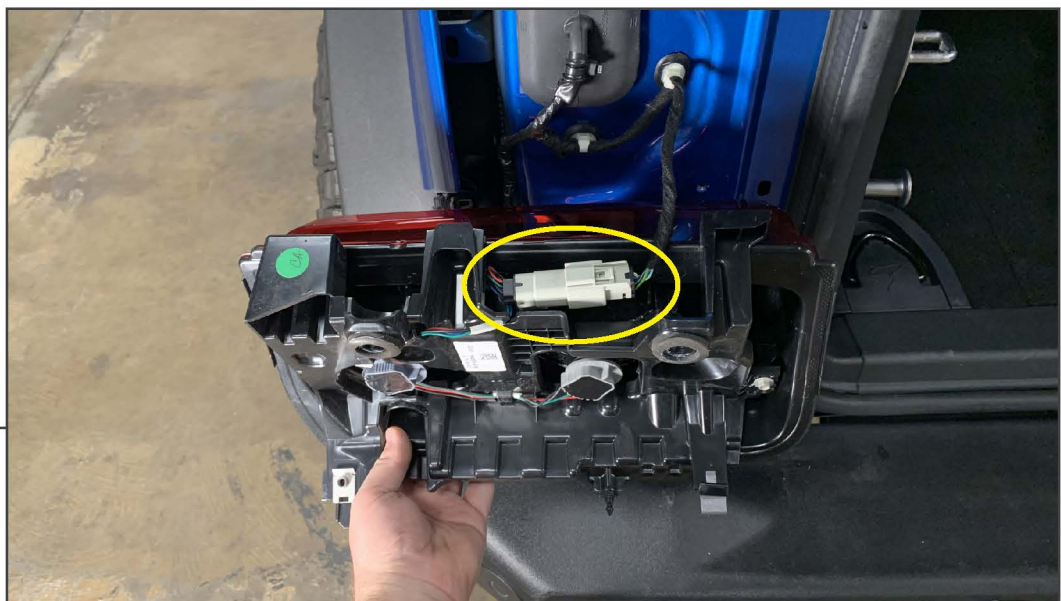


**STEP 8**

Unplug the tail light connector from the tail light by pressing the plastic push tap, and remove the tail light from the vehicle.

Place the original tail light on a soft surface for disassembly.


**STEP 9**

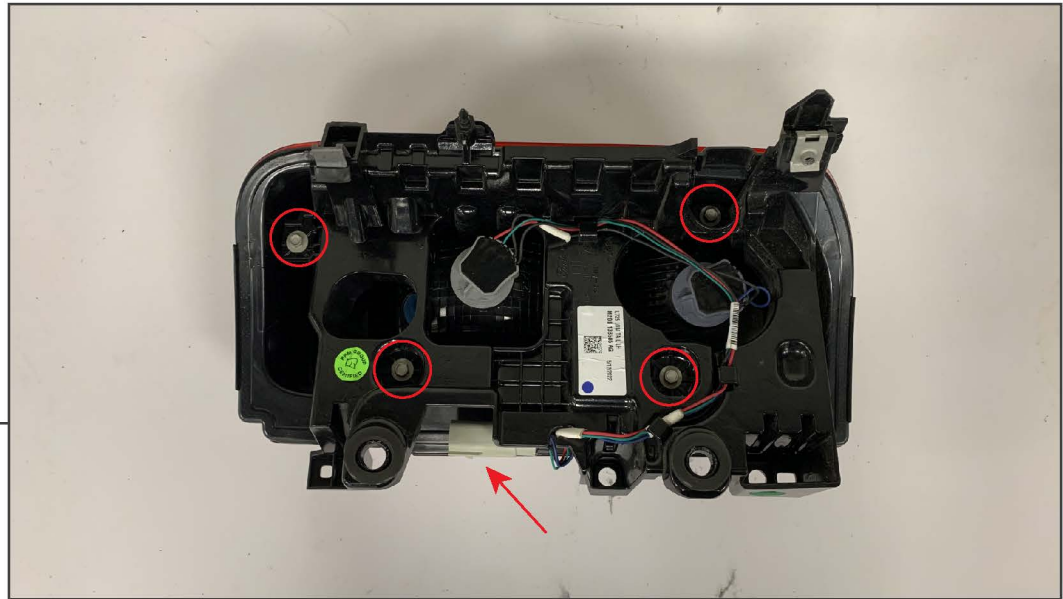

Lift the retaining tab, and slide the wiring harness connector from the post. Then, un-route the wiring harness from the tail light bracket.

Remove (4) 7mm screws from the tail light bracket.

**STEP 10**

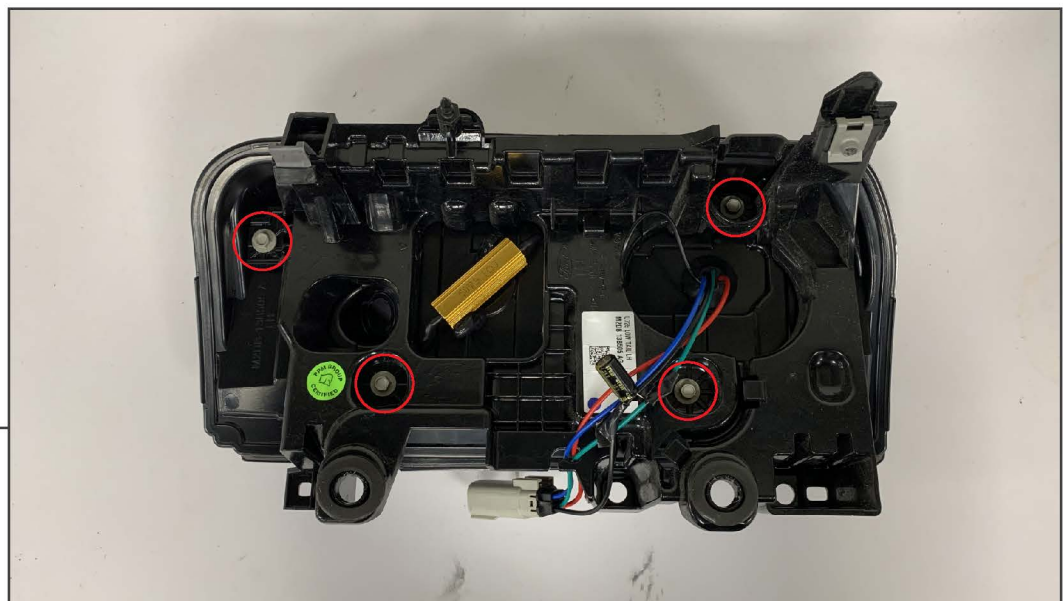

Route the tail light wiring harness through the new tail light harness, and mount the OEM tail light bracket to the new tail light using the original (4) 7mm screws. Tighten the screws evenly until secure. Lock the tail light harness connector into the tail light bracket clip.

**STEP 11**



Carefully fit the tail light into the vehicle mounting position, ensuring all alignment points are fully engaged. Then, secure the tail light to the vehicle using the (2) original 8mm bolts. Tighten the hardware evenly until secure.

Plug the tail light harness into the new tail light.

**STEP 12**



Re-assemble the vehicle panels following steps 1-7 in reverse order.

Installation is now complete.