



THIRD BRAKE LIGHT EXTENSION BRACKET

(2021-2024+ BRONCO)

INSTALLATION INSTRUCTIONS

CONTENTS

(1) Third Brake Light Bracket
(4) M8 Bolts
(4) M8 Nuts

TOOLS REQUIRED

13mm Socket
13mm Wrench
T-30 Torx Socket
Ratchet
Panel Removal Tool


STEP 1



Remove the vehicle spare tire from the tire carrier. Remove (4) T-30 Torx screws securing the third brake light bracket to the tire carrier.

Note: The (4) T-30 Torx bolts will be reused.

STEP 2

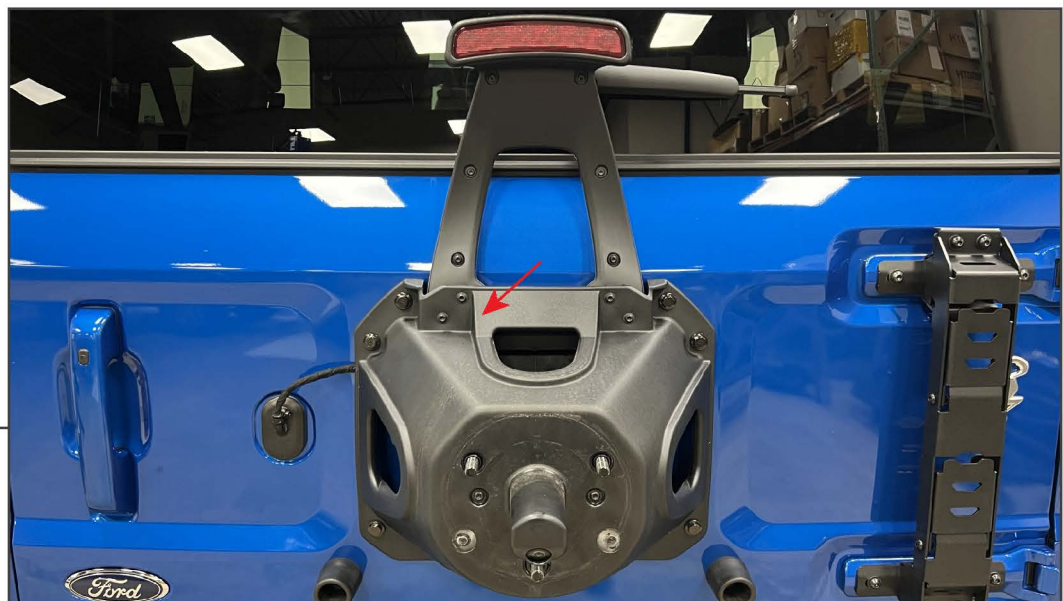

With the bracket disconnected from the tire carrier, use a panel removal tool to disconnect the wiring harness from the brake light bracket.

STEP 3




Secure the extension bracket to the OEM third brake light bracket holes using the included (4) M8 bolts and (4) M8 nuts. Tighten the hardware evenly until secure.

STEP 4



Place the third brake light bracket behind the extension bracket. Secure the third brake light bracket to the extension bracket using the original (4) T-30 Torx screws. Tighten evenly until secure.

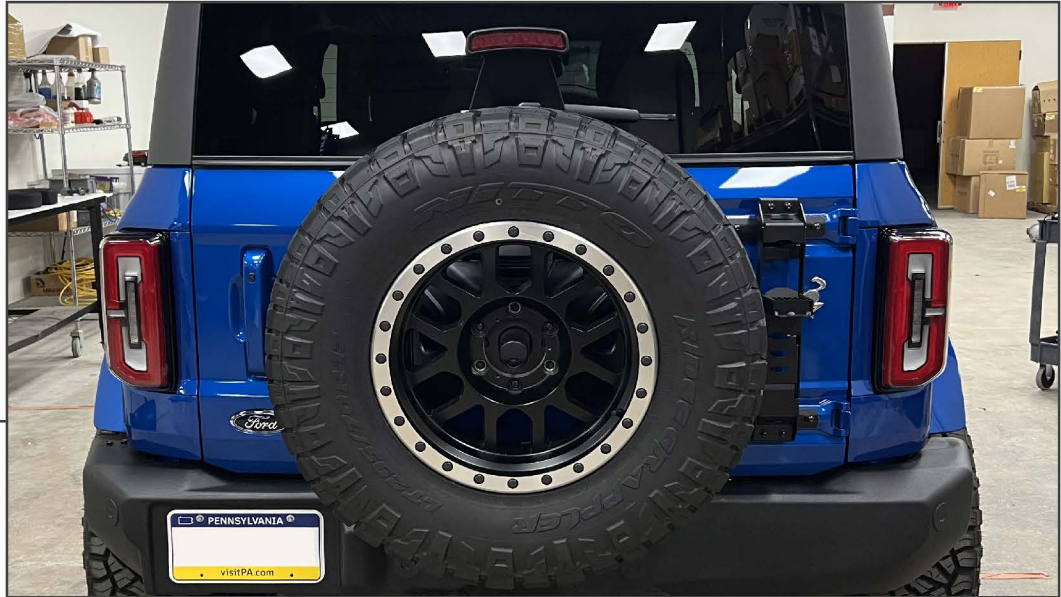

STEP 5

Re-install the vehicle spare tire, and torque to OEM specification.

Installation is now complete.