



HARD TOP STORAGE CART

(1987-2023+ WRANGLER YJ, TJ, JK, & JL)
(2021-2023+ BRONCO)

INSTALLATION INSTRUCTIONS

CONTENTS

- (2) Side Frame Tubes
- (1) Front Tube Frame
- (2) Locking Casters
- (2) Free Casters
- (4) Lock Nuts
- (6) Flat Washers
- (2) Side Foam Insulators
- (1) Front Foam Insulator
- (2) Frame Foam Pads
- (1) Hard Top Removal Kit

TOOLS REQUIRED

- 17mm Socket/Wrench
- 14mm Wrench
- Needle Nose Pliers

SKU # J141594 / J141595 / FB3979



STEP 1

Lay out the front and the side frame tubes out to show similar to the picture above. Insert the side frame tubes into the front tube frame.


Note: Be sure the front tube frame is pointing in towards the frame.



STEP 2

Determine which alignment hole is necessary for the hard top.

- [A]: JL / Bronco
- [B]: JK
- [C]: YJ / TJ

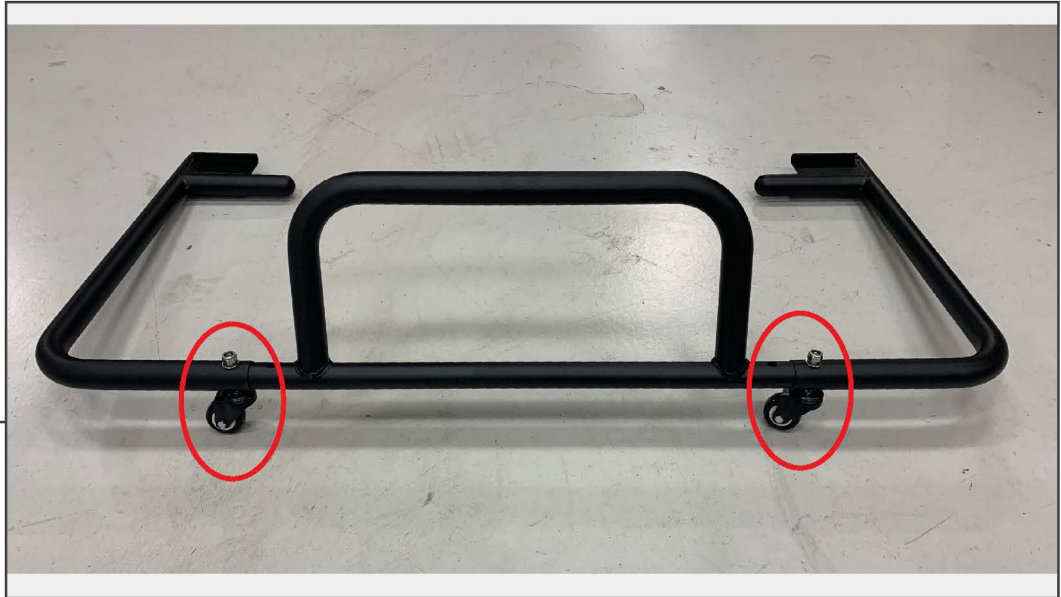

STEP 3

Install the (2) free casters at the appropriate alignment hole in the tube frames using (1) flat washer and (1) locking nut on each caster. Tighten the casters to the frame using a 17mm Socket, and hold the base of the caster stud with a thin wrench or needle nose pliers.



STEP 4


Install (1) locking caster on each side tube frame using (2) flat washers and (1) locking nut for each caster. Tighten the casters to the frame using a 17mm Socket, and hold the base of the caster stud with a thin wrench or needle nose pliers.

STEP 5



Install the (2) foam pads on each side frame by sliding it all the way to the back of the frame, and lay it down flat, firmly applying pressure to promote the adhesion.

STEP 6

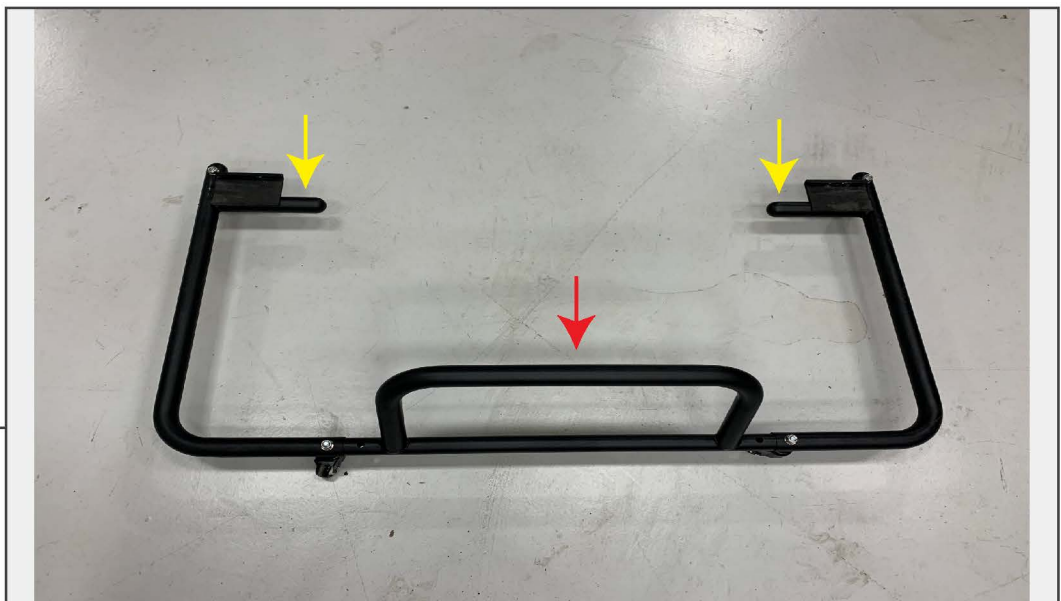

Install (1) Front Foam Insulator on the Front Tube Frame, as well as (1) Side Foam Insulator on each side of the frame.



STEP 7

Installation is now complete.