

LED HALO HEADLIGHTS WITH DRL & TURN SIGNALS

(2021-2024+ BRONCO)

INSTALLATION INSTRUCTIONS

CONTENTS

(1) LH Headlight
(1) LH Side Marker Lamp
(1) RH Headlight
(1) RH Side Marker Lamp
(4) 15mm Screws

TOOLS REQUIRED

7mm, 8mm, 10mm Sockets
Ratchet
Panel Removal Tool



STEP 1

Open the vehicle hood. Remove (9) plastic push clips from the radiator cover. Then, remove the cover from the vehicle.



STEP 2


Remove (4) 10mm bolts from the top of the grille.



STEP 3

If equipped, unplug the front camera and washer line from the grille assembly.


Firmly pull the grille away from the vehicle to disengage the metal retainer clips. Place the grille on a soft workable surface.

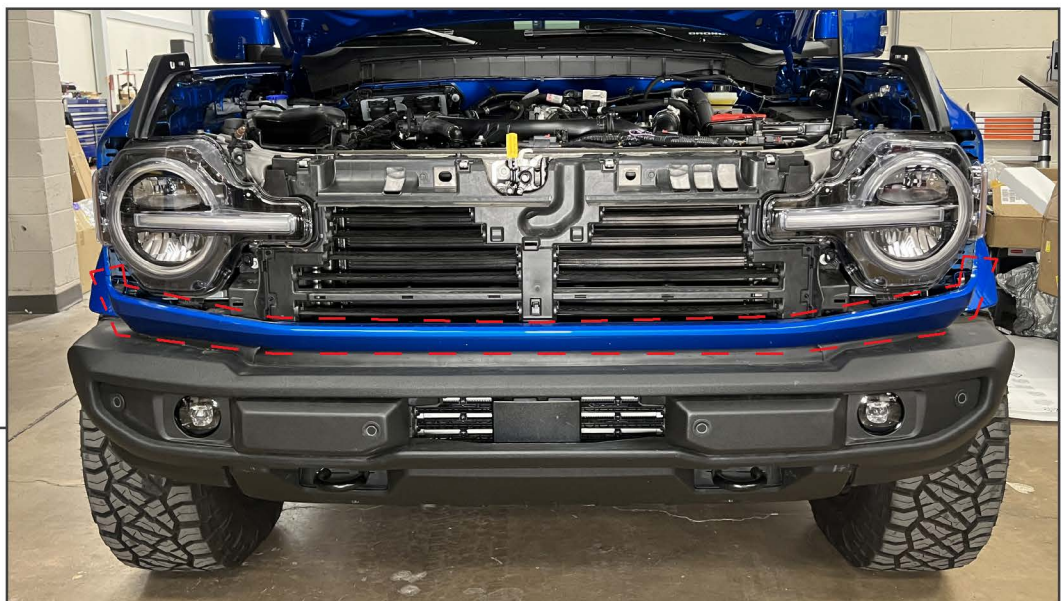

STEP 4

Turn the furthest forward fender flare retainer 90 degrees to disengage the front of the flare, then pull the front of the fender flare outwards. With the front of the flare away from the vehicle, firmly pull the front painted trim panel away from the vehicle, and set aside.

STEP 5

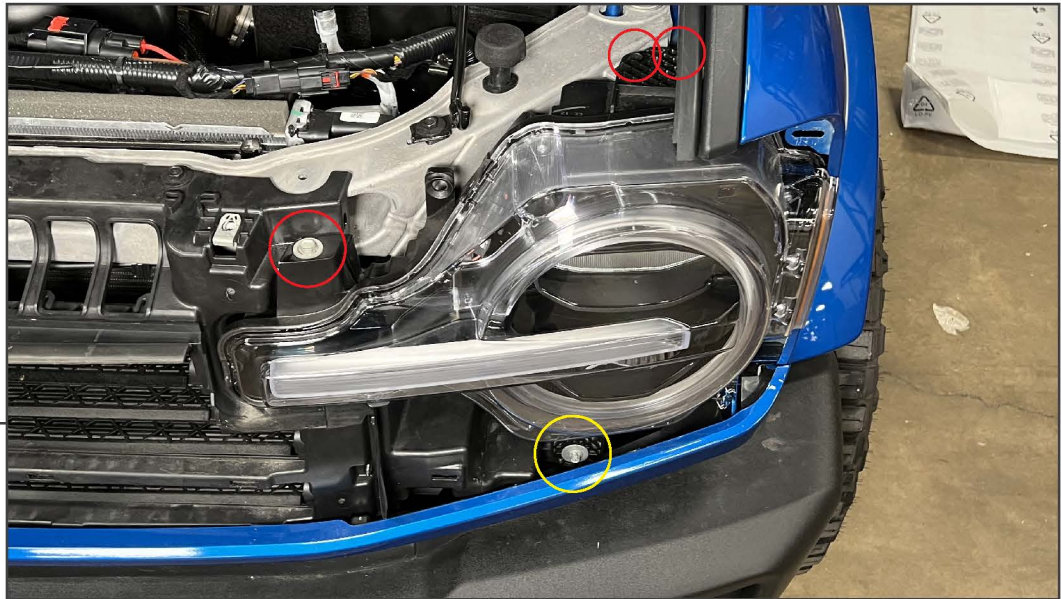

Remove (1) 10mm screw, (1) 10mm bolt, (1) 8mm screw, and (1) plastic push clip from the headlight assembly. Firmly pull the headlight assembly away from the vehicle to dislodge the retainer clip. Unplug the headlight electrical connector harness from the headlight.


Note: OEM hardware will be reused in the original locations. Ensure to note the hardware mounting locations.

STEP 6



Using the embossed labels in the side markers, place each side marker to the vehicle grille to align the mounting holes with the grille bolt holes. Secure each side marker to the grille using the included (4) 15mm screws.


STEP 7

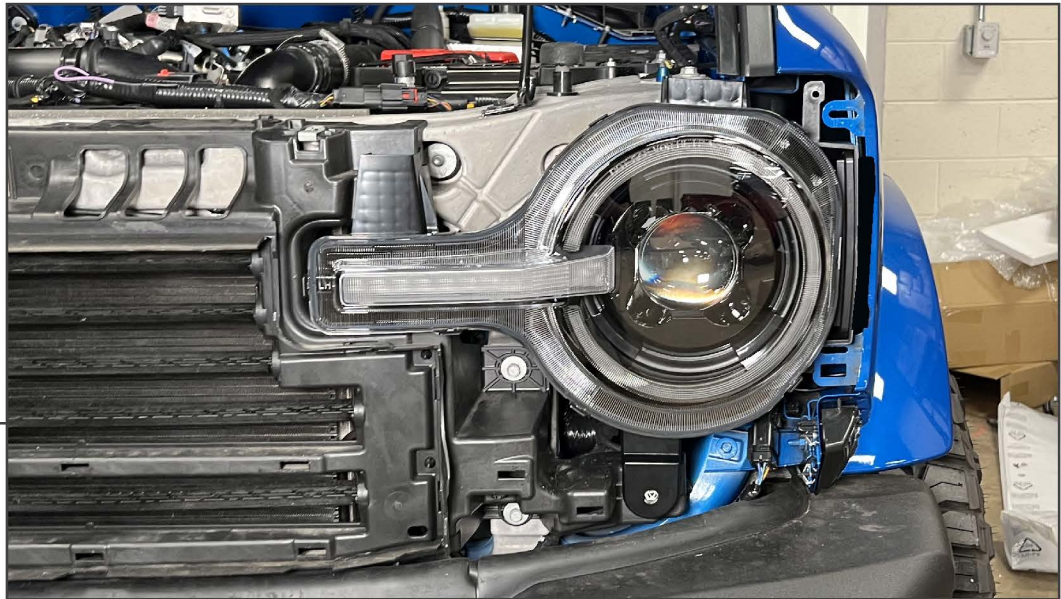

Plug the new headlight harness into the vehicle wiring harness. Then, fit the new headlight to the vehicle, ensuring the side marker harness is accessible. Secure the headlight into place using the original hardware.

Repeat this step for the opposite side of the vehicle.

STEP 8

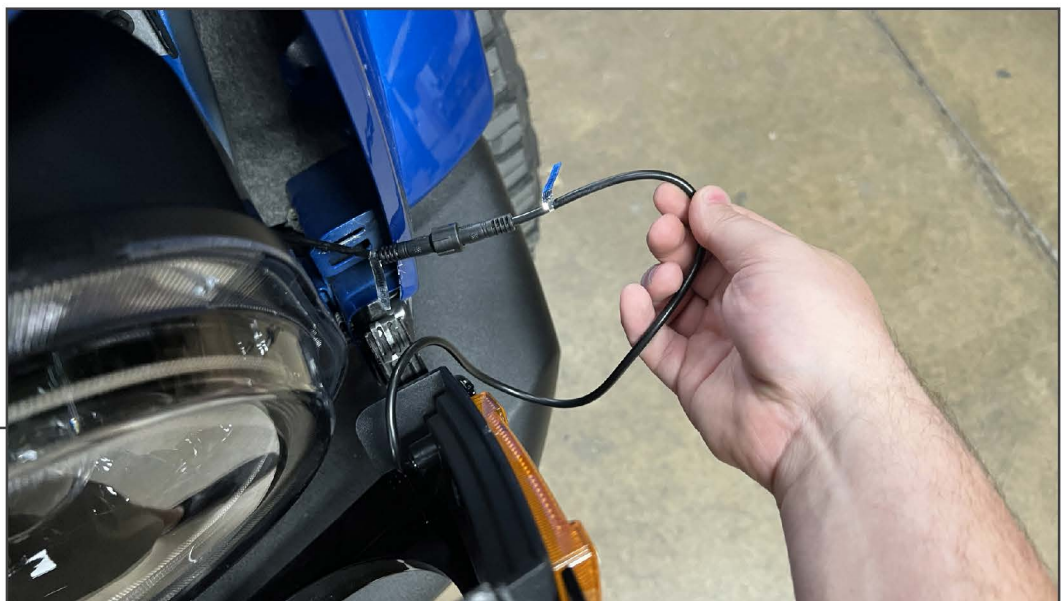

Re-install the vehicle lower painted trim panel to the vehicle by pressing evenly into place, and then re-secure the fender flare clips.

While holding the grille into place, connect the headlight side marker harness to the grille mounted side marker harness.



STEP 9

Re-install the vehicle grille and radiator cover following steps 1-3 in reverse order reusing the original hardware.

Installation is now complete.