



REAR STORAGE COMPARTMENT SAFE

(2021-2024+ BRONCO)

INSTALLATION INSTRUCTIONS

CONTENTS

(1) Storage Compartment Safe
(6) Self Tapping Phillips Screws
(2) Keys

TOOLS REQUIRED


Phillips Screwdriver

STEP 1



Lift the cargo area floor to reveal the storage compartment. Clean all items from storage compartment, if necessary.

STEP 2

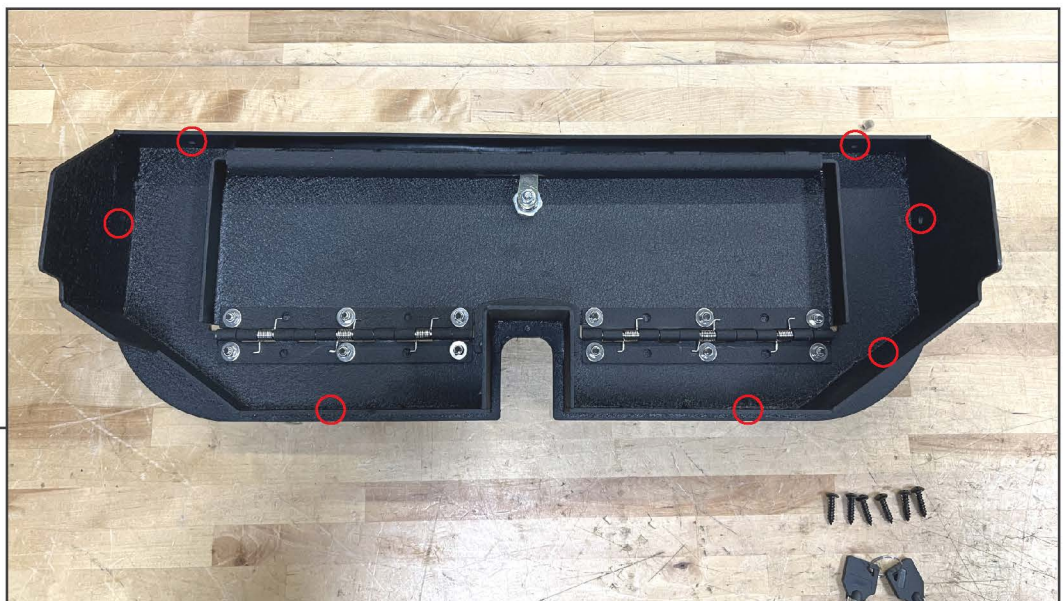

Locate the (6) screw holes in the bottom of the storage compartment safe. The holes will be utilized to secure the safe to the vehicle cargo area with self tapping screws.

STEP 3



Place the storage compartment safe into the vehicle storage compartment. Open the lid using the included key, and secure the sides of the safe to the storage compartment using the (6) Phillips self tapping screws.

STEP 4



Close the lid and lock into place using the included key. Fold the cargo area floor into place to conceal the safe.

Installation is now complete.