



CARGO AREA ENCLOSURE

(2021-2024+ BRONCO)


INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Molle Panel
- (1) RH Molle Panel
- (1) Center Molle Panel
- (1) Top Panel
- (1) LH 'L' Bracket w/ Clip Nuts
- (1) RH 'L' Bracket w/ Clip Nuts
- (1) LH Rear Mounting Bracket
- (1) RH Rear Mounting Bracket
- (4) Weatherstripping Strips
- (8) M8x1.25 x 30mm Flange Bolts
- (8) M8 x 18mm Nylon Spacers
- (20) M8x1.25 x 20mm Flange Bolts
- (8) M8x1.25 Flange Nuts
- (9) M6x1.00 x 20mm Allen Bolts
- (1) 4mm Allen Key


TOOLS REQUIRED

- 10mm, 12mm, 13mm Sockets
- Ratchet
- 4mm Allen Key

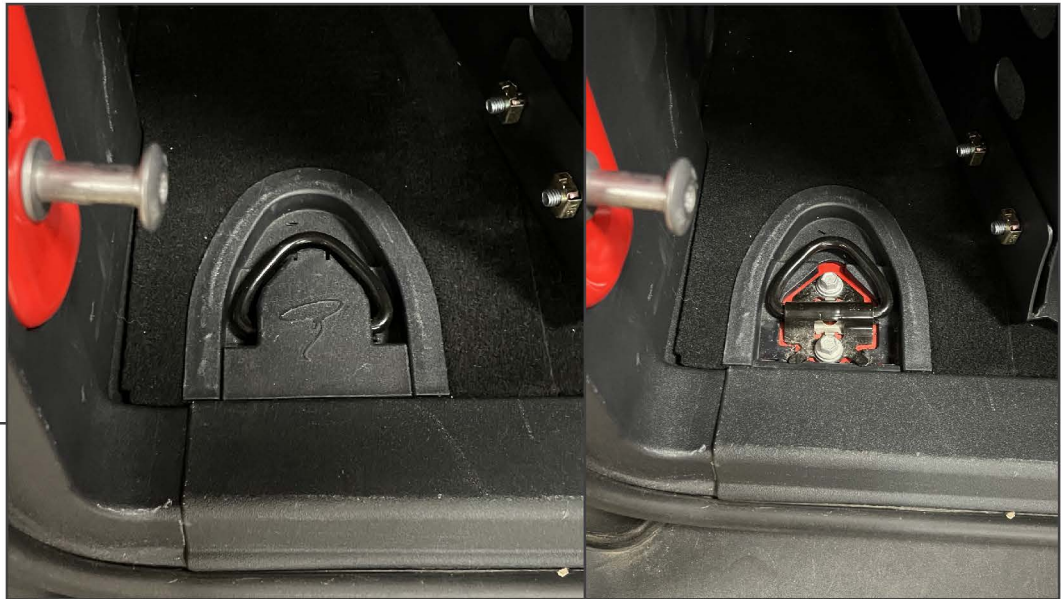

STEP 1

Open and clean the cargo area of all contents. Locate the (4) anchor points in the vehicle floor, and remove the plastic cover. Remove the (2) 10mm bolts from each anchor point. Remove all anchor points from the vehicle.

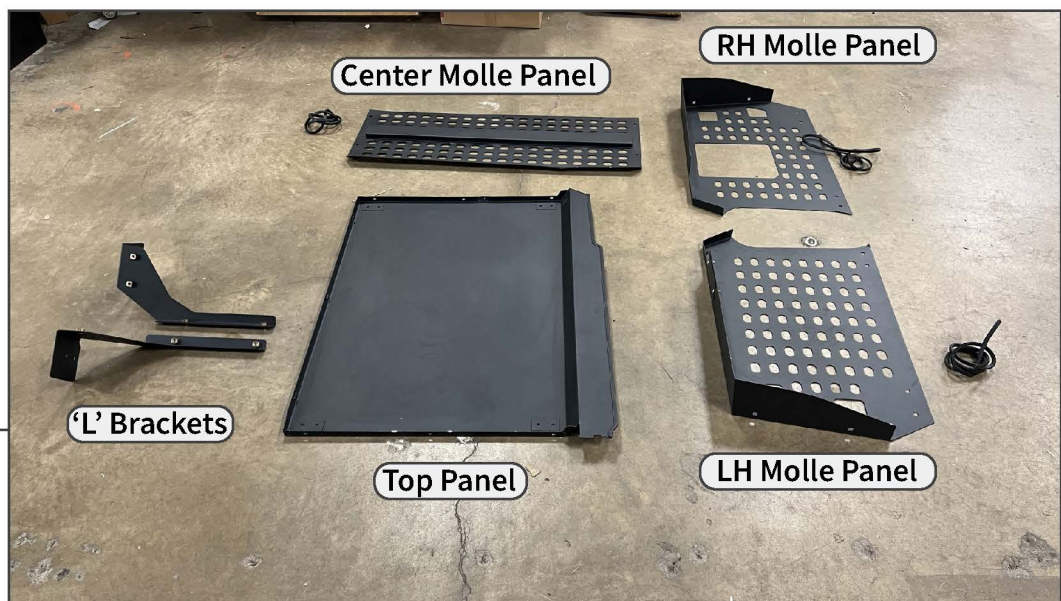

STEP 2

Lay out and identify the enclosure components.


STEP 3




RH Side Shown Above: Assemble the bottom of the 'L' bracket to the molle panel using (2) M8 x 20mm flange bolts. Assemble the RH lower mounting bracket to the molle panel using (2) M8 x 20mm flange bolts.

Repeat this step for the LH side molle panel and 'L' bracket.

STEP 4

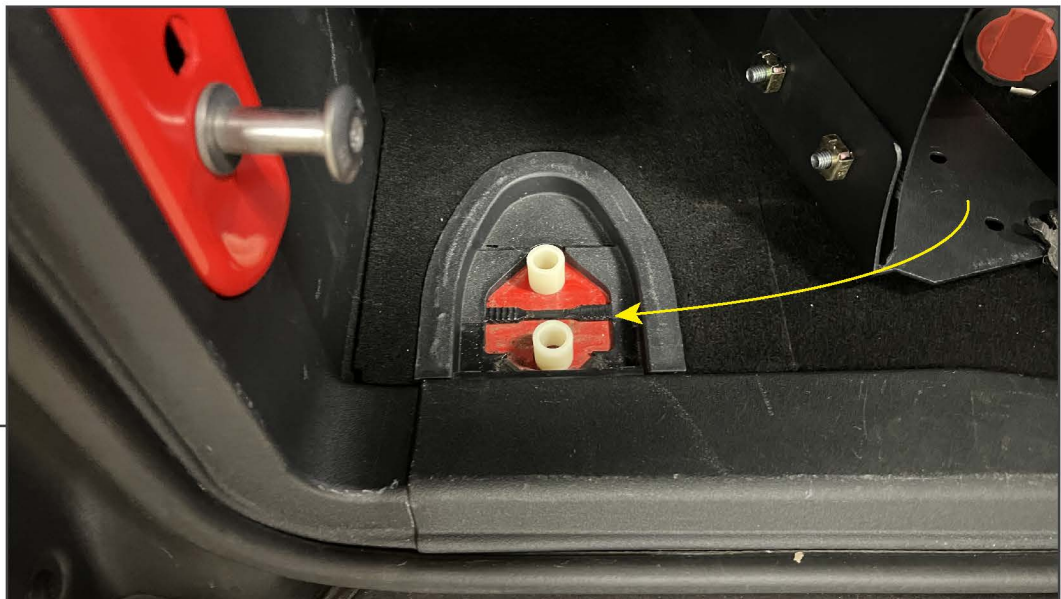


Place (2) M8 nylon spacers onto the anchor point bolt holes. Then, fit both assemblies into the vehicle cargo area along the appropriate side. The panels will align with the interior panels. Secure the molle panels to the anchor points using (2) M8 x 30mm flange bolts per mounting point.

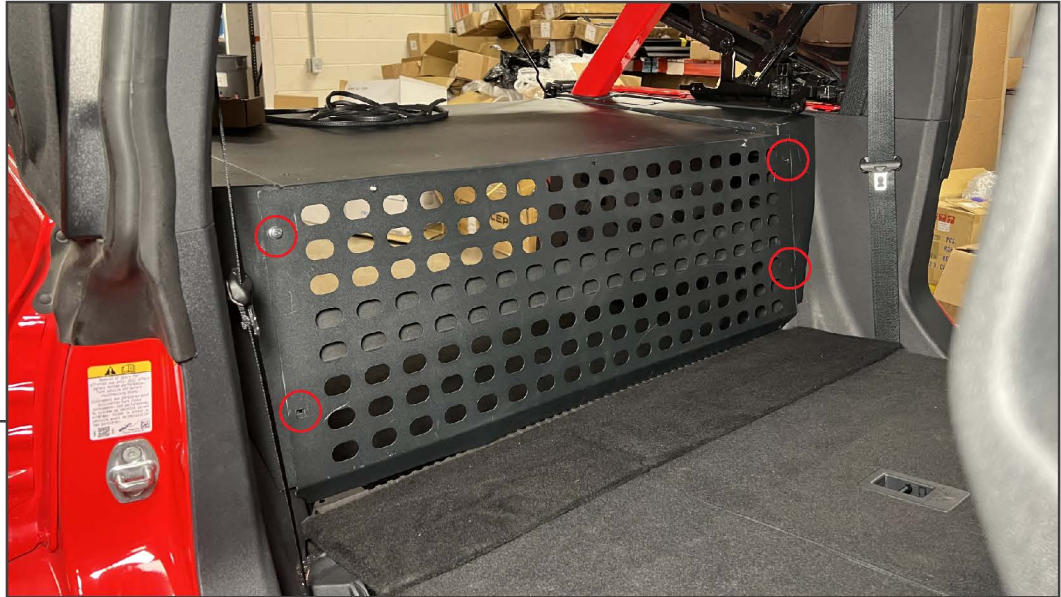

STEP 5

Fold the interior rear seats downwards to access the cargo area. Then, with a helper, align the center molle panel to the LH and RH 'L' brackets and secure using (2) M8 x 20mm flange bolts per side.

Note: Having a helper hold the mounting brackets from the cargo area to align the bolts through the molle panel may be necessary.

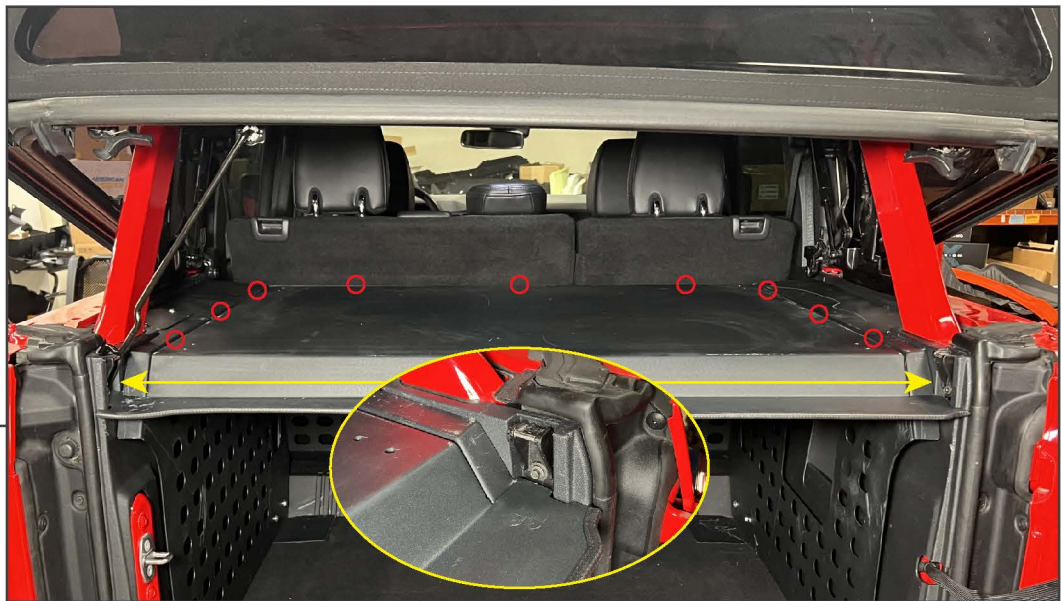

STEP 6

With a helper, lift the top panel in between the LH and RH molle panels. Secure the top panel into place using (9) M6 x 20mm Allen bolts.

Note for Soft Top Equipped Vehicles: Remove the (2) 8mm bolts from each rear window retaining latch on the vehicle body. Then, remove the latch from the body. While installing the top panel, fit the retaining latch into place and secure using the original (2) 8mm bolts.



STEP 7

Ensure all hardware is fully tightened. Install the OEM tie down points to the top panel pre-drilled holes using (8) M8 x 20mm flange bolts and (8) M8 flange nuts.

Install the included weatherstripping to the edges of the enclosure.

Installation is now complete.