

LED TAIL LIGHTS

(2021-2023+ BRONCO - WITH OEM HALOGEN TAIL LIGHTS)

INSTALLATION INSTRUCTIONS

CONTENTS

(1) LH Tail Light
(1) RH Tail Light

TOOLS REQUIRED

8mm, 10mm Sockets
Ratchet with Extension
Phillips Screwdriver
Plastic Pry Tool
Panel Removal Tool

STEP 1



Remove (4) Phillips head plastic push clips. Loosen the Phillips head inner portion of the clip, then pull the plastic clip body out of the vehicle.

Note: Add pressure under the plastic clip body to allow the inner portion of the clip to move outwards, if necessary.

STEP 2



Remove (2) 10mm screws from the tailgate trim panel. Remove the trim panel from the vehicle, and set aside.

STEP 3



In between the vehicle body and the rear bumper, remove (1) 10mm bolt.

Note: Loosening the (2) bumper mounting bolts under the tow hook may be necessary to gain access to the bolt.

STEP 4



Using a plastic pry tool, pull the vertical section of the tail light trim outwards.

STEP 5



Pull outwards on the horizontal portion of the tail light trim, then pull upwards to remove the trim from the vehicle.

STEP 6




Remove (1) 10mm bolt from the outside of the tail light assembly.



STEP 7

Remove (2) 8mm bolts from the inside of the tail light assembly. Firmly pull the tail light assembly away from the vehicle body to dislodge the alignment pin.

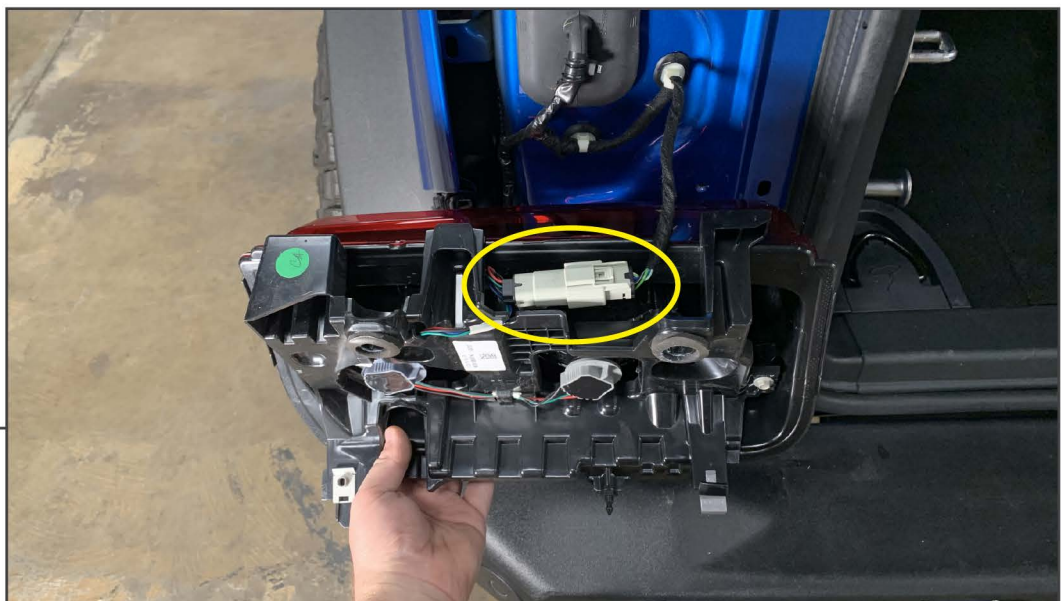

STEP 8

Unplug the tail light connector from the tail light by pressing the plastic push tap, and remove the tail light from the vehicle.

STEP 9



Fit the new tail light to the vehicle, and secure into place using the original tail light mounting hardware. Ensure the vehicle wiring harness is routed properly before fitting the tail light.

Plug the tail light harness into the new tail light, and re-install all vehicle trim panels using OEM hardware.

STEP 10



Repeat steps 1-9 for the remaining tail light assembly.

Installation is now complete.