

CONTENTS

- (1) LH Headlight
- (1) RH Headlight


TOOLS REQUIRED

- 8mm, 10mm Sockets
- Ratchet
- Panel Removal Tool

LED HEADLIGHTS


(2021-2025+ BRONCO)

INSTALLATION INSTRUCTIONS

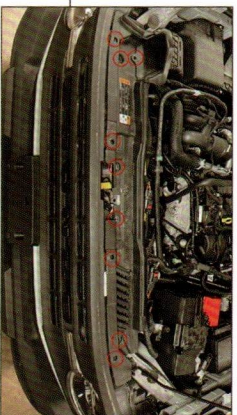


STEP 1

Open the vehicle hood. Locate and remove (9) plastic push clips from the radiator cover. Lift the cover and remove the cover from the vehicle.

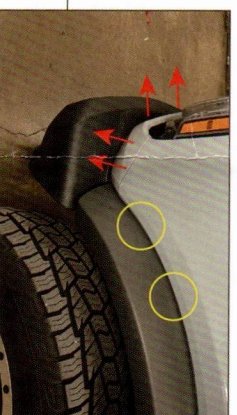


STEP 4

Un-latch the front (2) fender flare mounts. Pull the painted trim panel between grille and front bumper away from the fender, and use a pry tool to disconnect the various retaining clips from the front of the vehicle. Set the painted trim panel aside on a soft surface.

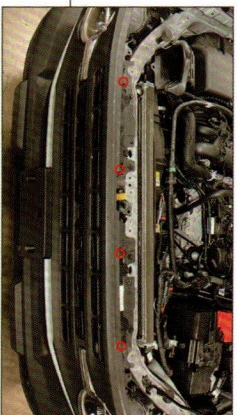

STEP 2


Locate and remove (4) 10mm bolts from the top of the grille.

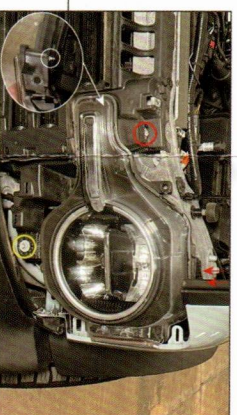

STEP 5

Along the top of the headlight, remove (1) 10mm screw and (1) plastic push clip. Along the inner-most side of the headlight, remove (1) 10mm bolt. Along the bottom of the headlight, remove (1) 8mm bolt.

Firmly pull the headlight away from the vehicle to dislodge the alignment stud behind the turn signal portion of the headlight assembly.

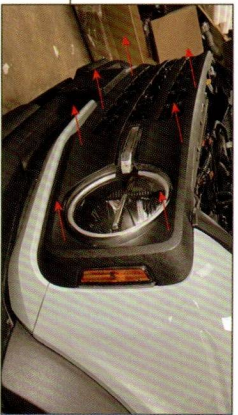

STEP 3

Firmly pull the grille away from the vehicle to dislodge the surrounding metal retaining clips from the chassis. Set the grille aside on a soft surface.

Note: It is suggested to work from the center of the grille outwards.



STEP 6

Unplug the electrical connector by pressing the connector tab.

Place the headlight on a soft workable surface.



STEP 7

Remove the original headlight alignment stud from the original headlight assembly, and transfer the stud to the new headlight. The stud will form new threads into the headlight assembly. Tighten until secure, do not over-tighten.



STEP 8

Plug in the new headlight into the vehicle harness, and secure the headlight to the vehicle using the original mounting hardware.

Repeat Steps 5-8 for the opposite side headlight.



STEP 9

Test the headlights for functionality. Once functionality is confirmed, re-assemble the vehicle following Steps 1-4 in reverse order.

Adjust the headlight beam using the adjuster along the top of the headlight housing.

Installation is now complete.

LED HEADLIGHTS

(2021-2025+ BRONCO)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Headlight
- (1) RH Headlight


TOOLS REQUIRED

- 8mm, 10mm Sockets
- Ratchet
- Panel Removal Tool



STEP 1

Open the vehicle hood. Locate and remove (9) plastic push clips from the radiator cover. Lift the cover and remove the cover from the vehicle.

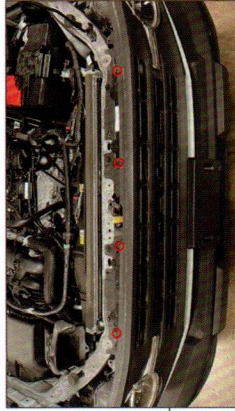


STEP 2

Locate and remove (4) 10mm bolts from the top of the grille.



STEP 4

Un-latch the front (2) fender flare mounts. Pull the painted trim panel between grille and front bumper away from the fender, and use a pry tool to disconnect the various retaining clips from the front of the vehicle. Set the painted trim panel aside on a soft surface.

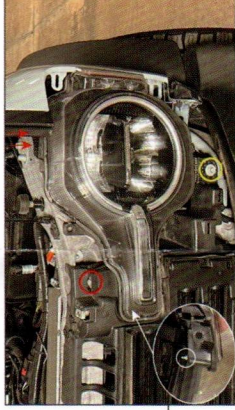

STEP 5


Along the top of the headlight, remove (1) 10mm screw and (1) plastic push clip. Along the inner-most side of the headlight, remove (1) 10mm bolt. Along the bottom of the headlight, remove (1) 8mm bolt. Firmly pull the headlight away from the vehicle to dislodge the alignment stud behind the turn signal portion of the headlight assembly.



STEP 3


Firmly pull the grille away from the vehicle to dislodge the surrounding metal retaining clips from the chassis. Set the grille aside on a soft surface.

Note: It is suggested to work from the center of the grille outwards.

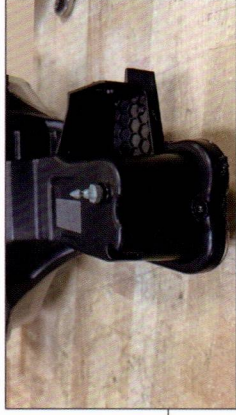

STEP 7


Remove the original headlight alignment stud from the original headlight assembly, and transfer the stud to the new headlight. The stud will form new threads into the headlight assembly. Tighten until secure, do not over-tighten.

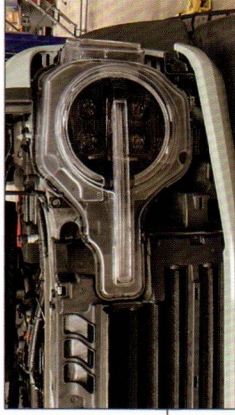

STEP 8

Plug in the new headlight into the vehicle harness, and secure the headlight to the vehicle using the original mounting hardware.

Repeat Steps 5-8 for the opposite side headlight.

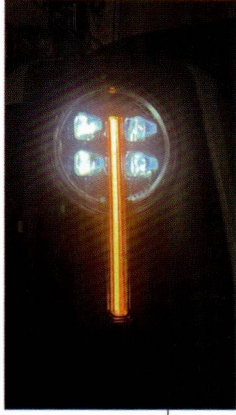

STEP 9

Test the headlights for functionality. Once functionality is confirmed, re-assemble the vehicle following Steps 1-4 in reverse order.

Adjust the headlight beam using the adjuster along the top of the headlight housing.

Installation is now complete.