



---

# BST ROCK RAILS

(2021-2025+ BRONCO - 2 DOOR)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

- (1) LH Rock Rail
- (1) RH Rock Rail
- (1) LH Front Bracket
- (1) RH Front Bracket
- (1) LH Rear Bracket
- (1) RH Rear Bracket
- (4) Cover Plates
- (8) M8x1.25 x 25mm Bolts
- (8) M8 Lock Washers
- (8) M8 Flat Washers
- (8) M6x1.00 x 16mm Allen Bolts
- (8) M6 Flat Washers
- (1) 4mm Allen Key

### TOOLS REQUIRED

---

13, 15mm Socket/Wrench  
Ratchet w/ 6" & 12" Extension

SKU # FB73995


**STEP 1**



Remove any side step/rock rails from the vehicle rocker panel, if applicable.

From under the vehicle, locate the (2) body mount locations on the vehicle frame.

**STEP 2**

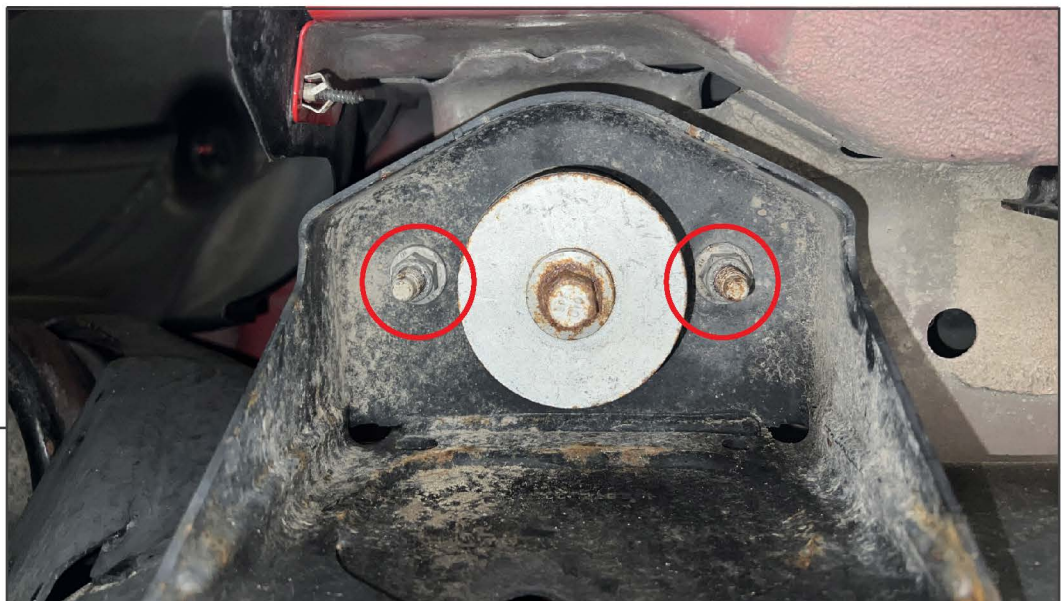


Remove the (2) 15mm nuts next to each body mount.

**STEP 3**




Identify the included mounting brackets using the diagram above.

**STEP 4**

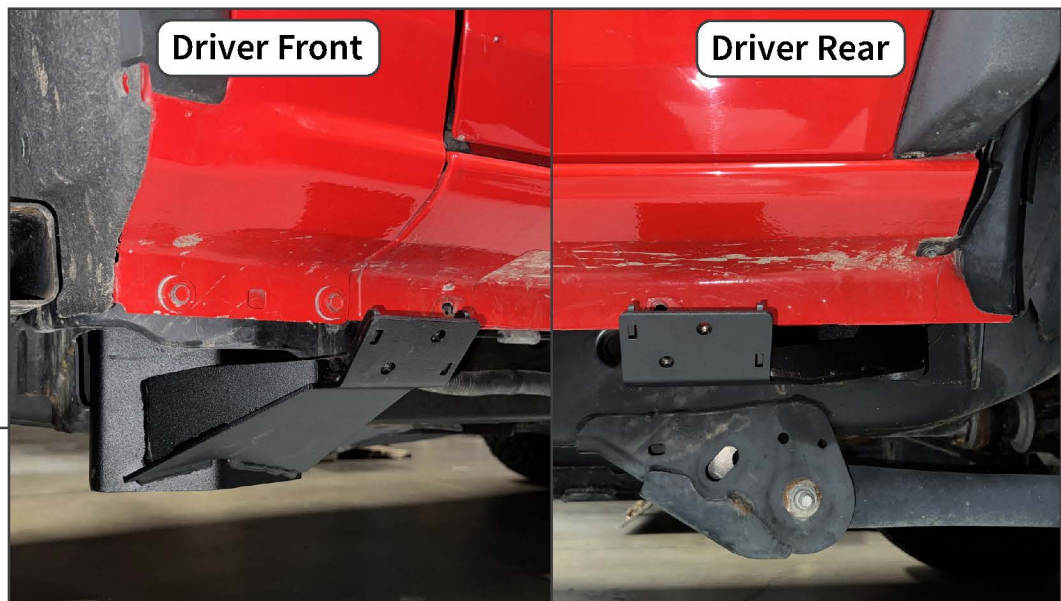

Fit the appropriate bracket to the vehicle frame and loosely secure using the original (2) 15mm nuts. Do not fully tighten the hardware at this time to allow for adjustments later.

**STEP 5**

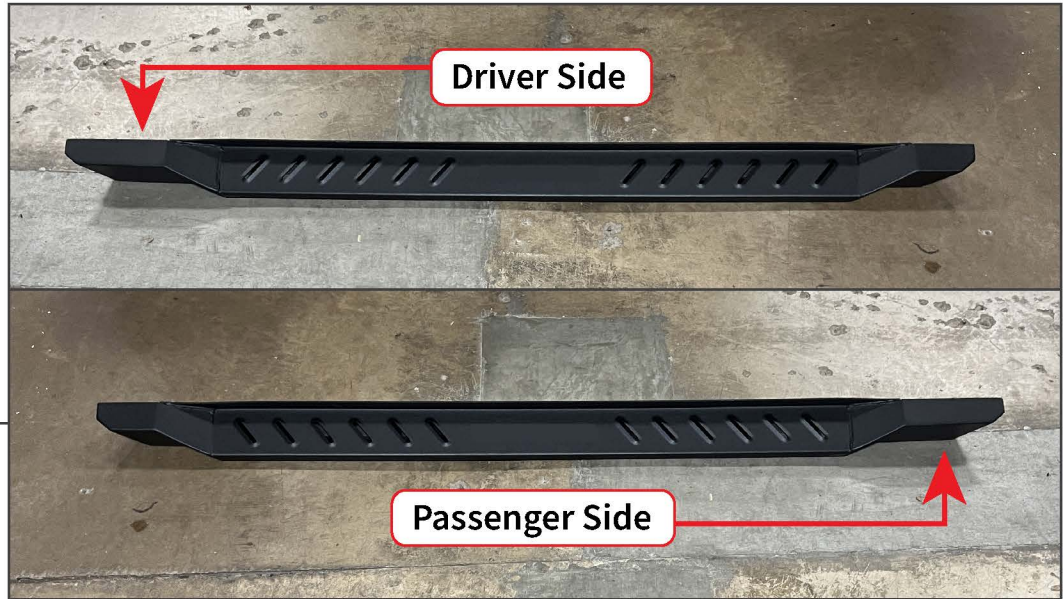


Identify the LH/RH rock sliders using the diagram above.

**STEP 6**



With a helper or floor jack, lift the appropriate rock slider to the mounting brackets. Loosely secure the rock slider through the rock slider cutout using (4) M8 x 25mm bolts, (4) M8 lock washers, and (4) M8 flat washers.

---

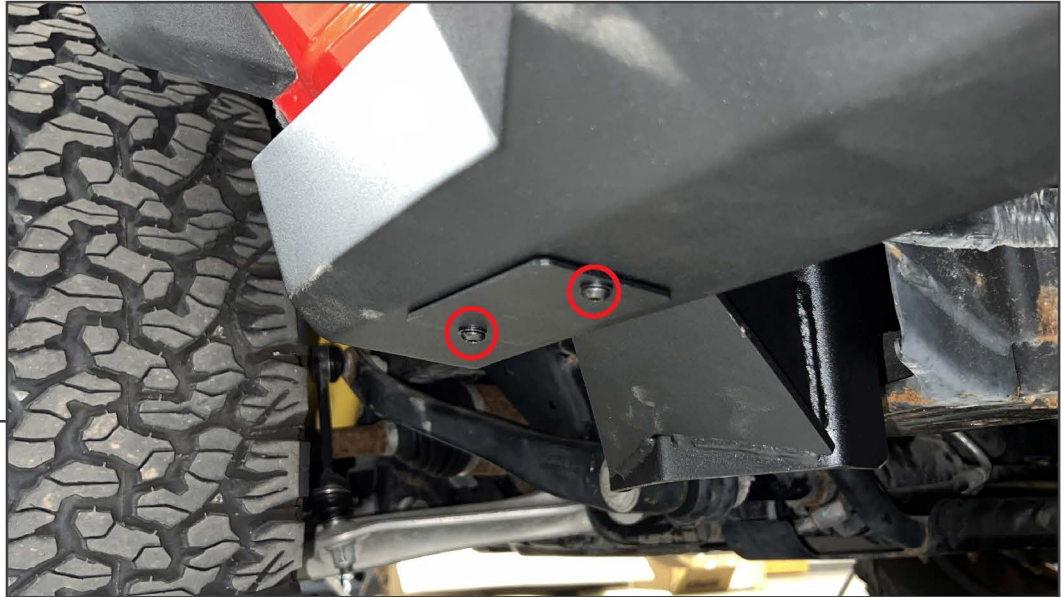**STEP 7**

Begin to adjust the rock sliders, ensure to note visibility between the rock slider and the vehicle rocker panel. Tighten the mounting brackets to the vehicle frame until secure. Then, tighten the (4) M8 bolts to secure the rock slider to the mounting brackets.

Install the cover plates to the bottom of the rock slider using (2) M6 x 16mm Allen bolts and (2) M6 flat washers.

---

**STEP 8**

Repeat Steps 1-7 for the remaining rock slider.

Installation is now complete.