
FB7435 3INCH SIDEBARS 2021 FORD BRONCO 4DR

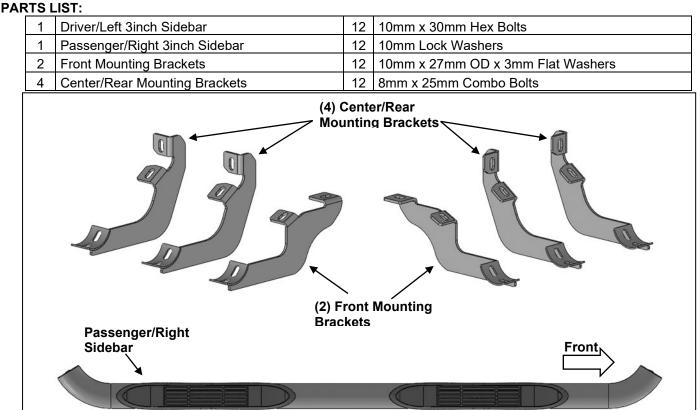


PROCEDURE:

- 1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.
- 2. Starting from underneath the Passenger/Right body panel, locate the front mounting location and the threaded holes in the body panel, (Figure 1). Remove the plastic plugs covering the holes.
- 3. Select the Passenger/Right Front Mounting Bracket. Attach the Mounting Bracket to the front location with (2) 10mm Hex Bolts, (2) 10mm Lock Washers and (2) 10mm Flat Washers, (Figure 2). Do not tighten hardware.
- 4. Repeat Steps 2 & 4 to attach (2) Center/Rear Mounting Brackets to the center and rear locations, (Figures 3—5). Do not tighten hardware.
- Select the Passenger/Right Sidebar. Place the Sidebar onto the cradles of the Mounting Brackets.
 IMPORTANT: Do not rotate or slide the Sidebar front to back or damage to the finish may result. Attach the Sidebar to the Mounting Brackets with (6) 8mm Combo Bolts, (Figure 6). Do not tighten hardware.
- **6.** Level and adjust the Sidebar and tighten all hardware.
- 7. Repeat **Steps 1—7** to attach the Driver/Left Sidebar.
- 8. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

To protect your investment, Do not use any type of polish or wax that may contain abrasives that could damage the finish. Mild soap may be used to clean the Sidebars.

FB7435 3INCH SIDEBARS 2021 FORD BRONCO 4DR

Passenger/Right side Installation Pictured

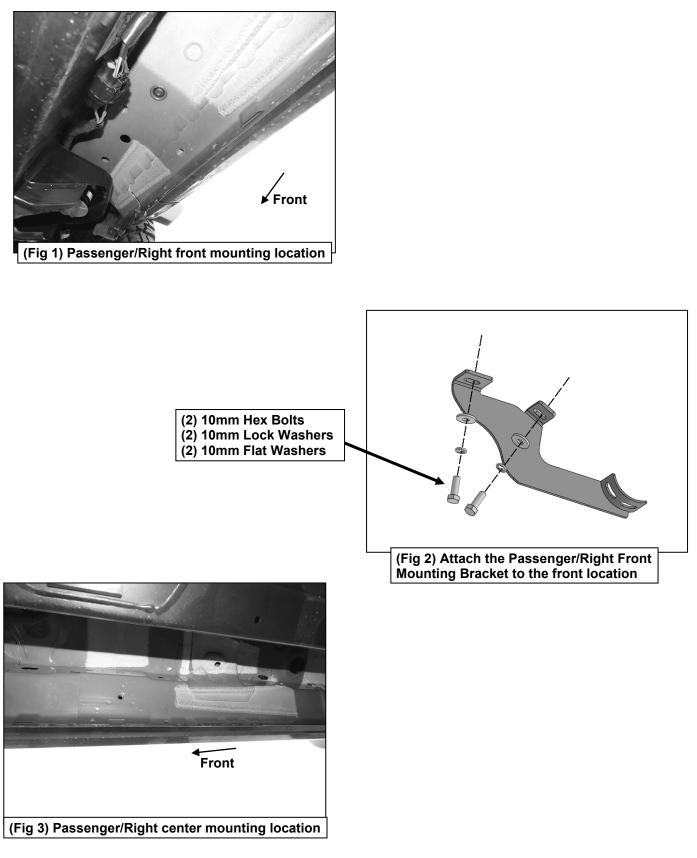

<section-header><page-header><page-header><section-header>

Rear

(Fig 5) Passenger/Right rear mounting location

Front Front (2) 8mm Combo Bolts (Fig 6) Attach the Passenger/Right Sidebar to the Mounting Brackets