JK/JKU FullShade Instructions

Start by clipping the center small Bungee Ball cord, on the front edge of the mesh shade, to your center footman loops on the top of the windshield frame. While still attached, drape the mesh shade over the center roll bar. Simply leave it like this while installing the bungee balls and straps.


Next at one front corner of the Jeep. Start with the Nylon strap just behind the corner plastic. Loop the strap under the roll bar and up. The buckle should be orientated to the outside of the vehicle.

Now with one hand grasp the strap, and the other hand grasp the buckle. With a see saw motion work the strap forward, between the roll bar and the plastic. Keep working it forward as far as you can! Repeat for the opposite side.



Keep working it forward as far as you can! The strap will have to pass the two flares, one on either side of the roll bar. This is all hidden under the roll bar padding. Repeat for the opposite side.

Roll bar corner detail, without padding. Right side of vehicle. Looking down.

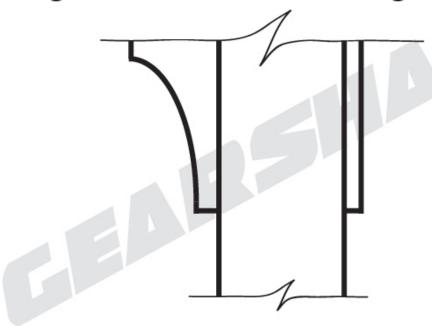

Take the corner of the mesh shade top and put the strap through the grommet. Place the open end of the strap through the ladder lock part of the buckle. Don't tighten just yet! Attach the other side, then pull them both tight.





Working backwards from the front, pass a bungee through each of the grommet holes down each side of the mesh shade top. Wrapping the cord around the roll bar and back around the ball.



At the back corner of the mesh shade top, pass a bungee through the grommet. Stretch the cord around the rear shoulder seat belt mount, then back to the ball.

You may have to rotate the cord so the ball does not hit your stop top frame.

