



ADVENTURE MIRRORS

(1966+ WRANGLER CJ, YJ, TJ, JK, & JL)

INSTALLATION INSTRUCTIONS

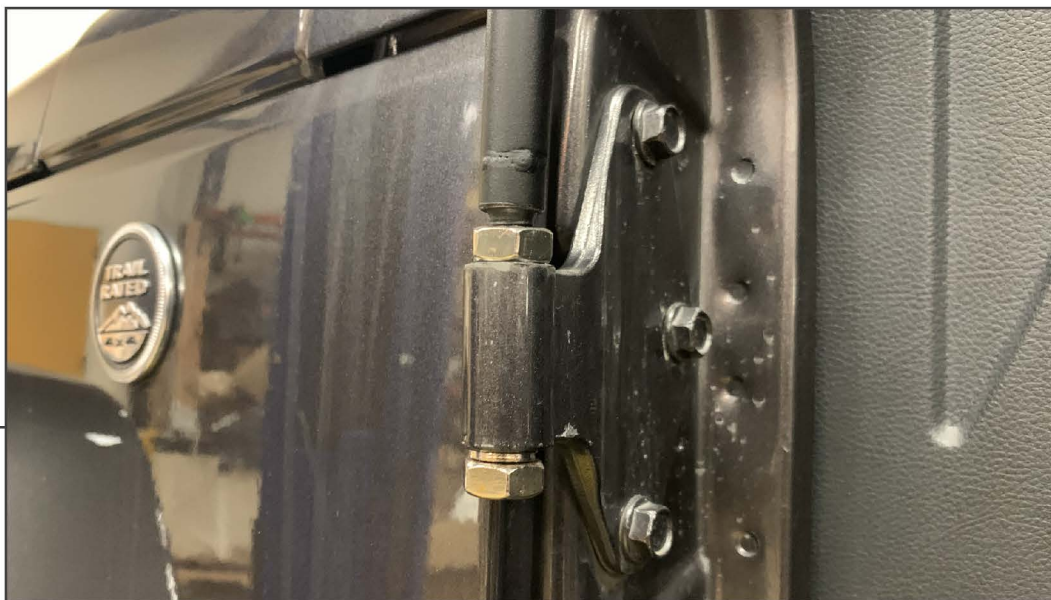
CONTENTS

(2) Mirrors
(2) Black Powder Coated Mirror Bracket
(4) M10x1.50 Flange Nuts
(2) M10 Lock Washer
(4) M8 Stainless Flat Washers
(2) M8x1.25 20mm Stainless Bolt

TOOLS REQUIRED

13mm Box End Wrench
15mm Box End Wrench
4mm Allen Wrench

SKU # J102352

STEP 1

Install the door hinge post onto the vehicle's door hinge bracket. Use (2) Flange Nuts and (1) Lock Washer per post.

STEP 2

Install the mirror to the post using (1) Washer and (1) Bolt per mirror.



STEP 3

Adjust the mirror as needed for your driving position. Once adjusted, tighten the (3) Allen screws on the back of the mirror. The Allen screws secure the mirror in place.

Installation is now complete.