

DELTA®


DELTA XENON HEADLAMP KIT

7" Round Replacement for earlier model cars, trucks, vans and Jeep Wranglers 1997-2006

DELTA TECH INDUSTRIES, LLC | (909) 673-1900

INSTALLATION INSTRUCTION

1. Remove your existing headlamps by unscrewing the bezel surrounding the headlamp.
2. Remove the retaining ring holding the headlamp.
3. Unplug the socket in the back of the headlamp element.
4. Plug in your DELTA headlamp element and install into the headlamp bucket using your existing screws
5. Tighten the bezel back on.

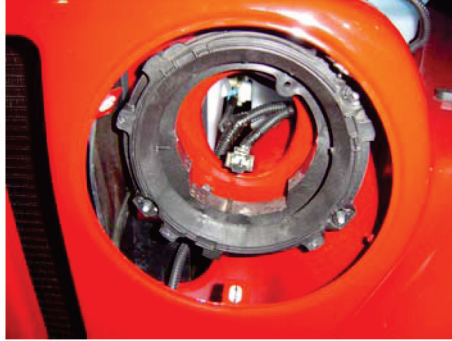

6. If your DELTA Xenon headlamps are equipped with "City Lights" (small, low wattage bulbs on the side of your reflector). These "City Lights" could be used as your extra parking lights, Daytime Running Lights or directional lights. For Parking Lights, just tap your City Light to each respective existing parking light. For DRL application, you may tap into your ignition switch line. For Directional Lights, replace the miniature bulbs with amber color bulbs and tap each light to the respective existing directional light line.

"7" Standard Halogen Headlamp has been tested for D.O.T. photometric compliance."

NOTE: If you purchased Part #01-1148-50 or #01-1148-50X use **silicone rings** (supplied) when installing headlights to improve fitment.