




## DELTA XENON HEADLAMP KIT- 01-1148-50(X)

### 7" Round Replacement for Jeep Wranglers JK 2006-2012

#### INSTALLATION INSTRUCTION

1. Remove your existing headlamps by unscrewing the bezel surrounding the headlamp.
2. Remove the retaining ring holding the headlamp.
3. Unplug the socket in the back of the headlamp element.
4. Plug in your DELTA headlamp element into H13 Adapter (provided) and the other terminal of your adapter into The factory harness and install into the headlamp bucket using your existing screws
5. Wrap around headlamp lens Silicone O-Rings (provided) for better fitment and shock protection.
6. Tighten the bezel back on.
7. If your DELTA Xenon headlamps are equipped with "City Lights" (small, low wattage bulbs on the side of your reflector). These "City Lights" could be used as your extra parking lights, Daytime Running Lights or directional lights. For Parking Lights, just tap your City Light to each respective existing parking light. For DRL application, you may tap into your ignition switch line. For Directional Lights, replace the miniature bulbs with amber color bulbs and tap each light to the respective existing directional light line.

THESE HEADLAMPS ARE D.O.T. COMPLIANT AND ARE HIGHWAY LEGAL

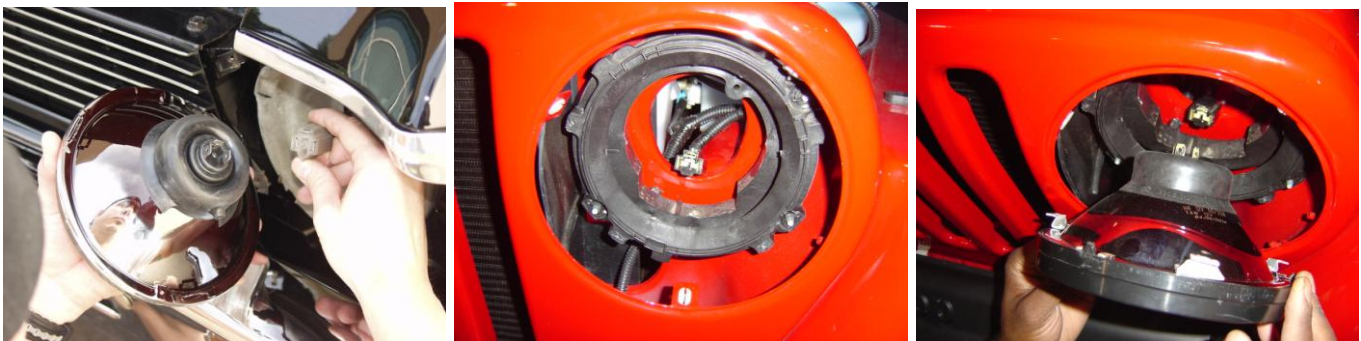

**NOTE: When installing be sure rubber boot is snugly fitting over the reflector providing a good seal against moisture. In the event any moisture is trapped inside the headlight causing it to steam up, please follow these procedures: Peel back the rubber boot and carefully remove the bulb by releasing first the bulb spring. Allow vapor to escape by holding the headlight in sunlight or using a hair dryer. When completed, assemble the bulb and re-seal the boot around the reflector.**

**DELTA TECH INDUSTRIES, LLC - Ontario, CA 91761, U.S.A.**

Web: [www.deltalights.com](http://www.deltalights.com) E-mail: [tech@deltalights.com](mailto:tech@deltalights.com)