



Barricade Adventure HD Bumper Installation Instructions (07-17 Wrangler 2 & 4 Door)

Contents

- (1) - Bumper
- (4) - Bolts
- (8) - Washers
- (8) - Lock Washers
- (4) - Nuts
- (8) - Plastic Screw Inserts
- (8) - Phillips Screws
- (2) - 3/4" D-Rings

TOOLS REQUIRED

- Flathead Screwdriver
- Phillips Screwdriver
- 13,15,17,18,19mm Sockets
- 13, 15, 17, 18 19mm Wrench



STEP 1 // Remove the 6 pins holding the splash guard onto the vehicle



STEP 3 // Remove the 2 push pins holding the top cover onto the vehicle



STEP 2 // Next, unplug the factory fog lights and loosen the (8) 19mm nuts holding the front bumper to the support beam of the vehicle.



STEP 4 // To remove the fog lights, loosen the 4 phillips screws on each light.



STEP 5 // Install the (2) LED Fog Light Brackets to the fog light mounts of the bumper using the (4) M6 torx bolts, washers, and nuts.



STEP 8 // In most cases, the fog light harness will need to be extended. Cut and splice the wires to the appropriate length.



STEP 6 // Using the supplied screws, secure the fog light housing to the bumper.



STEP 9 // Install supplied D-rings.




STEP 7 // Slide bumper into place, and secure using the supplied hardware.



JL Front Bumper Removal 2018+ JL

Tools Required:

Trim Panel Removal Tool
Ratchet
7mm, 8mm, 16mm, 18mm Sockets
10mm Wrench
Torx Bits

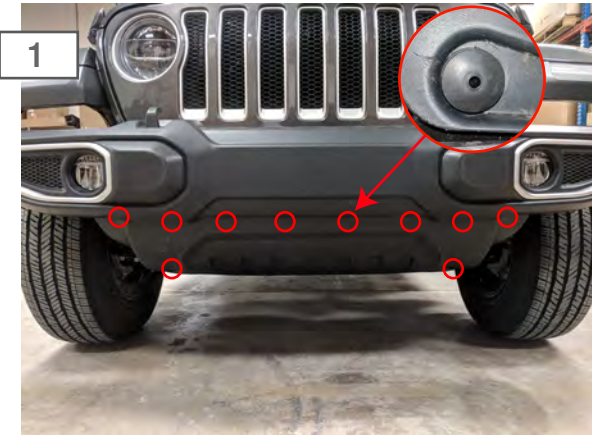

From under the vehicle, remove the (8) plastic push pins securing the factory splash shield to the vehicle. Next remove the (2) 8mm screws, and remove the splash shield from the vehicle.



Remove the (2) upper plastic push pins securing the plastic cover to the frame rails.



Carefully unplug the foglight wiring harness from the connector.




From under the vehicle, access and remove the (8) 18mm nuts, and (4) 18mm bolts securing the factory bumper to the vehicle. Then fully remove the bumper from the vehicle.



Remove the factory foglight harness from the factory bumper using a trim panel removal tool. **Note, the factory bumper is two pieces. You will have to remove all (24) 7mm screws to gain access to the foglight harness.

6

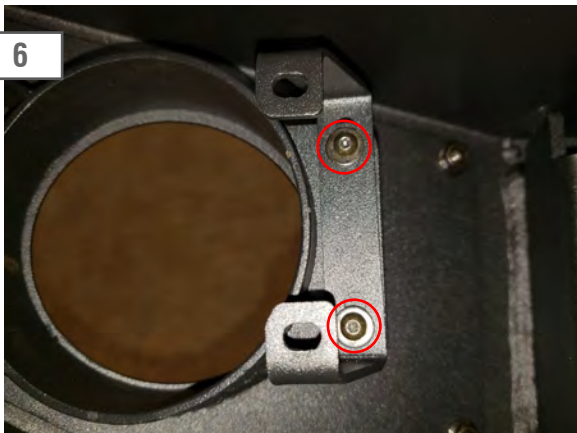

Install the (2) LED fog light brackets to the fog light mounts of the bumper using the (4) M6 torx bolts, washers, and nuts.

7



Insert the (2) dual bolt plates through the back side of the bumper mount and secure using the plastic holders.