


PART # 1191

97-06 Jeep Wrangler Ram Air Hood

Notice: Pre fit Before Painting!
Painted or Altered Parts are Non-Refundable!

STEP 1: Remove the safety catch from the factory hood and install it with Locktite® to your new hood with the supplied one inch bolt and lock washer.

STEP 2: Bolt the hood to the top of the hinges with the supplied 3/4 inch bolts and washers **as shown in fig.A.**

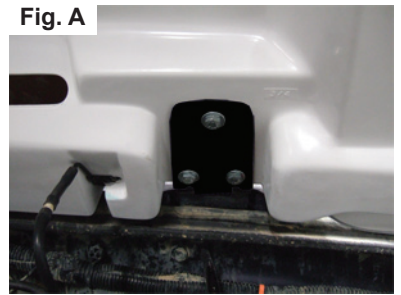

STEP 3: Adjust hood until proper alignment with matching panels is achieved.



WARNING: MAKE SURE THE SAFETY CATCH IS WORKING PROPERLY!

STEP 4: Make sure when the hood is closed you can hear the safety catch “click” into the matching panel on the radiator support. After you here it click, test it to be sure it’s working properly by grabbing the front edge of the hood and slowly pulling upward with a steady even pressure. If the hood opens it’s not adjusted properly.


STEP 5: Install the supplied windshield washer squirter to the underside of the hood with the small black screws. Reinstall the squirter hose to the squirter **as shown in fig.B.**



STEP 6: Install the catch brackets, rubber bumpers, and prop rod to the hood **as shown in fig.C.** The catch brackets get installed with the stock hardware. Use the small torx screws to install the bumpers and the silver Phillips screws install the prop rod. Next, install the spring with one of the supplied silver Phillips screws **as shown in fig.D.** Remove the protective backing from the prop rod clip and stick it to the hood with the open end of the clip facing the front of the car **as shown in fig.E.**

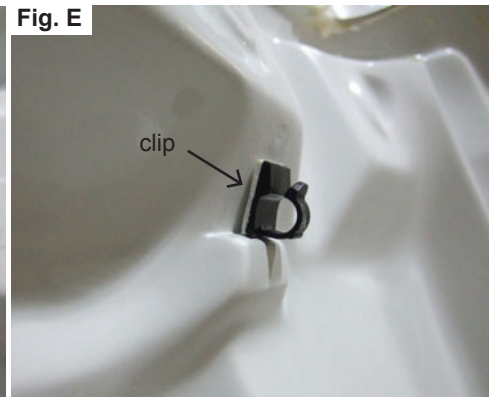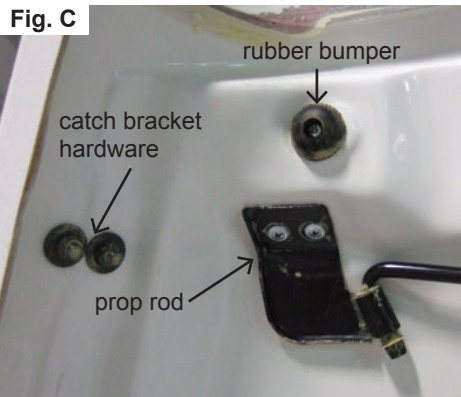

STEP 7: Use the small black screws to install the billet grille to the pre-drilled holes in the ram air opening **as shown in fig.F.**

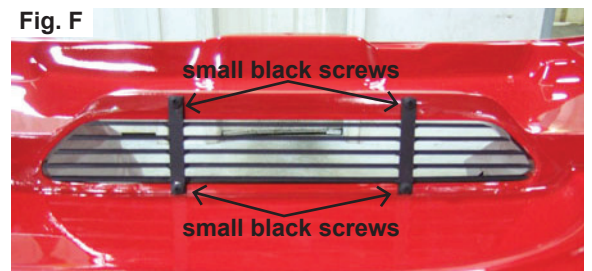

PART #1191		
QTY	DESCRIPTION	HARDWARE #
6	SMALL BLACK SCREWS	10947-01704
3	SILVER PHILIPS SCREWS	32144
2	TORX SCREWS	MC90925A194
2	SQUIRTERS	BER001
1	PROP ROD CLIP	CLACC6-BK
2	TUBING CLIPS	WE2546

