

# graBars

## Front YJ and TJ GraBars Handle

### Installation Instructions

#### Step 1:

Remove the (2) 8mm bolts (photo on right) in the inside upper-corner of the windshield frame, using a T40 Torx wrench.

#### Step 2:


Place the GraBar to align with the hole in the mounting bracket with the two holes in the rollbar mount. Reinstall the two factory bolts previously removed.

**NOTE:** Make sure you have the left handle for the left side, and the right-handle for the right side

**Repeat steps 1 & 2 for the other side.**

Congratulations on installing your new Solid Steel GraBars; we thank you and your family for partnering with Welcome Distributing! If you have any questions or need any additional help, don't ever hesitate to contact us!

**If you have a late 2004 – 2006 TJ, See back side of instructions for Plastic Trim modifications!**

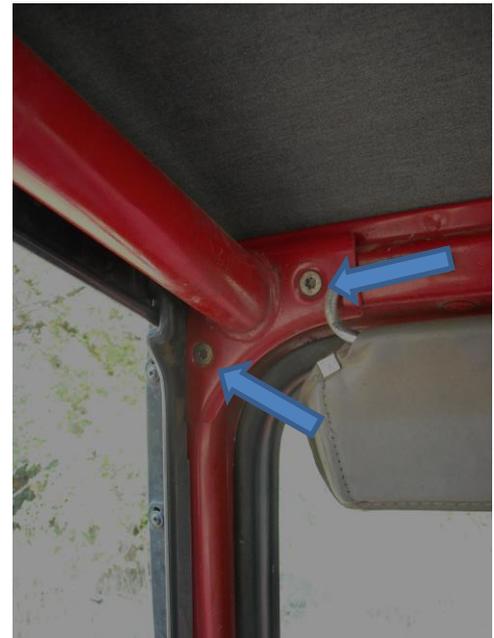

YJ shown in photos

# graBars

## TJ 2004-2006 GraBars

### Installation Supplement

**Step 1: Remove Plastic trim by removing one screw from each visor and 3 screws down each A Pillar.**

**Step 2: Drill 1-1/2" hole in plastic as shown in photo below.**

**Step 3: Slip the plastic trims over the handles and install left and right side GraBars as per instructions on front side.**

**Step 4: Reinstall the plastic trim and visor.**

