


PARTS INCLUDED:	QTY
Driver Side Step	1
Passenger Side Step	1
Uses Factory Hardware	



## INSTRUCTIONS:


**Step 1:** Starting with the driver side, remove the three body mount bolts with bushings. and set aside. *Fig. A*

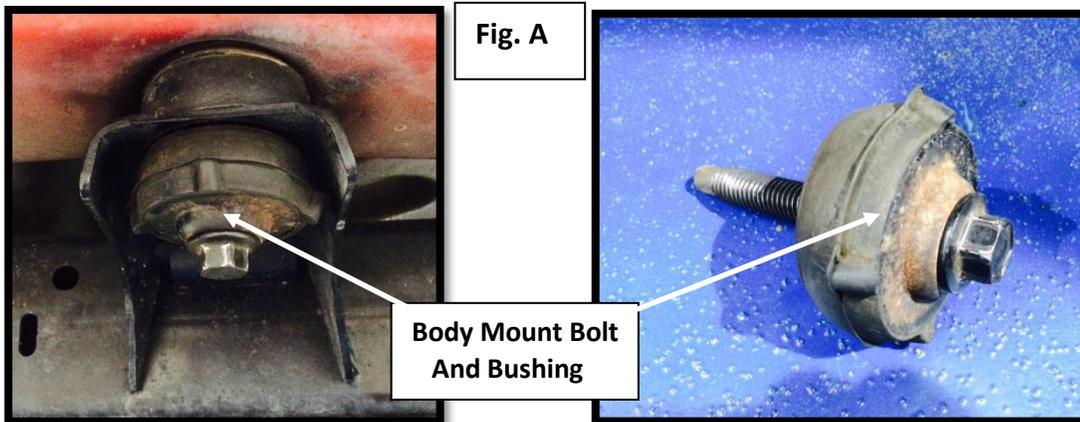


**Step 2:** Next, install the factory body bolts and bushings into the Nerf-steps center and rear bracket with the bushing on top of the mount creating an assembly. *Fig. B*



**Step 3:** Carefully raise step up into position aligning the brackets with the factory mounts and thread the bolts loosely. *Fig. C*

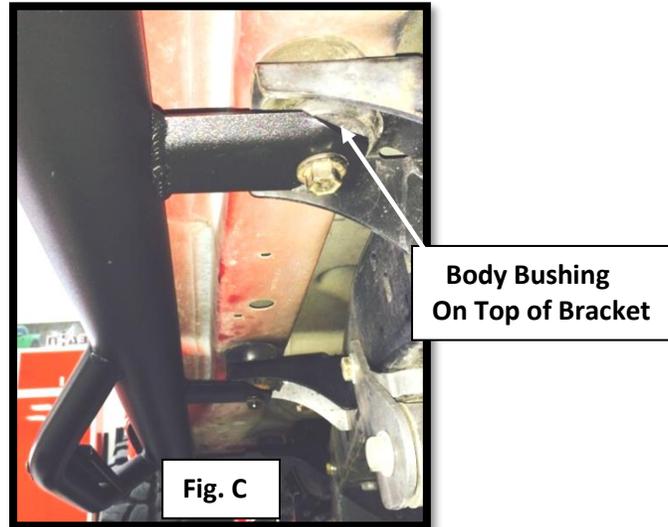

**Step 4:** Next, install the front body bolt and bushing and loosely tighten... **NOTE:** *Be sure the round opening in the step bracket fits around the upper body bushing and set s flush with body mount not to pinch the bushing. Fig. D*

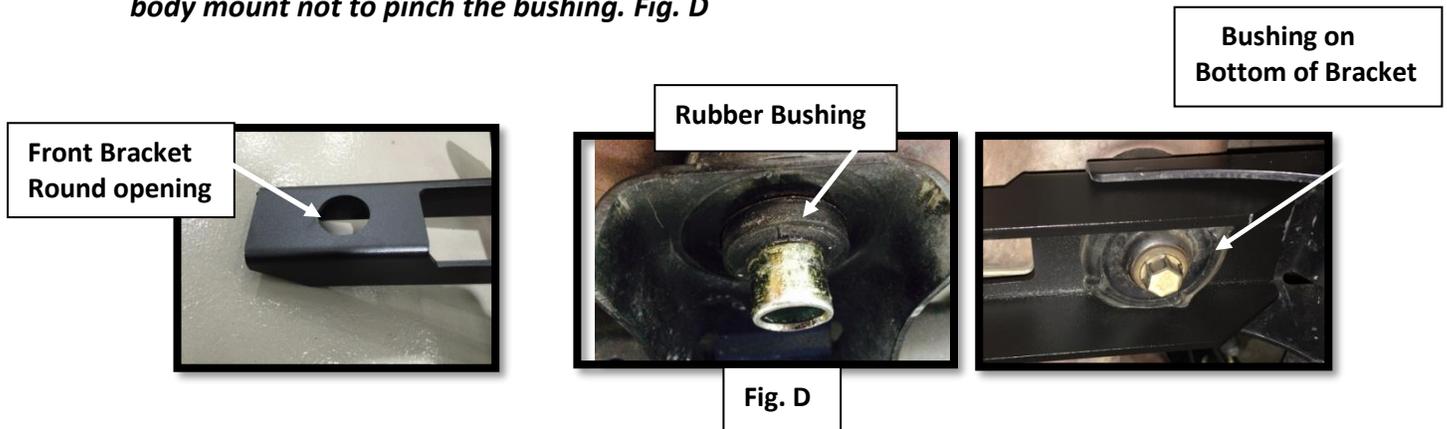

**Step 5:** Tighten all hardware to factory specs starting with the center bracket then front and rear.

**Step 6:** Repeat steps 1-4 with passenger side. **NOTE:** *Check all factory hardware periodically for tightness to ensure safety and longevity of steps.*



PART NUMBER: **J9746, J9756U**

PRODUCT: **NERF STEPS**

APPLICATION: **97-06 TJ JEEP**