



ATTACK STUBBY WINCH FRONT BUMPER

(2007-2021 Wrangler JK, JL)

INSTALLATION INSTRUCTIONS

CONTENTS

- | | |
|--------------------------------|-----------------------------|
| (1) Bumper | (12) M4 x 0.7 x 15mm Screws |
| (1) Over-Rider | (12) M4 Lock Washers |
| (2) Block Off Plates | (20) M4 Flat Washers |
| (2) D-Rings | (8) M4 Nuts |
| (4) Bolt Plates | (4) Plastic Stud Retainers |
| (2) Fog Light Adapter Brackets | |
| (4) M12x1.75 35mm Hex Bolts | |
| (8) M12 Lock Washers | |
| (8) M12 Flat Washers | |
| (4) M12x1.75 Nuts | |
| (6) M10x1.5 25mm Allen Bolts | |
| (6) M10 Lock Washers | |
| (12) M10 Flat Washers | |
| (6) M10 Nuts | |


TOOLS REQUIRED

- Ratchet
- Socket Set
- Torque Wrench
- Allen Wrench
- Trim Panel Removal Tool

SKU # J126729/J126730

**STEP 1 (JK)**

Remove the (6) plastic push pins securing the factory splash shield to the vehicle. (4) Across the front edge, (2) on the rear edge.

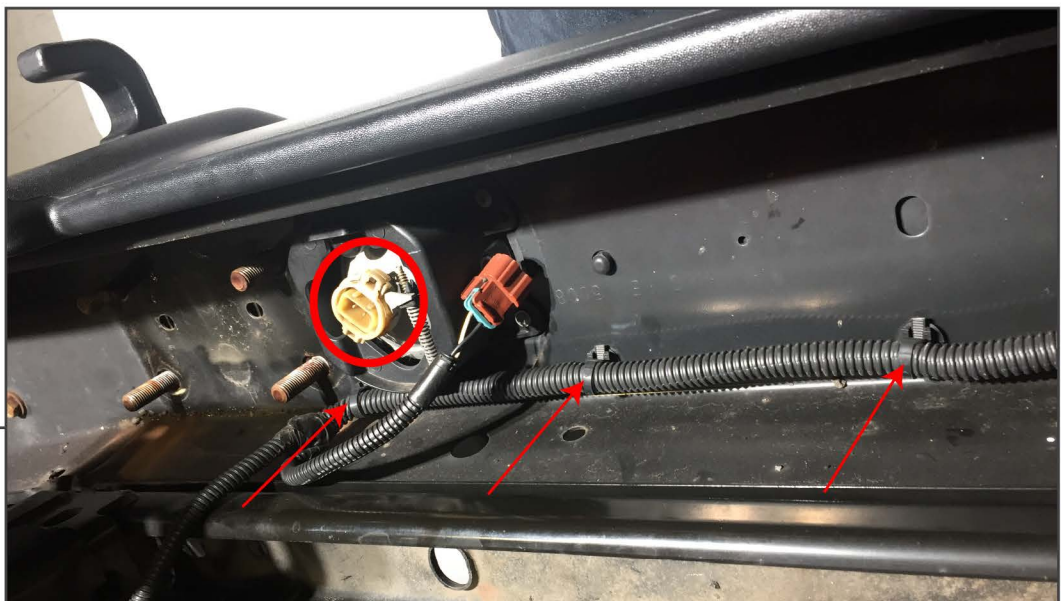**STEP 2 (JK)**

From under the vehicle, remove the factory fog light connectors and free the fog light wiring loom from the bumper.

STEP 3 (JK)




From under the vehicle, access and remove the (8) 18mm nuts securing the factory bumper to the vehicle.

STEP 4 (JK)




From under the vehicle, access and remove the (8) 18mm nuts, and (4) 18mm bolts securing the factory bumper to the vehicle. Then fully remove the bumper from the vehicle.

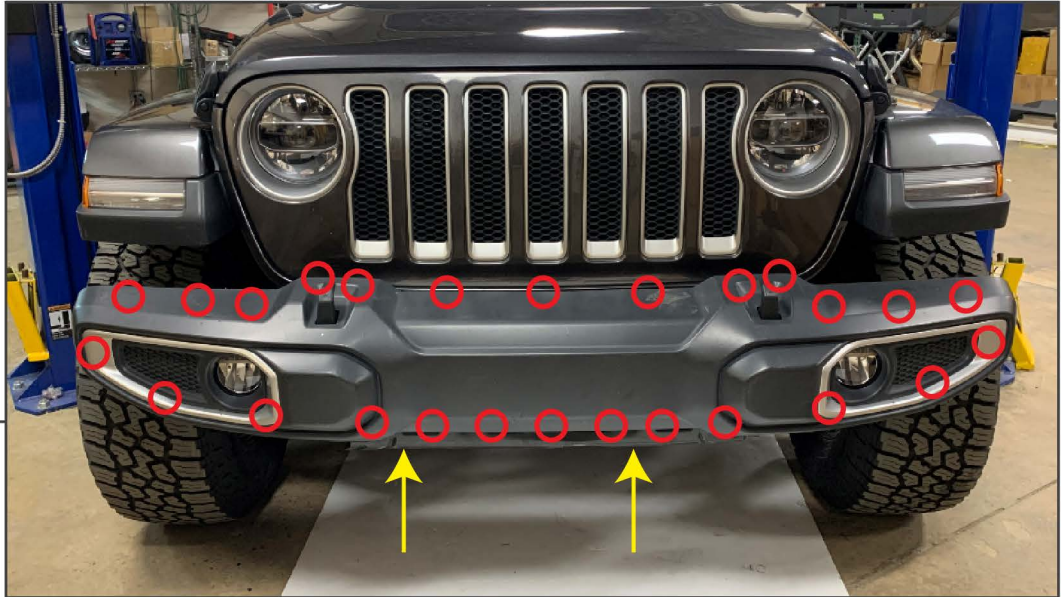**STEP 1 (JL)**

Remove all the plastic push clips from the backside of the bumper using a panel removal tool. Use the (2) 8mm bolts from the bottom of the plastic splash shield under the vehicle.

**STEP 2 (JL)**

With the plastic shields removed, unplug the main fog light connector from the passenger side frame rail to disconnect both fog lights. Remove (8) 18mm nuts from the original bumper. Remove the bumper from the vehicle.

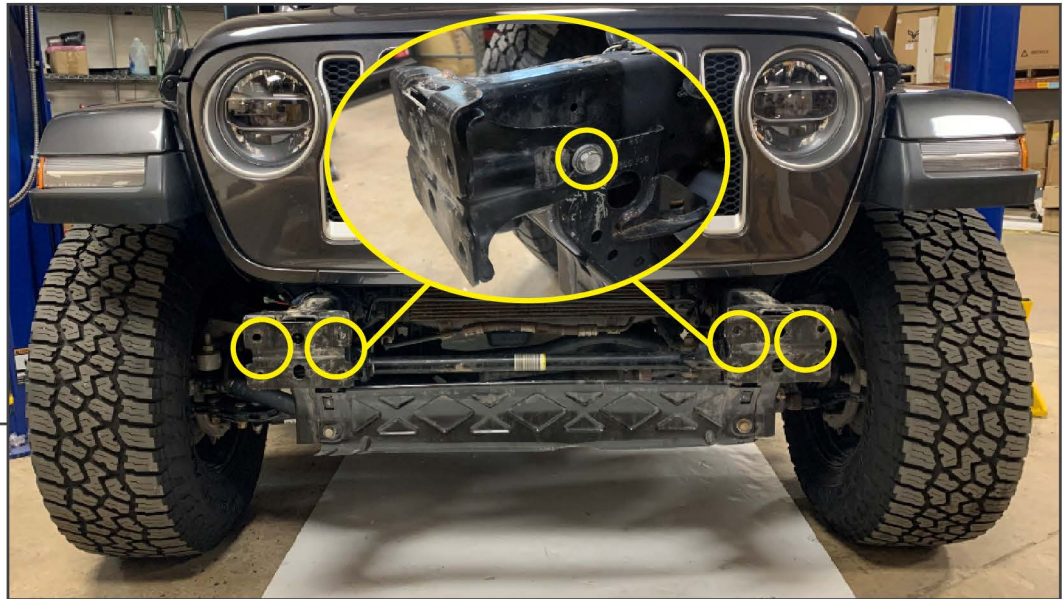

STEP 3 (JL)

Remove (4) 16mm bolts to remove the inner and outer bumper support brackets.



STEP 4 (JL)

Remove (2) 16mm bolts from the vehicle's skid plate. Lift and remove the skid plate from the vehicle.



STEP 5

Remove the (8) 7mm screws securing the fog lights to the factory front bumper.



STEP 6

Install the fog light adapter brackets using (2) M4 Bolts, (2) M4 Flat Washers, and (2) M4 Lock Washers per fog light.

**STEP 7**

Install the factory fog lights using (4) M4 Bolts, (8) M8 Flat Washers, (4) Lock Washers, and (4) Nuts per fog light.


**STEP 8**

Install the nut/bolt plates to the bumper. Secure the plates to the bumper using the plastic retainers, these will hold the plate in place while securing the bumper to the vehicle. Bolt the bumper to the vehicle using (2) M12 Bolts, (2) M12 Nuts, (4) M12 Lock Washers, (4) M12 Flat Washers per side.



STEP 9

Install the Over-Rider to the bumper using (3) M10 Allen Bolts, (6) M10 Washers, (3) M10 Lock Washers, and (3) M10 Nuts per side.

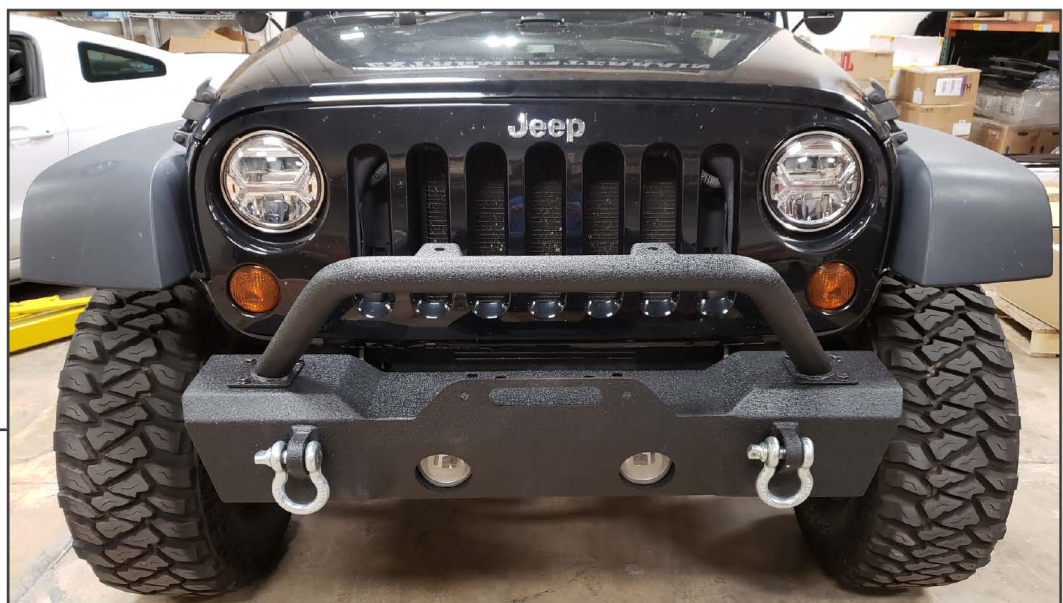

STEP 10

Install the supplier D-Rings to complete the installation.