



Installation Instructions Traditional Bikini Top

Installation Tips

Before you begin installing your new Bikini Top, please read all the instructions thoroughly.



WARNING

Do not rely in any way on the components of this product to protect against injury or death in the event of an accident. Never operate the vehicle in excess of manufacturer's specifications.

Read and follow, precisely, all installation instructions provided when installing this product. Failure to do so may result in a poor fit and could place occupants of the vehicle in a potentially dangerous situation.

WEAR SEAT BELTS AT ALL TIMES



CAUTION

Safety glasses should be worn at all times when installing this product.



Tools




Safety Glasses



Drill



Center Punch



Phillips Screwdriver



5/32" Drill Bit

Installation Time



30 minutes

Skill Level



1 - Easy



Support

We're here to help! Go to:
<https://www.bestop.com>
and click on **Need Help?**



<https://www.bestop.com/video-library>



Installation Instructions Traditional Bikini Top

Sugerencias de Instalación

Antes de empezar a instalar esta unidad, lea atentamente todas las instrucciones.

Para un buen ajuste:

Para facilitar la instalación, el producto debe instalarse a temperaturas superiores a 72 °F (22 °C).

Por debajo de esta temperatura, la tela puede encogerse una pulgada o más, lo que dificultaría su ajuste al vehículo.

Es normal que la tela se contraiga o arrugue cuando está guardada en la caja de empaque. A los pocos días después de la instalación, la tela se relajará y las arrugas desaparecerán.



ADVERTENCIA

Este producto se diseñó principalmente para mejorar la apariencia del vehículo y proteger a los ocupantes de las condiciones climáticas comunes. De ninguna manera piense que los componentes de este producto pueden servir como medio de contención para los ocupantes del vehículo o que pueden protegerlos contra lesiones o la muerte en caso de accidente. Este producto no protegerá a los ocupantes contra caídas de objetos. Nunca conduzca este vehículo fuera de las especificaciones del fabricante.

USE LOS CINTURONES DE SEGURIDAD EN TODO MOMENTO

Lea y siga con precisión todas las instrucciones de instalación que se proporcionan para instalar este producto. Si no lo hace, podría producirse un mal ajuste que colocaría a los ocupantes del vehículo en una situación potencialmente peligrosa.



PRECAUCIÓN

Debe usar gafas protectoras en todo momento durante la instalación de este producto.

Conseils pour l'installation

Lire toutes les instructions au complet avant de commencer l'installation de cet assemblage.

Pour un ajustement sans problème :

Afin de faciliter l'installation, ce produit doit être installé à des températures au-dessus de 72 °F (22 °C).

Sous cette température, le tissu peut rétrécir d'un pouce (2,5 cm) ou plus, ce qui rendra l'ajustement sur le véhicule difficile.

Il est normal que le tissu rétrécisse et plisse pendant qu'il est dans la boîte d'expédition. En quelques jours après l'installation, le tissu se détendra et les plis disparaîtront.



AVERTISSEMENT

Ce produit est conçu principalement pour améliorer l'apparence du véhicule et pour protéger les occupants des conditions météorologiques usuelles. Ne jamais se fier aux composants de ce produit pour se protéger de blessures ou de la mort en cas d'accident. Ce produit ne protégera pas les occupants des chutes d'objets. Ne jamais utiliser le véhicule au-delà des caractéristiques techniques indiquées par le fabricant.

PORTER UNE CEINTURE DE SÉCURITÉ EN TOUT TEMPS

Lire et suivre, très fidèlement, toutes les instructions d'installation fournies lors de l'installation de ce produit. Ne pas suivre cette consigne peut causer une installation inadéquate et mettre les occupants du véhicule dans une situation potentiellement dangereuse.



MISE EN GARDE


Des lunettes de sécurité doivent être portées en tout temps lors de l'installation de ce produit.



Installation Instructions Traditional Bikini Top

Parts included:

2 each Footman Loops
2 each #10 x 1/2 inch Screws
5 each *Studs
5 each #6 X 3/8 inch Screws

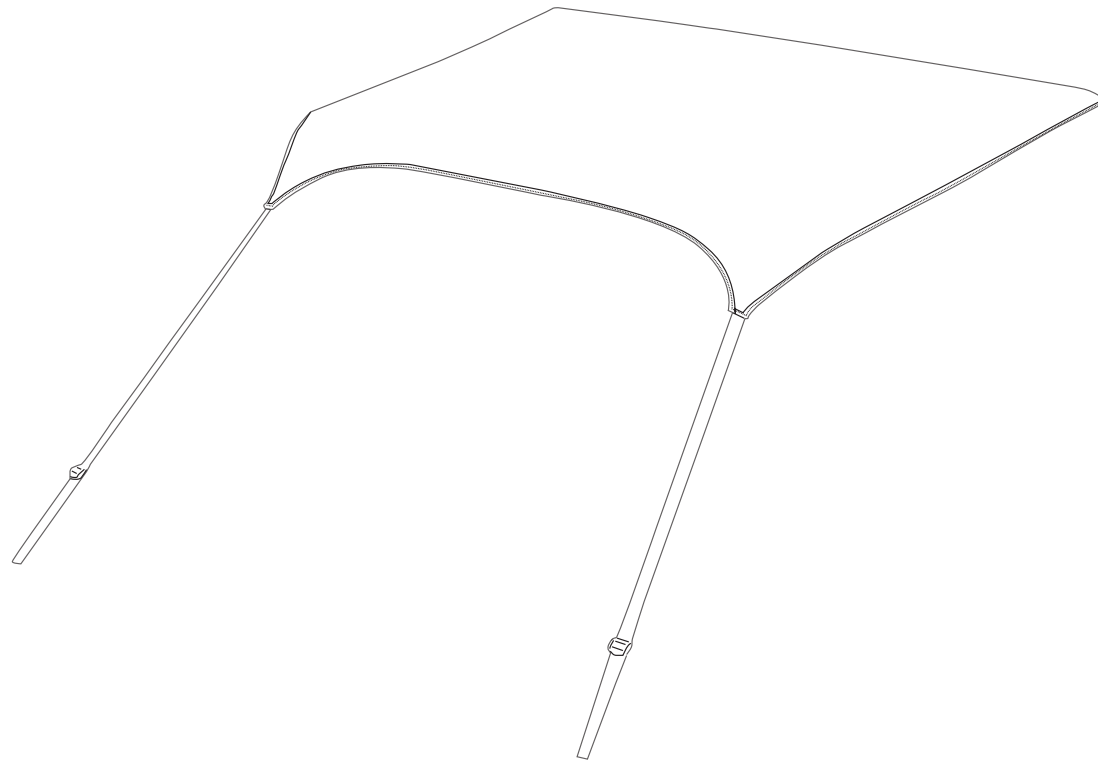


Bikini Top
Qty. 1



Installation Instructions Traditional Bikini Top

Step 1 Install Footman Loops

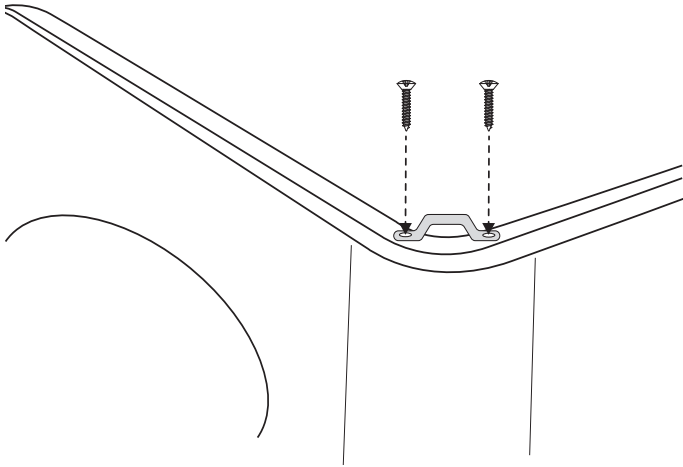


Install the Footman Loops on the rear corners of the vehicle. Center the loops on the top, rear corner on each side of the vehicle. Use the loop as a template to mark, center punch and drill two 5/32" holes. Install the Footman Loop with two #10 x 1/2" Oval Head Phillips Screws. Do this on both sides of the vehicle.

Step 2 Install Bikini Top



Lay fabric on top of the sport bar and windshield. Thread the rear straps through the footman loops then to the buckles. *Leave loose at this time.

Step 3 Attach Bikini To Windshield Retainer

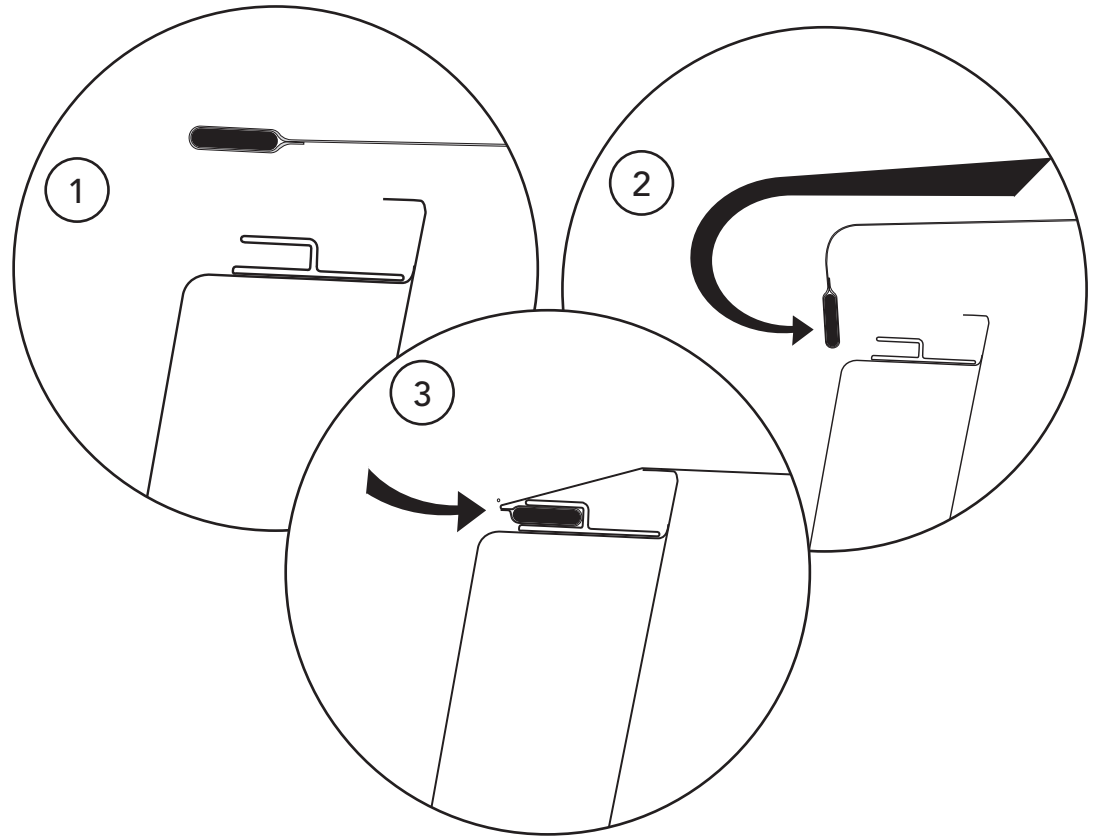

Step 4 Tighten Rear Straps and Attach Snaps on Windshield (If needed)

Note

Your vehicle will be equipped with a retainer channel if you have a complete soft top. If you are installing the Bikini Top on a vehicle designed for a hard top, it will be necessary to obtain a retainer (51209-01) from your local distributor.



Care and Maintenance of your Bestop Product

Your Bestop product is made of the finest materials available. To keep it looking new and for the maximum possible wear, it will need periodic cleaning and maintenance.


Fabric: The fabric should be washed often using soap, warm water and a soft bristle brush. Rinse with clear water to remove all traces of soap. Bestop recommends using Bestop Cleaner (part no. 11201-00) and Bestop Protectant (part no. 11202-00) for Vinyl fabric and Bestop Twill Protectant (part no. 11207-00) for Twill fabric. Bestop Cleaner and Bestop protectant are specially formulated to provide a total cleaning and protection system. Bestop Cleaner safely removes the toughest stains, will not harm vehicle finishes, is biodegradable and environmentally friendly. Bestop Protectant protects against UV-fading, cracking and hardening, and repels dust, grease, dirt and mildew.

Windows: Keep windows clean to avoid scratching. DO NOT use a brush on the windows! Wash with a water-soaked cloth or sponge and a mild dishwashing detergent. Bestop recommends Bestop Vinyl Window Cleaner (part no. 11203-00), which safely cleans and protects vinyl windows and helps prevent UV damage. NEVER WIPE THE WINDOWS WHEN THEY ARE DRY. Be careful when cleaning snow or frost from the vinyl windows since they are easily scratched and may crack at low temperatures. DO NOT roll the sides or rear window in cold weather. The windows become stiff and will crack. Cracks caused by misuse in cold temperatures are not covered under warranty.

Water: Seeping through at the seams may be stopped by applying 3-M Scotchgard® on the inside of the seams.

Snap: Keep snaps cleaned and lubricated with silicone to help prevent snaps from sticking to the studs. If a snap does become stuck to a stud, use a screwdriver and GENTLY pry apart to prevent permanent damage to the snap or the top fabric.

Zippers: Keeping zippers cleaned and lubricated with Bestop's Zipper Cleaner (part no. 11206-00) will help prevent damage and keep the zippers in smooth working condition. If a zipper opens behind the slider, the slider may have been spread apart. This problem can usually be repaired by using an ordinary pair of pliers to bring the sides back into parallel. Return slider to the end of the zipper in the normal Open position. Squeeze lightly at first and test the zipper. If the zipper continues to remain open squeeze more firmly with the pliers and try the zipper again. Repeat this procedure until the zipper operates correctly.

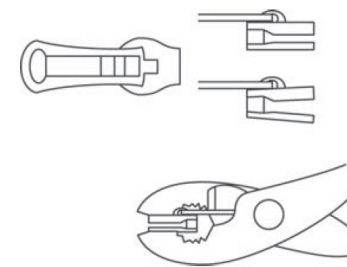

Normal Slider-
Jaws Parallel

Damaged Slider-
Jaws spread apart
(Sometimes broken)

For Bestop Warranty Information, Please go to;
<https://www.bestop.com/help/warranty-information/>





FIND THE RIGHT BIKINI® TOP

BIKINI TYPE		YEAR	MODEL	DRILLING REQUIRED	PARTS NEEDED	DOOR SURROUNDS	TOP MATERIAL	PART NUMBER
SUNSHADE		2010-18	Jeep Wrangler JK	No	Compatible with Sunrider for Hardtop ONLY	N/A	Mesh	52406
		2007-18	Jeep Wrangler JK	No	Compatible with soft tops except Trektop and Trektop Pro	N/A	Mesh	52405
TRADITIONAL BIKINI		1976-91	CJ7/CJ8/ Wrangler YJ	Yes	51209	N/A	Black Crush, Tan, Charcoal/Gray, Mesh	52508
		1976-83	CJ5	Yes	51209	N/A	Black Crush, Tan	52507
		1972-80	Scout II	Yes	51207	N/A	Black Crush	52550
		1966-77	Bronco	Yes	51206	N/A	Black Crush	52542
		1964-84	FJ40	Yes	51209	N/A	Black Crush	52540
		1951-81	M-38A1/CJ5/ CJ6	No	Factory Channel	N/A	Black Crush	52505
STRAPLESS HEADER BIKINI		1997-02	TJ	Yes	51210	N/A	Black Denim, Spice	52521
		1986-91	YJ	Yes	51209	N/A	Black Crush, Black Demin	52509
		1992-95	YJ	Yes	51209	N/A	Black Denim, Spice	52519
		1980-86	CJ7	Yes	51209	N/A	Black Crush, Black Demin	52518
		1986-94	Samurai	No	Factory Channel	N/A	Black Crush, Black Denim	52561
		1995-98	Tracker/Sidekick	No	Factory Channel	N/A	Black Denim	52562
		1988-94	Tracker/Sidekick	No	Factory Channel	N/A	Black Denim	52570
STRAPLESS SAFARI BIKINI		1997-02	TJ	Yes	51210	N/A	Black Denim, Spice	52530
		1992-95	YJ	Yes	51209	N/A	Black Denim, Charcoal/ Gray, Spice	52529
CABLE STYLE TARGA AND SAFARI BIKINI		2020-Current	Gladiator	No	Included	N/A	Black Diamond	52615
		2018-Current	JL	No	Included	N/A	Black Diamond	52607
		2018-Current	JLU	No	Included	Factory Door Surrounds	Black Diamond	52608
		2010-18	JK	No	Included	Factory Door Surrounds	Black Diamond, Mesh	52593
		2010-18	JKU	No	Included	Factory Door Surrounds	Black Diamond, Mesh	52594



FIND THE RIGHT BIKINI® TOP

BIKINI TYPE		YEAR	MODEL	DRILLING REQUIRED	PARTS NEEDED	DOOR SURROUNDS	TOP MATERIAL	PART NUMBER
HEADER STYLE TARGA BIKINI		2018-Current	JL/Gladiator	No	51244	N/A	Black Diamond	52606
		2010-18	JK (2-Door)	No	51243	N/A	Black Diamond	52586
		2007-09	JK (2-Door)	No	51243	N/A	Black Diamond	52580
		2003-06	TJ	No	51238	N/A	Black Diamond	52528
		1997-2002	TJ	No	51238	N/A	Black Denim, Spice	52525
HEADER STYLE SAFARI BIKINI		2020-Current	Gladiator	No	51244	N/A	Black Diamond	52614
		2018-Current	JLU	No	51244	N/A	Black Diamond	52610
		2010-18	JKU	No	51243	N/A	Black Diamond	52584
		2010-18	JK	No	51243	N/A	Black Diamond	52583
		2007-09	JKU	No	51243	N/A	Black Diamond, Mesh	52581
		2004-06	LJ/TJU	No	51238	N/A	Black Diamond	52544
		2003-06	TJ	No	51238	N/A	Black Diamond, Mesh	52532
		1997-02	TJ	No	51238	N/A	Black Denim, Spice, Mesh	52531
SUN TARGA BIKINI		2018-Current	JL/JLU/Gladiator	No	N/A	N/A	Mesh	52410
		2007-18	JK/JKU	No	N/A	N/A	Black Diamond, Mesh	52400
		1997-2006	TJ	No	N/A	N/A	Black Diamond, Mesh	52403
SUN SAFARI BIKINI		2020-22	Gladiator	No	N/A	N/A	Mesh	52413
		2018-Current	JLU	No	N/A	N/A	Mesh	52411
		2018-Current	JL	No	N/A	N/A	Mesh	52412
		2007-18	JKU	No	N/A	N/A	Black Diamond, Mesh	52401
		2007-18	JK	No	N/A	N/A	Black Diamond, Mesh	52402
		1997-2006	TJ	No	N/A	N/A	Black Diamond, Mesh	52404
ACCESS SAFARI BIMINI		2021-Current	Bronco 2DR	No	Compatible with Trektop, OE Soft top and OE Hardtop	N/A	Mesh	52420
		2021-Current	Bronco 4DR	No	Compatible with Trektop, OE Soft top and OE Hardtop	N/A	Mesh	52421