



FALCON SH

1



INSTALL PREP:


- Straighten the front wheels before beginning
- If installing with the tires on the ground, disconnect the axle side of the track bar for easier access to the bracket bolts

2




- Remove the three factory steering stabilizer bolts on the end of the tie rod

3

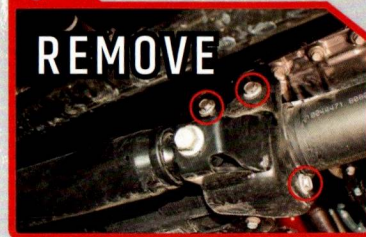

- Remove the three factory steering stabilizer bolts on the axle bracket
- Retain factory hardware

6 W/ TERAFLEX TRACK BAR

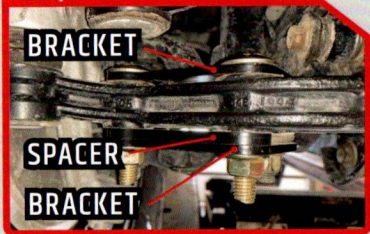

- Loosely install the top bracket above the tie rod end and the spacer and bottom bracket below the tie rod end
- Use the provided hardware

7



- Adjust stabilizer length by turning the wheel until the steering stabilizer eyelet fits into the bracket and aligns with the bracket holes. **Using the softest setting to make the adjustment easier**

8



- Insert provided M12 x 1.75 x 60mm bolt
- Tighten all the tie rod bracket bolts
- Torque to 59 lb-ft

FALCONSHOCKS JEEP JL/JT NEXUS STABILIZER QUICK START GUIDE

4




- Apply supplied Loctite to factory hardware as shown

5



- Loosely Install Falcon steering stabilizer axle bracket using factory hardware
- SNUG EACH BOLT, then torque to 30 ft-lb

6 W/ OE TRACK BAR

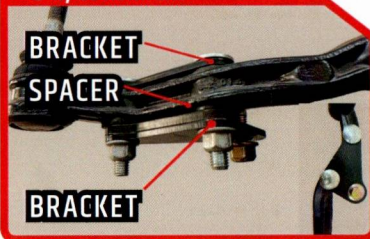

- Loosely install the spacer and top bracket above the tie rod end and the bottom bracket below the tie rod end
- Use the provided hardware
- Place hardware as shown

9



SOFT SETTING:

- Great for off-road driving and rock crawling

10



MEDIUM SETTING:

- Great for all-around driving on and off road

11



FIRM SETTING:

- Most useful for Highway driving; especially in high winds

NOTES



RED LINE FULL SYNTHETIC OIL HAS A HIGH VISCOSITY INDEX OF 540 FOR SUPERIOR ALL-WEATHER PERFORMANCE.



HAND WASH WITH SOAP AND WATER FOR CLEANING. DO NOT CLEAN WITH ACIDS.



3 YEAR WARRANTY TO BE FREE OF DEFECTS AND WORKMANSHIP. REPAIR OR REPLACE AT NO COST.

96-01-02-021-RevC