

Key To Components

- A. 6 ea. Running Board Brackets
- B. 12 ea. M8x1.25x25mm button head bolt
- C. 12 ea. M8 flat washer
- D. 12 ea. M8x1.25 flange nut
- E. 18 ea. M8x1.25x25mm hex head bolt
- F. 18 ea. M8 large flat washer
- G. 6 ea. Flat bracket
- H. 12 ea. M8x1.25x20mm hex head nut
- I. 2 ea. Running board

Tools Required
13mm Socket
Ratchet


HD Running Boards

Installation Instructions

FITS Jeep Wrangler JL 4 Doors

2018-2019

J130924

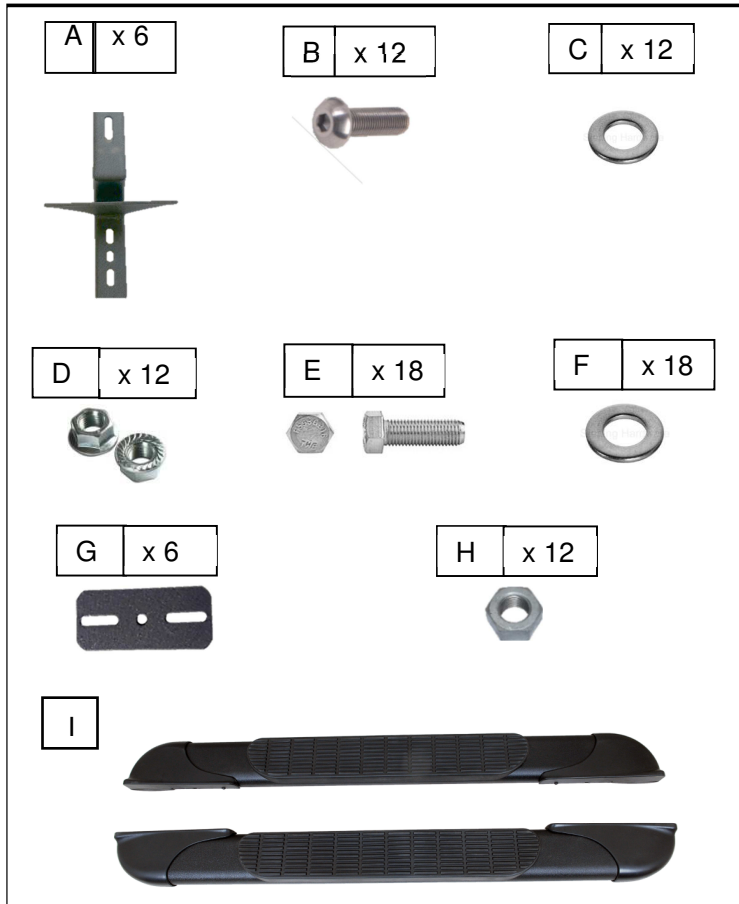

Product installed on JL 4 doors



Please take a few minutes to read and thoroughly familiarize yourself with the installation procedures outlined in this manual. Following the steps as outlined will save you time and help reduce mistakes. Once the instructions are reviewed, if you feel that you are not capable of safely installing the parts seek the help of a qualified installation expert to help you complete the job. The manufacture is in no way responsible for any personal injury or vehicle damage that may occur during the installation.

NOTES ON INSTALLATION

Please read and understand all instructions prior to beginning the installation process.

Pre-fit all panels as you proceed with the installation before attempting to bolt into position. This will enable you to understand exactly how the part is intended to fit onto vehicle.

Do NOT over-tighten screw.

If the instructions call for you to save and re-install parts set them aside in a protected area so as not to damage them.

California Proposition 65 Warning!

This product may contain one or more chemical known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

REMOVING FACTORY HARDWARE



Step 1.

If your vehicle comes equipped with factory running boards crawl under the Jeep, unbolt and remove factory running board. Discard factory running board and hardware. Repeat for the other side.

INSTALLING RUNNING BOARD BRACKETS



Step 1.

Working towards the front of the vehicle locate and place supplied a L bracket (A) onto the vehicle as shown. Line up the holes in the L bracket with the holes on the vehicle.



Step 2.

Place a supplied M8x1.25x25mm hex head bolt (E) with supplied M8 large flat washer (F) through the holes in the mounting bracket hole and onto the vehicle. Tighten down using a 13mm socket.

INSTALLING RUNNING BOARD BRACKETS



Step 3.
Place a supplied M8x1.25x25mm button head bolt (B) with supplied M8 large flat washer (F) through the holes in the mounting bracket hole and onto the vehicle. Place a supplied M8 flat washer (C) at the end of bolt. Start a supplied M8x1.25 flange nut (D) at the end of bolt. Tighten down using a 13mm socket. Repeat step for remaining button head bolt.



Step 4.
Repeat step 1-3 for remaining running board brackets.

INSTALLING OTHER RUNNING BOARD



Step 1
Place the board on top of the brackets that were just installed. Once satisfied with positioning slide 4 flat brackets into the underside of the running board. Adjust plate until the hole in the flat bracket lines up with the hole in the bracket.



Step 2
Place a M8 x 1.25 20mm bolt through the hole in the flat bracket and through the hole in the running board bracket. Start a locknut on the bolt but **DO NOT TIGHTEN AT THIS TIME**. Repeat for remaining plates. Adjust running board for best fit. When satisfied with fit tighten all bolts to complete installation running board. Repeat steps 1 and 2 for other side of vehicle.

This completes the installation process.

Page 3