

CONTROL BOX WITH SWITCH PANEL

(2007-2018 WRANGLER JK)

INSTALLATION INSTRUCTIONS


CONTENTS

- (1) Switch Panel
- (1) Circuit Breaker
- (1) Wiring Control Box
- (1) Hardware Packet

TOOLS REQUIRED

- 8mm, 10mm Sockets
- Ratchet
- Wiring Crimpers
- Wire Cutters

STEP 1

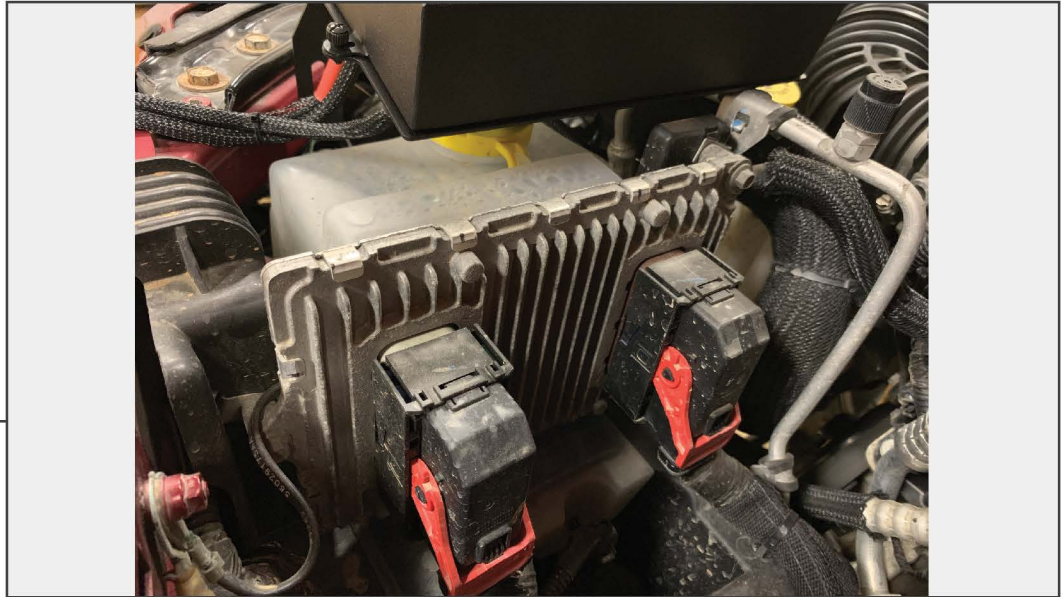


Remove the upper most 8mm bolt securing the PCM to it's bracket. Next, loosen the middle 8mm bolt securing the PCM to it's bracket.

STEP 2




Slide the Wiring Control Box between the PCM and the bracket. Reinstall and tighten the 8mm hardware from Step 1.

STEP 3

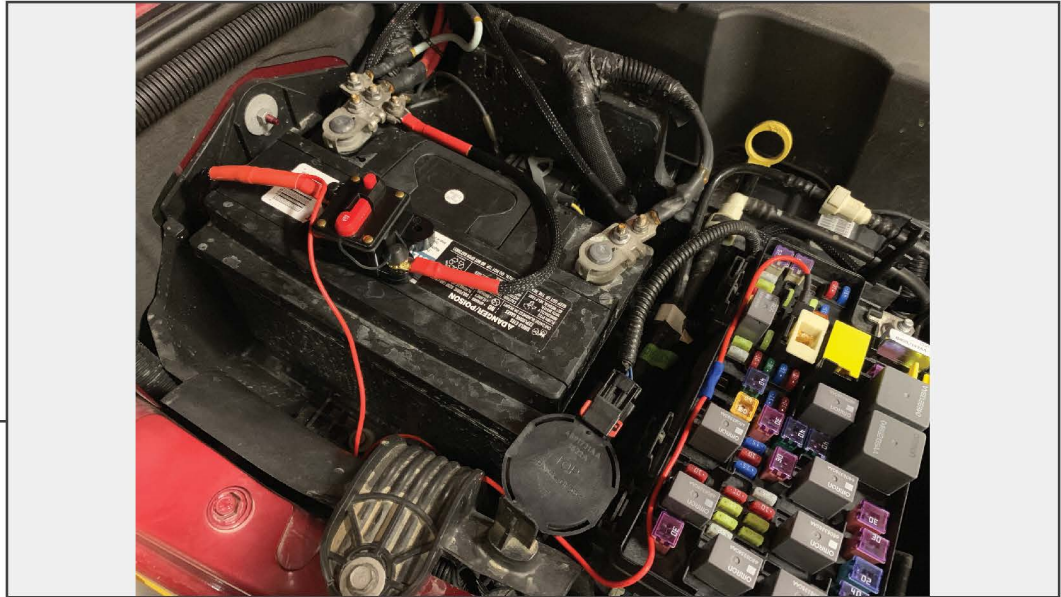

Route the Red and Black battery cables from the Control Box to the battery along the firewall. Connect the thick red wire to the positive battery terminal and the thick black wire to the negative battery terminal.

STEP 4

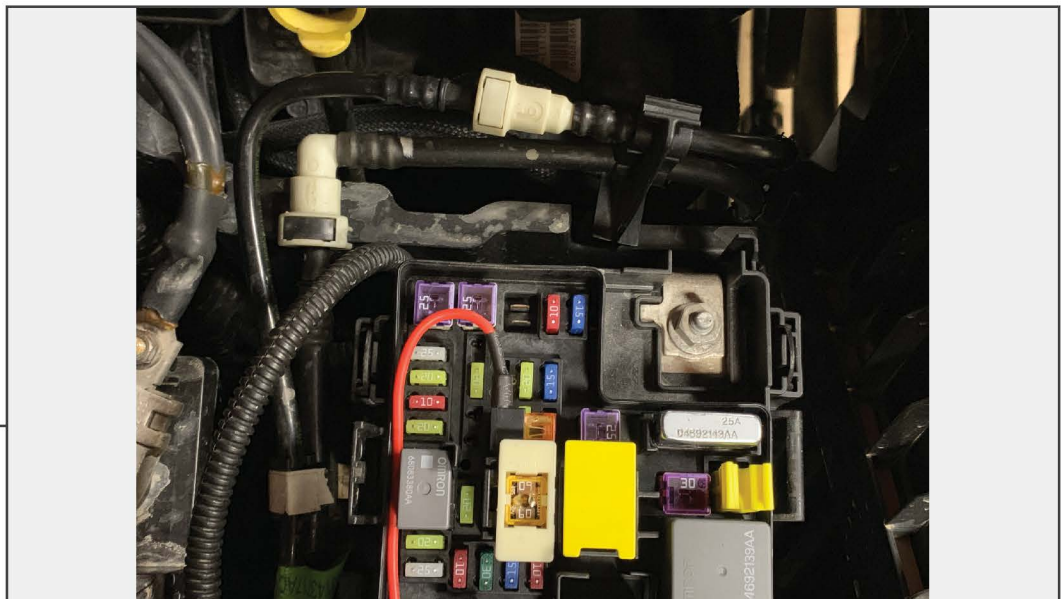


Connect the thin red wire lead to an ignition 12v source in the fuse box using the supplied fuse adapter. On this vehicle, the trailer plug fuse was used.



STEP 5

Route the plug from the Control Box through the firewall, up the A-pillar. Mount the Switch Panel over the rear view mirror. Using the attached bracket, clamp the bracket over sail panel hook.

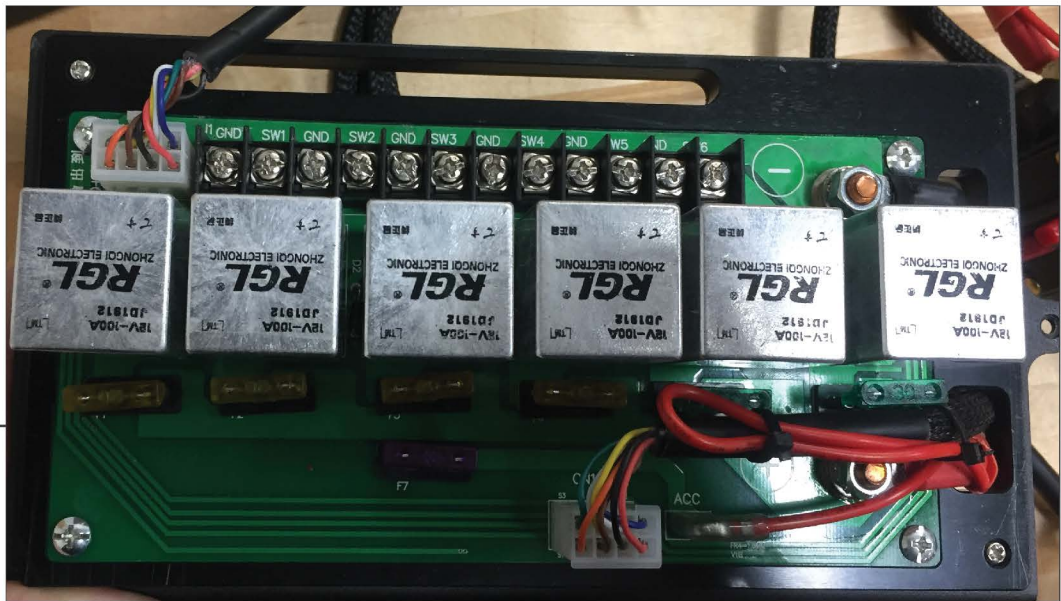

STEP 6

Remove the cover on the Wiring Control Box. Connect your Axillary wiring to the (+/-) for the switch you want to use. The terminals are labeled GND (Ground) and SW1-6 (12volt+).

Installation is now complete.