



HOOD CATCH KIT

(2007-2018 WRANGLER JK)

INSTALLATION INSTRUCTIONS

CONTENTS

- (2) Upper Hood Catches
- (2) Lower Hood Latches
- (4) M6 Lock Nuts
- (4) M6 Flat Washers
- (2) M8 Lock Nuts
- (2) M8 Flat Washers

TOOLS REQUIRED

- 10mm, 13mm Sockets
- Ratchet

SKU # J132197 / J132198



STEP 1


Open the vehicle hood. Locate and remove (2) 10mm nuts from the upper hood catch.



STEP 2

Remove the alignment trim panel from the original hood catch, and transfer to the new hood catch in the same orientation.

Install the new upper hood catch to the vehicle hood using (2) M6 flat washers and (2) M6 lock nuts.

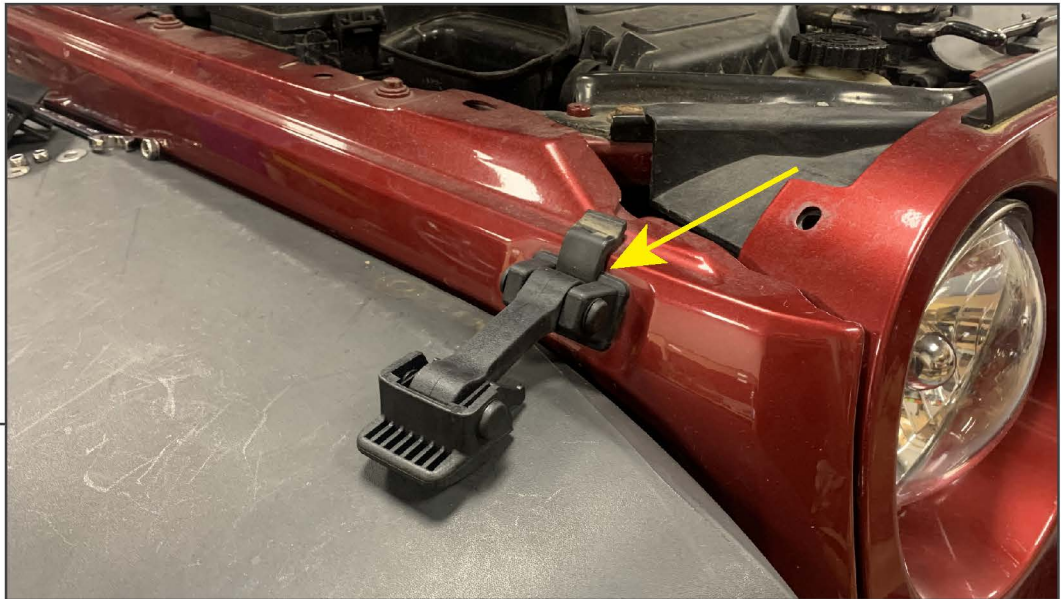

STEP 3

Remove (1) 13mm nut from the inside of the fender to remove the original hood latch assembly from the vehicle.



STEP 4

Transfer the rubber bumper from the original hood latch to the new assembly in the original orientation.



STEP 5

Secure the new hood latch assembly to the vehicle fender using (1) M8 flat washer and (1) M8 lock nut.

Repeat steps 1-5 to the opposite side of the vehicle. Installation is now complete.