



HOOD CATCH KIT - BLACK ALUMINUM

(2007-2018 WRANGLER JK)

INSTALLATION INSTRUCTIONS


CONTENTS

- (2) Hood Locks w/Cables
- (2) Adjusting Rods
- (4) Rubber Isolators
- (4) M8x1.25x20mm Allen Screws
- (4) M8 Flat Washers
- (4) M8 Lock Nuts
- (2) M10 Lock Nuts
- (2) M10 Flat Washers

TOOLS REQUIRED

- 10mm, 13mm Sockets
- Ratchet
- Allen Wrench

SKU # J132199

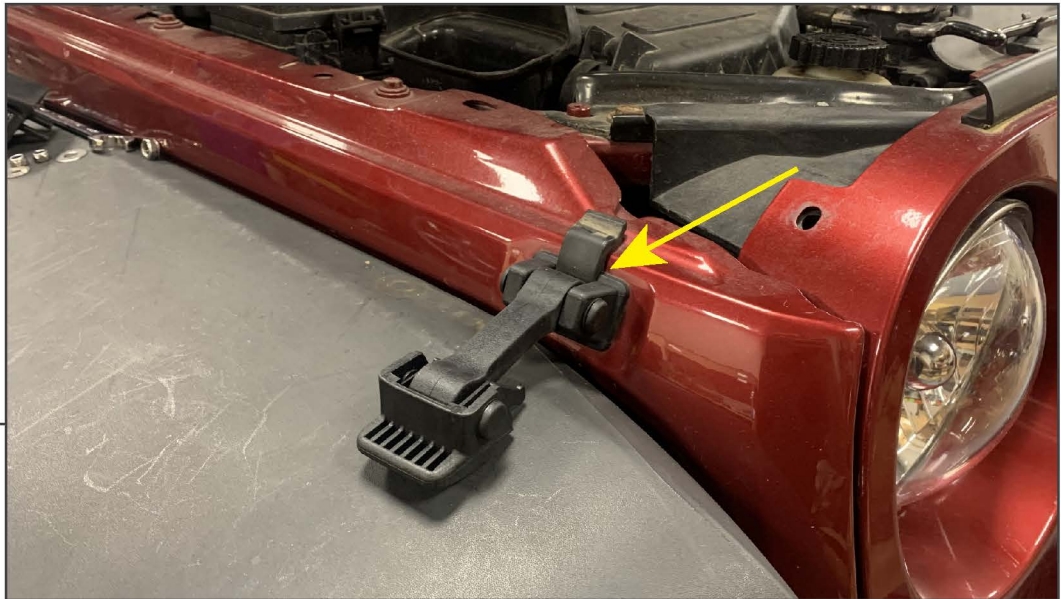

STEP 1

Open the vehicle hood. Remove (1) 13mm nut from the inside of the fender to remove the original hood latch assembly from the vehicle.



STEP 2

Locate and remove (2) 10mm nuts from the upper hood catch.



STEP 3

Install the fender latch using the supplied allen screw, flat washer, and lock nut. Install the rubber isolator between the latch and the hood. ****Note:** Use an allen wrench to remove the adjusting rod to allow room for allen screw to be installed for fender latch.



STEP 4

Install the hood latch using the supplied allen screws, flat washers, and lock nuts. Install the rubber isolator between the latch and the hood.



STEP 5

Close the hood, and make sure the catch operates properly.

Note: Some adjusting may be needed, adjust the adjusting rod up or down to achieve desired hood gap. Tighten the lock nuts to secure adjustment.

Repeat steps 1-5 for the opposite side of the vehicle. Installation is now complete.