REDROCK

HOOD LOCK KIT

(2007-2018 WRANGLER JK)

INSTALLATION INSTRUCTIONS

CONTENTS

- (2) Hood Locks
- (2) Hood Catches
- (4) Keys
- (4) Rubber Isolators
- (4) M8x1.25x20mm Allen Screws
- (4) M8 Flat Washers
- (4) M8 Lock Nuts
- (2) M10 Lock Nuts
- (2) M10 Flat Washers

TOOLS REQUIRED

10mm, 13mm Sockets Ratchet Allen Wrench





STEP 1


Open the vehicle hood. Remove (1) 13mm nut from the inside of the fender to remove the original hood latch assembly from the vehicle.



STEP 2

Locate and remove (2) 10mm nuts from the upper hood catch.




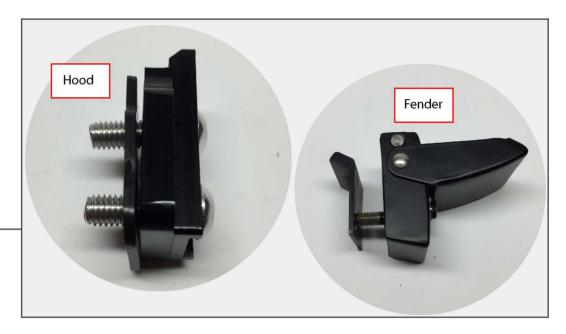

STEP 3

Install the locking latch to the fender using the supplied 13mm lock nut. Install the rubber isolator between the latch and fender.

Install the hood latch using the supplied 10mm nuts. Install the rubber isolator between the latch and the hood.

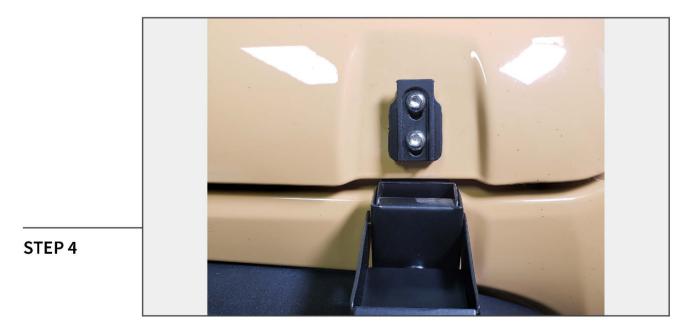

Repeat steps 1-3 to the opposite side of the vehicle.

Installation is now complete.