



---

# TREKKER FRONT BUMPER

(2007-2019 WRANGLER)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

(4) M12x1.75 35mm Bolts	(8) M8x1.25 25mm Bolts
(4) M12x1.75 Nuts	(8) M8 Lock Nuts
(8) M12 Lock Washers	(16) M8 Flat Washers
(8) M12 Flat Washers	(2) 3/4" D-Ring Shackles
(12) M4x0.7 15mm Bolts	(1) 2.5mm Allen Key
(20) M4 Flat Washers	(2) Fog Light Brackets
(12) M4 Lock Washers	(2) 9005 Fog Light Extension
(8) M4 Nuts	(2) H16 Extension Harnesses
(4) Clear Stud Retainers	

### TOOLS REQUIRED

---

- 7, 8, 13, 18mm Sockets
- 2.5mm Allen Key (included)
- 7, 13mm Wrench
- Phillips Screwdriver
- Panel Pry Tool

SKU # J132663

## 2007-2018 JK INSTALLATION INSTRUCTIONS



### STEP 1 - JK

Begin by removing the plastic sway bar cover by removing (2) plastic push clips.

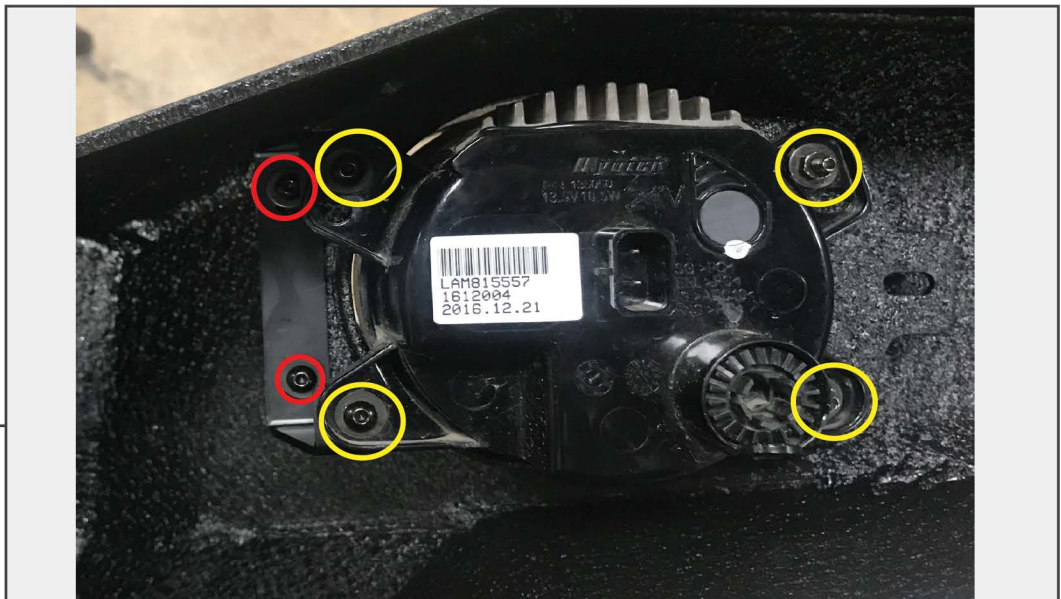


### STEP 2 - JK

Uninstall the original bumper by removing (8) 18mm nuts. Unplug the (2) bumper fog lights if equipped by pressing on the plug and pulling away from the light. Once the hardware is removed, pull the bumper away from the vehicle.

**STEP 3 - JK**

Remove the fog lights from the original bumper by removing (8) Phillips head screws.

**STEP 4 - JK**

Install fog light brackets using (2) M4x0.7 bolts, (4) M4 washers, and (2) M4 lock nuts per side. Once brackets are secure, install the fog lights into the bumper using (4) M4x0.7 bolts, (4) M4 nuts, (8) M4 flat washers, and (4) M4 lock washers per side.



**STEP 5 - JK**

Install the override hoop onto the bumper using (8) M8x1.25 25mm bolts, (16) M8 flat washers, and (8) M8 nuts. Tighten the nuts and bolts using a 13mm socket and wrench.

**STEP 6 - JK**

Install the studded nut plates into the bumper. Use (1) clear stud retainer per bracket to hold the brackets in place. Install bumper on vehicle, align the vehicle frame holes with the studs sticking out of the bumper. Once aligned, install (1) M12 flat washer, (1) M12 lock washer, and (1) M12 nut onto each stud bracket.

**\*\*Note:** Leave nuts loose for now for adjustments later.

---

**STEP 7 - JK**

Once the bumper is attached loosely with the nuts, using (4) M12x1.75 35mm bolts, (4) M12 lock washers, and (4) M12 flat washers, thread the bolts into the welded nuts on each of the previously installed brackets. Once the bolts are loosely attached, make sure bumper is level on vehicle, and tighten the nuts and bolts to the vehicle using a 18mm socket.

---

**STEP 8 - JK**

Plug the extension harness into the vehicles fog light harness. Once the harness is installed, plug the extension into the fog lights in the bumper.





---

**STEP 9 - JK**

Install the 3/4" D-Rings into the front of the bumper, and installation is now complete.



---

# TREKKER FRONT BUMPER

(2007-2019 WRANGLER)

---

2007-2018 WRANGLER JK

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

(4) M12x1.75 35mm Bolts	(8) M8x1.25 25mm Bolts
(4) M12x1.75 Nuts	(8) M8 Lock Nuts
(8) M12 Lock Washers	(16) M8 Flat Washers
(8) M12 Flat Washers	(2) 3/4" D-Ring Shackles
(12) M4x0.7 15mm Bolts	(1) 2.5mm Allen Key
(20) M4 Flat Washers	(2) Fog Light Brackets
(12) M4 Lock Washers	(2) 9005 Fog Light Extension
(8) M4 Nuts	(2) H16 Extension Harnesses
(4) Clear Stud Retainers	

### TOOLS REQUIRED

---

- 7, 8, 13, 18mm Sockets
- 2.5mm Allen Key (included)
- 7, 13mm Wrench
- Phillips Screwdriver
- Panel Pry Tool

SKU # J132663

## 2018+ JL INSTALLATION INSTRUCTIONS

### STEP 1 - JL



Begin by removing the skid plate under the bumper by removing (2) 8mm bolts, (6) 7mm bolt, and (2) plastic push clips.

### STEP 2 - JL



Remove the plastic cover by removing (8) plastic push clips.



**STEP 3 - JL**

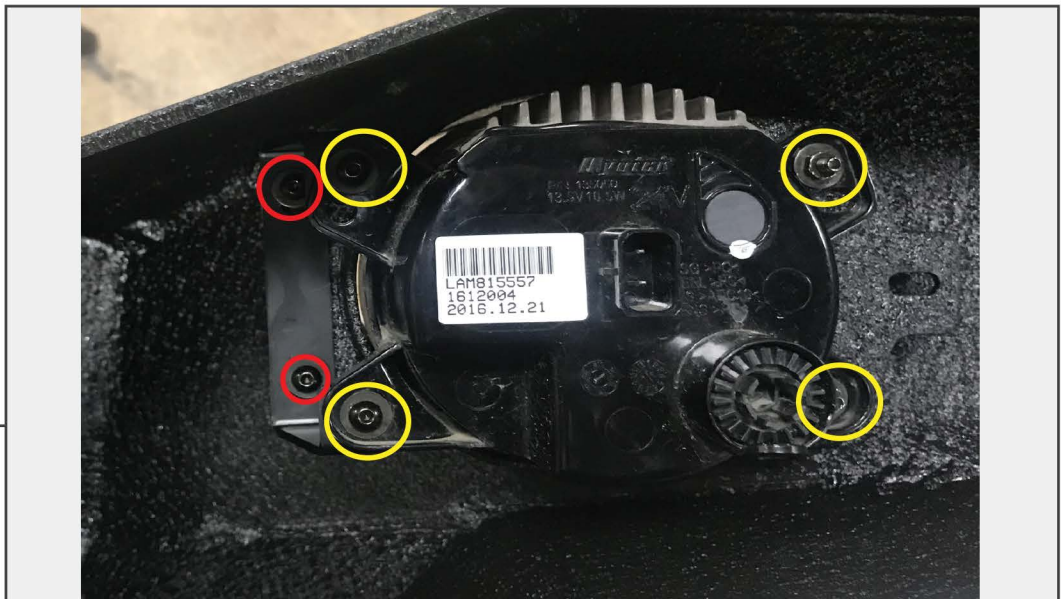
Remove the original bumper by removing (8) 18mm nuts. Unplug the fog light harness located on the outside of the right side frame rail by pressing on the plug and pulling away from the light. Once the hardware is removed, pull the bumper away from the vehicle.

**STEP 4 - JL**

Remove the fog lights from the original bumper by removing (5) plastic push clips, then (4) 7mm screws per light.

**STEP 5 - JL**

Remove the fog light wiring harness from the bumper by removing (24) 7mm bolts around the bumper to separate the plastic portion of the bumper from the metal. Then, using a panel removal tool, pull the harness from the bumper. This harness will be reused on the new bumper.

**STEP 6 - JL**

Install fog light brackets using (2) M4x0.7 bolts, (4) M4 washers, and (2) M4 lock nuts per side. Once brackets are secure, install the fog lights into the bumper using (4) M4x0.7 bolts, (4) M4 nuts, (8) M4 flat washers, and (4) M4 lock washers per side.



**STEP 7 - JL**

Install the override onto the bumper using (8) M8x1.25 25mm bolts, (16) M8 flat washers, and (8) M8 nuts. Tighten the nuts and bolts using a 13mm socket and wrench.

**STEP 8 - JL**

Install the studded nut plates into the bumper. Use (1) clear stud retainer per bracket to hold the brackets in place. Install bumper on vehicle, align the vehicle frame holes with the studs sticking out of the bumper. Once aligned, install (1) M12 flat washer, (1) M12 lock washer, and (1) M12 nut onto each stud bracket.

\*\*Note: Leave nuts loose for now for adjustments later.



**STEP 9 - JL**

Once the bumper is attached loosely with the nuts, using (4) M12x1.75 35mm bolts, (4) M12 lock washers, and (4) M12 flat washers, thread the bolts into the welded nuts on each of the previously installed brackets. Once the bolts are loosely attached, make sure bumper is level on vehicle, and then tighten the nuts and bolts to the vehicle using a 18mm socket.

**STEP 10 - JL**

Install the 3/4" D-Rings into the front of the bumper, and installation is now complete.