



AXLE BACK EXHAUST SYSTEM

(2018-2025+ WRANGLER JL - 3.6L ENGINE)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Exhaust Assembly
- (1) Exhaust Clamp

TOOLS REQUIRED

- 15mm Socket
- Ratchet
- Pry Bar
- Spray Lubricant
- Floor Jack
- Jack Stands

SKU # J133189-JL / J133190-JL


STEP 1



Safely lift and support the vehicle off the ground using a floor jack and jack stands.

With the vehicle secure, locate the section of the exhaust connecting the muffler to the over-axle pipe. Loosen the (1) exhaust clamp connecting the pipes together.

STEP 2

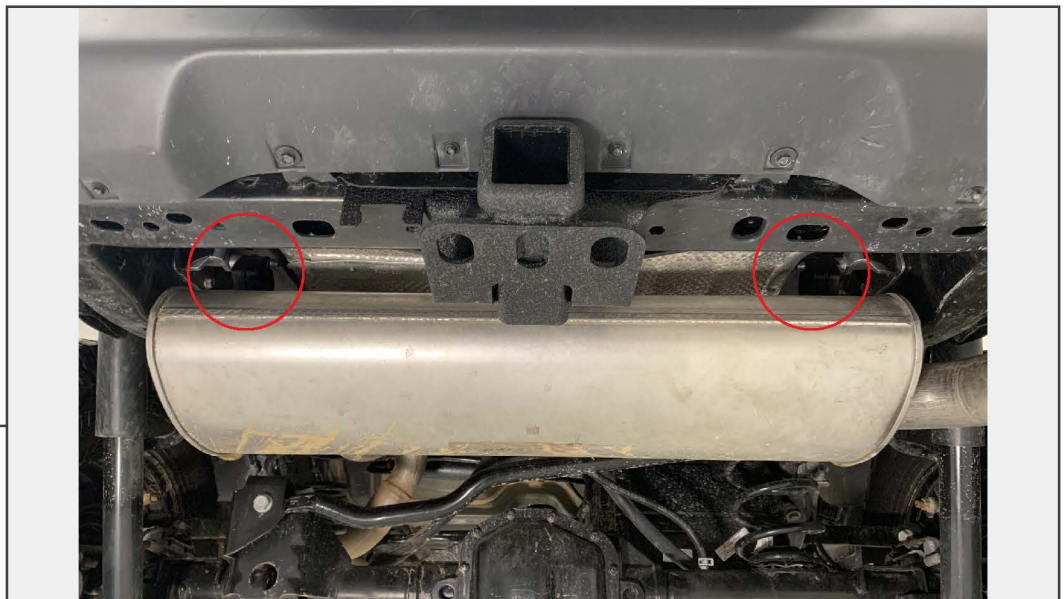

Using a pry bar and spray lubricant, remove the muffler from the (2) rubber hangers. Then, twist and pull the muffler away from the vehicle over-axle pipe.



STEP 3

Fit the new exhaust clamp onto the new muffler. Fit the new muffler onto the vehicle over-axle pipe, and fit each hanger into the vehicle rubber hangers. Adjust the exhaust to best fit the vehicle, and tighten the exhaust clamp to 45 ft. lbs.

Installation is now complete.