


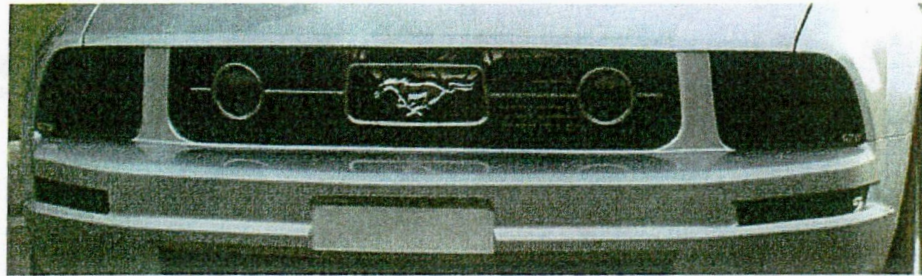

Ford Mustang 2005-09 V-6 Pony Package Fog Light Cover Installation Instructions


NOTE: NO DRILLING IS REQUIRED. Fog Light Cover, ATTACHES TO FACTORY TURN SIGNAL WITH 3M VHB DUAL LOCK.



1. **Trial Fit** – Hold the Fog Light Cover (FLC) in place and mark the corner locations with tape or a grease pencil for mounting.
2. **Clean Mounting Area** – First clean the mounting area with a mild soap & water solution. Rinse and dry the area. Next, wipe the mounting area with the provided Alcohol Wipes. **NOTE:** Solvents or cleaners not formulated for acrylic plastic may scratch, craze, or fog the covers. A non-abrasive automotive wax may be used for protection.
3. **Mounting** – DUAL-LOK to Dual-Lok Mounting – One side of the Dual-Lok is factory mounted to the Turn Signal Cover. The matching piece is attached directly to the vehicle by the end user, after peeling off the protective cover and completing Step 2 first.
4. **Curing** – Allow the adhesive to “Cure” at least 24 hours before applying pressure on the FLC or washing the vehicle.

Items included with this kit are:

- 2 – Fog Light Covers (L&R)
- 2 – Alcohol Wipe Pads
- 1 – Instruction Sheet

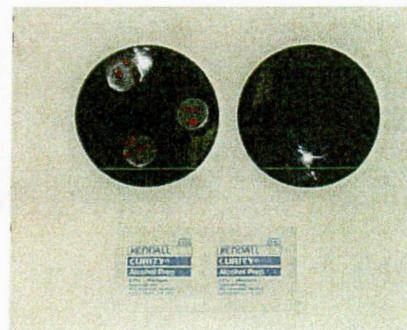

GT Styling Limited Lifetime Warranty – All components of this product have a LIMITED LIFETIME WARRANTY from date of purchase to be free of manufacturer's defects in material and craftsmanship. Damage due to improper installation or road hazards is not covered. Manufacturer's obligation shall be to replace the product proved to be defective. Proof of purchase is necessary for the replacement of any warrantable G.T. Styling product.