

APOCALYPSE GRILLE

(2007-2018 WRANGLER JK)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Grille
- (6) Push Pins
- (8) Metal Clips
- (2) Plastic Vents
- (8) Phillips Screws
- (1) Weather Stripping

TOOLS REQUIRED


Soft Pry Tool Phillips Head Screwdriver Flat Blade Screwdriver





STEP 1

Using a soft pry tool, remove the (6) plastic push pins across the top of the factory grille cover. Then firmly pull the grille cover away from the vehicle. Disconnect the factory turn signal plugs. Slide back the red tab lock, then depress the tab and pull the plug away from the light.

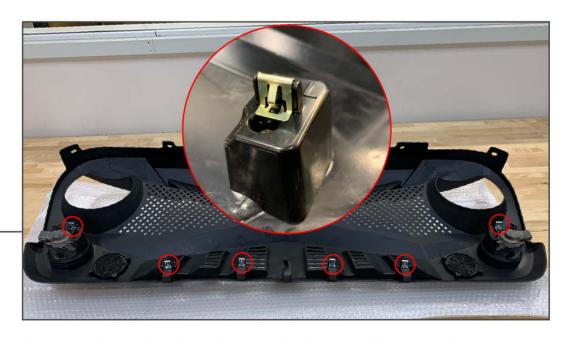

STEP 2

Install the (6) supplied push clips to the clip posts across the bottom of the new grille.





STEP 3

Depress the plastic tabs on the turn signal and push the turn signal out of the factory grille cover. Transfer the removed turn signals into the new grille.



STEP 4

Install the plastic vents on each side of the grille using the supplied Phillips screws.





STEP 5

Install the grille in reverse order. Peel back the tape backing and center the weather stripping on the top of the grille.



STEP 6

Installation is now complete.