



BILLET ALUMINUM HOOD CATCH KIT

(2007-2018 WRANGLER JK)

INSTALLATION INSTRUCTIONS

CONTENTS

- (2) Hood Brackets
- (2) Fender Brackets
- (4) M6x1.0 Allen Bolts
- (4) M6 Lock Nuts
- (2) M8x1.25 Allen Bolts
- (2) M8 Lock Nuts
- (3) Allen Wrenches

TOOLS REQUIRED

- 10, 13mm Socket
- Socket Wrench

SKU # J134447




STEP 1

Using a 10mm socket, remove the (2) nuts securing the hood catch on the vehicle.




STEP 2

Install the new hood catch using the provided M6 Allen bolts and lock nuts. Ensure the rubber isolator is underneath the hood catch when installed.

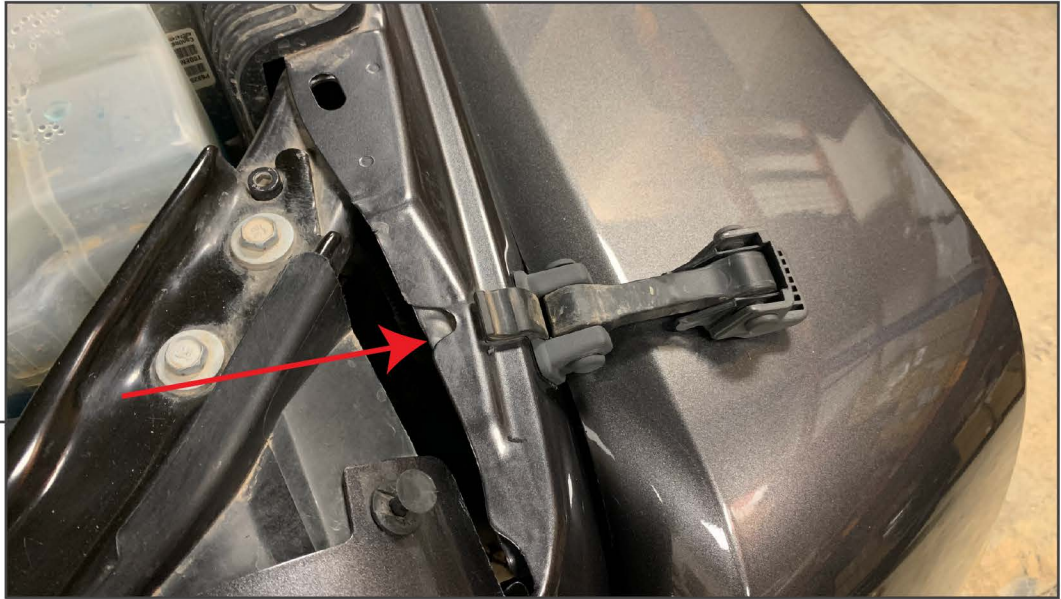

STEP 3

Using a 13mm socket remove the fender mounted hood latch.

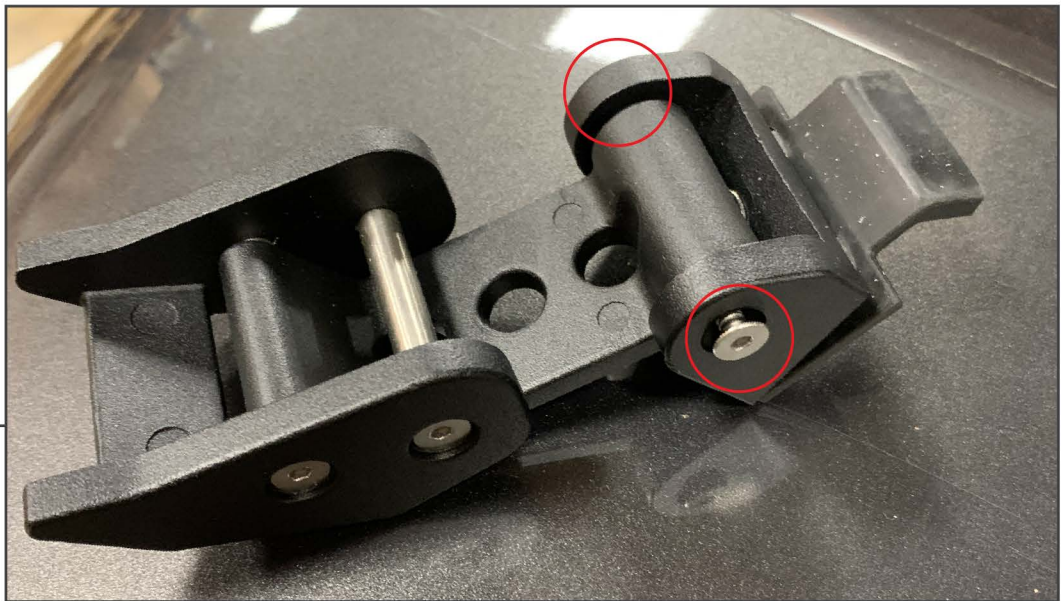

STEP 4

Using the supplied Allen wrench, remove the Allen bolts to access the mounting bolt.

STEP 5



Attach the fender portion of the hood latch using the M8 Allen bolt and lock nut. Reinstall the Allen bolts removed in step 4.

STEP 6



Latch the hood catch as shown. Installation is now complete.